Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Natec /
- > Natec Wireless Keyboard TURBOT with Touchpad for Smart TV, 2.4 GHz, X-Scissors Instruction Manual

Natec NKL-0968

Natec TURBOT Wireless Keyboard with Touchpad (NKL-0968) - Instruction Manual

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Natec TURBOT Wireless Keyboard with Touchpad (model NKL-0968). This device is designed to enhance your experience with Smart TVs, cellphones, and other compatible devices, offering convenient wireless control via 2.4 GHz technology.

Please read this manual thoroughly before using the product to ensure proper functionality and to prevent damage.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Natec TURBOT Wireless Keyboard with Touchpad
- USB 2.4 GHz Receiver
- User Manual (this document)
- (Note: 2 AAA batteries are required and may not be included)

3. SETUP GUIDE

3.1. Battery Installation

The Natec TURBOT keyboard requires two (2) AAA batteries for operation. Locate the battery compartment on the underside of the keyboard. Open the cover, insert the batteries according to the polarity markings (+/-), and close the cover securely.

3.2. Connecting the USB Receiver

The USB 2.4 GHz receiver is typically stored in a dedicated compartment on the keyboard itself for safekeeping. Carefully remove the receiver from its storage slot.



Figure 1: USB receiver stored in the keyboard compartment.

Insert the USB receiver into an available USB port on your Smart TV, computer, or other compatible device. The device should automatically detect and install the necessary drivers.

3.3. Powering On the Keyboard

Locate the power switch on the side of the keyboard. Slide the switch to the "ON" position. The keyboard should now be ready for use.



Figure 2: Power switch on the keyboard.

4. OPERATING INSTRUCTIONS

4.1. Keyboard Functions



Figure 3: Natec TURBOT Wireless Keyboard Layout.

The keyboard features a standard QWERTY layout for typing. It also includes dedicated function keys (F1-F12) which may have secondary multimedia functions (e.g., volume control, media playback). These secondary functions are often accessed by holding down the **Fn** key and pressing the corresponding function key.

- Caps Lock: Toggles uppercase/lowercase letters.
- Shift: Used for uppercase letters and secondary symbols.
- Ctrl / Alt / Win: Standard modifier keys for various shortcuts depending on the operating system.
- **Backlight**: The keyboard features a backlight for improved visibility in low-light conditions. Refer to your device's operating system or the keyboard's specific function key combinations (often involving the **Fn** key) to activate or adjust the backlight.

4.2. Touchpad Functions



Figure 4: Integrated Touchpad.

The integrated touchpad allows for mouse-like navigation. It supports various gestures:

- Single Finger Tap: Functions as a left-click.
- Two Finger Tap: Functions as a right-click.
- Two Finger Scroll: Drag two fingers up or down to scroll through content.

• **Physical Buttons**: Below the touchpad, there are two physical buttons. The left button acts as a left-click, and the right button acts as a right-click.

Touchpad sensitivity and other settings may be adjustable through your connected device's operating system settings.

5. MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to clean the keyboard and touchpad. For stubborn dirt, a slightly damp cloth with mild cleaning solution can be used, ensuring no liquid enters the device.
- Battery Replacement: Replace batteries when the keyboard's performance degrades or it stops responding. Always use fresh AAA batteries.
- **Storage**: When not in use for extended periods, turn off the keyboard to conserve battery life. Store the USB receiver in its designated compartment to prevent loss.
- **Avoid Extreme Conditions**: Do not expose the keyboard to extreme temperatures, direct sunlight, or high humidity.

6. TROUBLESHOOTING

6.1. Keyboard Not Responding

- Ensure the keyboard is powered on.
- · Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- Verify that the USB receiver is securely plugged into a working USB port on your device.
- Try plugging the USB receiver into a different USB port.
- Restart your connected device (Smart TV, computer, etc.).

6.2. Touchpad Not Working

- Ensure the keyboard is powered on and connected.
- Clean the touchpad surface to remove any dirt or obstructions.
- Check your device's settings for any touchpad-related configurations.

6.3. Intermittent Connection

- Ensure there are no large metallic objects or other 2.4 GHz wireless devices causing interference between the keyboard and the USB receiver.
- · Move the keyboard closer to the USB receiver.

7. Specifications

Brand	Natec
Model Number	NKL-0968
Connectivity Technology	2.4 GHz Wireless
Compatible Devices	Smart TV, Cellphone
Operating System Compatibility	Android 10.0 (and compatible systems)
Special Features	Integrated Touchpad, Backlit Keys

Keyboard Description	Multimedia
Color	Black/Silver
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	2 x AAA Batteries

8. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the official Natec website or contact their customer service department. Keep your purchase receipt for warranty claims.

Natec does not provide specific information regarding spare parts availability or software updates beyond the initial purchase.

© 2023 Natec. All rights reserved.

Related Documents - NKL-0968



 
NATEC MORAY Keyboard with Smart ID Card Reader User Manual

User manual for the NATEC MORAY keyboard, detailing specifications, installation, safety, and compliance for this smart ID card reader device.



Natec Lori Full HD Webcam User Manual

User manual for the Natec Lori Full HD webcam, detailing features, installation, specifications, safety information, and general product details.



NATEC ORIOLE Laptop Cooling Pad User Manual

User manual for the NATEC ORIOLE laptop cooling pad, providing installation, warranty, safety, and general information. Learn how to set up and use your cooling pad safely and effectively.



Natec Sparrow Optical Mouse User Manual - Features, Specs, and Safety

Comprehensive user manual for the Natec Sparrow optical mouse (NMY-1186). Learn about its features, installation, specifications, safety guidelines, and warranty information.



Natec Blackbird 2 Wireless Optical Mouse User Manual

User manual for the Natec Blackbird 2 wireless mouse, covering features, installation, system requirements, safety, warranty, and general compliance information. Features a 1600 DPI optical sensor and 10m wireless range.



Natec Euphonie Wireless Optical Mouse User Manual (NMY-1601)

Comprehensive user manual for the Natec Euphonie wireless optical mouse (Model NMY-1601). Learn how to set up, connect via Bluetooth or USB, program buttons, charge the device, and find safety and warranty information.