



[Manuals.plus](#) /

› [TOUCHBeauty](#) /

› TOUCHBeauty TB-1733 Electric Nail Drill Cordless User Manual

## TOUCHBeauty TB-1733

# TOUCHBeauty TB-1733 Electric Nail Drill Cordless User Manual

Model: TB-1733

---

## INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your TOUCHBeauty TB-1733 Electric Nail Drill. This versatile cordless device is designed for professional-grade manicure and pedicure tasks, including filing, buffing, and removing acrylic or gel nails. Please read this manual thoroughly before first use and retain it for future reference.

---

## PRODUCT OVERVIEW

The TOUCHBeauty TB-1733 Electric Nail Drill comes with multiple interchangeable attachments and features for comprehensive nail care.



Figure 1: TOUCHBeauty TB-1733 Electric Nail Drill and its key features.

### Components and Attachments:

- Electric Nail Drill Unit (Model TB-1733)
- 6 Interchangeable Nail Drill Bits
- USB Type-C Charging Cable
- Magnetic Storage Case for attachments
- User Manual

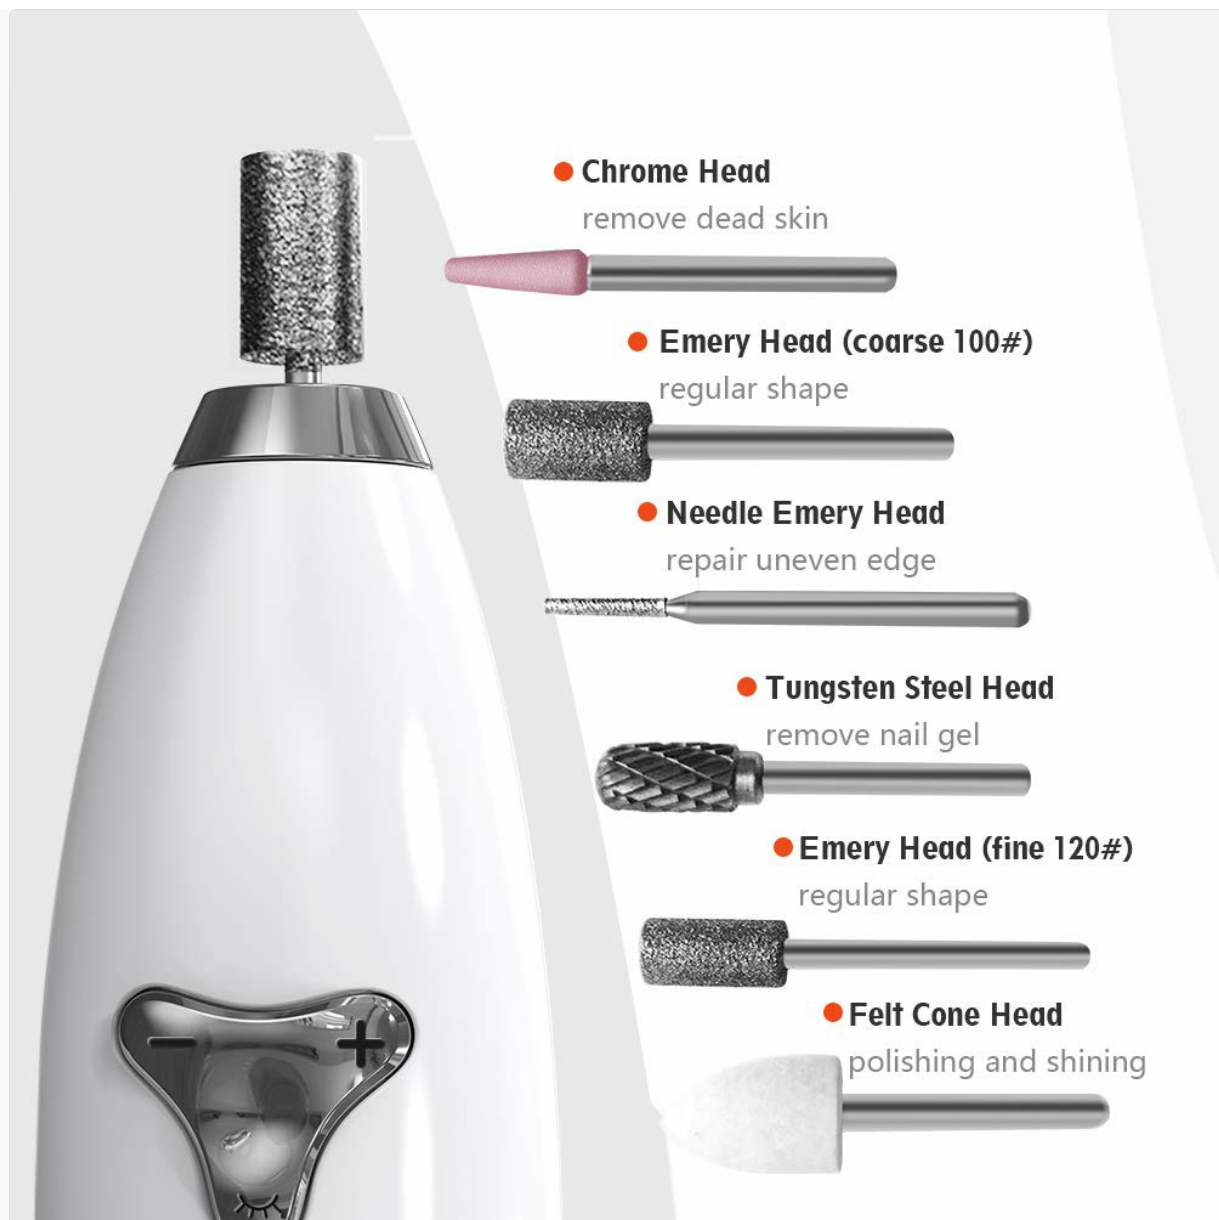


Figure 2: Detailed view of the 6 interchangeable nail drill bits and their functions.

The kit includes various heads for different nail care needs:

- **Chrome Head:** For removing dead skin.
- **Emery Head (Coarse 100#):** For shaping nails.
- **Needle Emery Head:** For repairing uneven edges.
- **Tungsten Steel Head:** Specifically designed for removing nail gel.
- **Emery Head (Fine 120#):** For regular nail shaping and refining.
- **Felt Cone Head:** For polishing and shining nails.

## SETUP

### Charging the Device:

Before first use, fully charge the device. Connect the USB Type-C charging cable to the device and a suitable power source (e.g., USB adapter, computer USB port). The indicator light will show charging status.

### Attaching/Changing Drill Bits:

1. Ensure the device is turned off before changing bits.

2. Select the desired nail drill bit for your task.
3. Gently push the chosen nail bit into the opening at the top of the device until it clicks securely into place.
4. To remove, pull the bit straight out.

Your browser does not support the video tag.

Video 1: Demonstrates how to insert and remove nail drill bits, and basic operation of the TOUCHBeauty Cordless Nail Drill Kit.

## OPERATING INSTRUCTIONS

---

### Power On/Off:

To turn the device on, **long press the power button for 3 seconds**. To turn off, long press the power button again for 3 seconds. Ensure the device is not plugged in when turning it on or off.

### Adjusting Speed:

The device features a progressive 8-speed motor. To adjust the speed, **long press the "+" or "-" buttons** on the device. The speed will increase or decrease accordingly through the 8 levels.

### Changing Rotation Direction:

The nail drill supports both clockwise and anti-clockwise rotation. To change the rotation direction, **press the on/off button briefly** while the device is running. This will toggle between the two directions.

### Using the Drill Bits:

Select the appropriate bit for your desired task (e.g., removing gel, shaping, buffing). Gently apply the rotating bit to the nail surface. Avoid excessive pressure to prevent damage to the nail or skin. Always work in short, controlled motions.

Your browser does not support the video tag.

Video 2: Demonstrates the use of various drill bits for different manicure and pedicure tasks, including gel removal and shaping.

# PROGRESSIVE 8-SPEED CONTROL

A Storage Case For You To Neatly Pack Away  
Or Take With You



Figure 3: Example of using the Tungsten Steel Head for nail gel removal.

## MAINTENANCE

### Cleaning:

- Always ensure the device is turned off and unplugged before cleaning.
- Wipe the main unit with a soft, dry cloth. Do not immerse in water.
- Clean the drill bits after each use. You can use a small brush to remove debris or wipe them with an alcohol-soaked cotton pad. Ensure they are completely dry before storage.

### Storage:

Store the device and its attachments in the provided magnetic storage case in a cool, dry place, away from direct sunlight and out of reach of children.

# MAGNETIC ACCESSORIES STORAGE BOX

A Storage Case For You To Neatly Pack Away  
Or Take With You

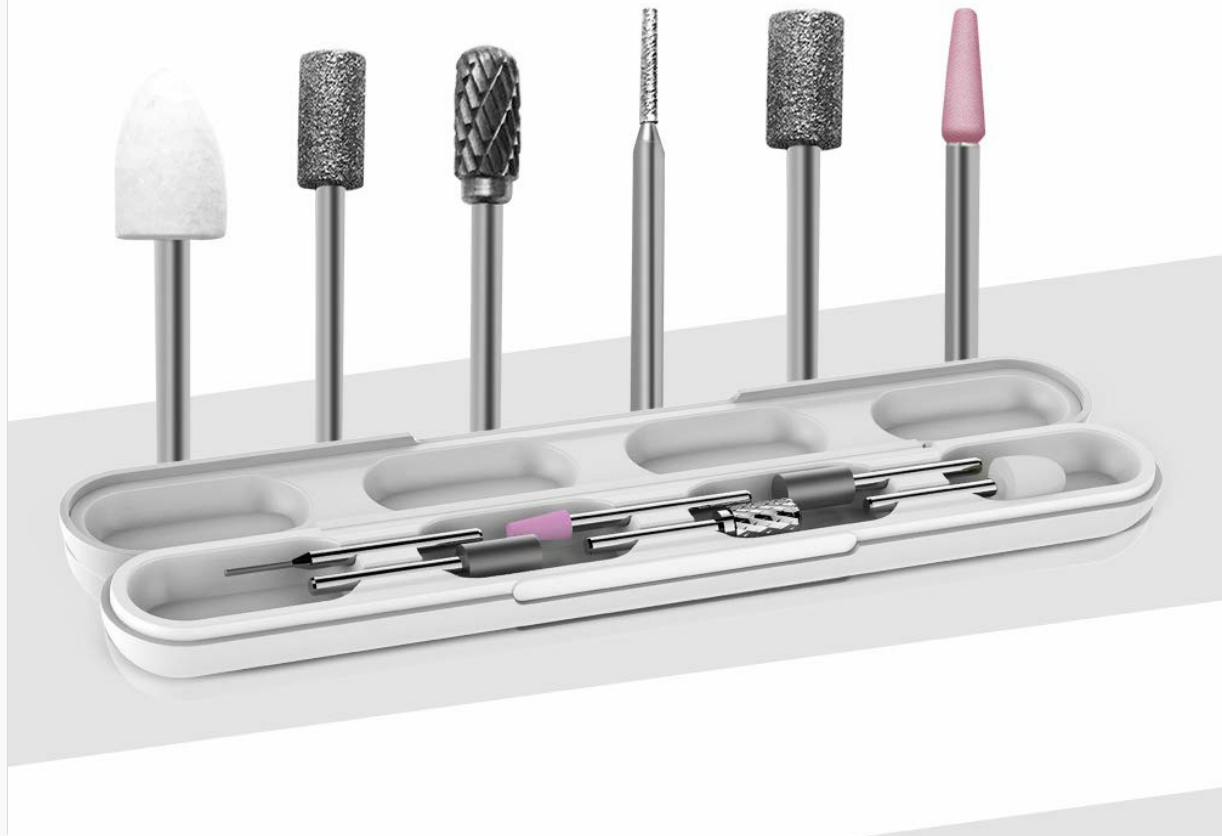


Figure 4: Magnetic storage case for drill bits.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is low or depleted.	Charge the device fully using the provided USB cable.
Device does not turn on.	Power button not pressed correctly.	Ensure you <b>long press the power button for 3 seconds</b> to activate.
Drill bit is loose or falls out.	Bit not inserted correctly.	Push the nail bit firmly into the device until it clicks into place.
Device stops working during use.	Overheating or excessive pressure.	Turn off the device, allow it to cool down. Avoid applying too much pressure during operation.

## SPECIFICATIONS

- **Model Number:** TB-1733

- **Brand:** TOUCHBeauty
- **Power Source:** Battery Powered (Rechargeable Lithium Polymer)
- **Battery:** 1 Lithium Polymer battery required (included)
- **Voltage:** 3.6 Volts
- **Input Power:** 3.6 Watts
- **Product Dimensions:** 1.65 x 1.38 x 6.3 inches (4.19 x 3.51 x 16.0 cm)
- **Item Weight:** 4.69 ounces (133 Grams)
- **Material Type:** Plastic
- **Features:** 8-level speed adjustment, Clockwise & Anti-clockwise rotation

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the official TOUCHBeauty website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

---