

ECONTROLLY RC-865M

ECONTROLLY RC-865M Remote Control Instruction Manual

For Onkyo AV Receivers HT-R391, TX-NR315, TX-NR525, TX-NR737

1. INTRODUCTION

The ECONTROLLY RC-865M is a replacement remote control designed for specific Onkyo AV Receiver models. It provides direct functionality without the need for programming. This manual will guide you through the setup, operation, and maintenance of your new remote control.





Figure 1: ECONTROLLY RC-865M Remote Control Overview

2. SETUP AND BATTERY INSTALLATION

Your RC-865M remote control requires two AAA batteries for operation. No programming is needed; simply install the batteries, and the remote will be ready to use with compatible Onkyo AV Receivers.

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide or lift the cover to open it.
2. **Insert Batteries:** Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. **Close the Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your RC-865M remote control.

3.1 Power and Input Selection

- **RECEIVER Power (Yellow Button):** Turns the Onkyo AV Receiver on or off.
- **ZONE 2:** Activates or deactivates Zone 2 audio output.
- **SOURCE Power (Yellow Button):** Turns the selected source component on or off (if supported).
- **REMOTE MODE/INPUT SELECTOR Buttons (BD/DVD, CBL/SAT, GAME, PC, AUX, AM, FM, TV/CD, NET, USB):** Selects the corresponding input source on the AV Receiver.
- **MODE (CUSTOM, RECEIVER, TV):** Switches the remote's operating mode to control different devices. Use "RECEIVER" for your Onkyo AV Receiver.
- **TV Power (Power Icon):** Turns the television on or off when the remote is in TV mode.
- **TV INPUT:** Changes the input source on the television when the remote is in TV mode.

3.2 Volume and Muting

- **VOL (Up/Down Arrows):** Adjusts the master volume of the AV Receiver.
- **TV VOL (Up/Down Arrows):** Adjusts the volume of the television when the remote is in TV mode.
- **MUTING:** Mutes or unmutes the audio output of the AV Receiver. There are two Muting buttons, both perform the same function.

3.3 Navigation and Menu Controls

- **DISPLAY:** Displays on-screen information or menus.
- **TOP MENU:** Accesses the top menu of the currently selected source.
- **MENU:** Accesses the main menu of the currently selected source.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms a selection or enters a menu.
- **RETURN:** Goes back to the previous screen or menu.
- **SETUP:** Accesses the setup menu of the AV Receiver.
- **AUDIO:** Accesses audio settings.
- **HOME:** Returns to the home screen or main menu.
- **SP/GUIDE PLAYLIST:** Accesses the program guide or playlist functions.
- **PREV CH PLAYLIST:** Selects the previous channel or playlist.
- **Q:** Quick access button (function may vary by receiver model).

3.4 Playback Controls

- **Rewind/Fast Forward (Double Left/Right Arrows):** Skips backward or forward through tracks/chapters.
- **Play (Right Arrow):** Starts playback.
- **Pause (Two Vertical Bars):** Pauses playback.
- **Stop (Square):** Stops playback.
- **SEARCH (MOVIE/TV A):** Initiates search function, often associated with the 'A' button for specific features.
- **REPEAT (MUSIC B):** Repeats playback, often associated with the 'B' button.
- **RANDOM (GAME C):** Enables random playback, often associated with the 'C' button.
- **MODE (STEREO D):** Changes audio mode (e.g., Stereo), often associated with the 'D' button.
- **CH DISC (+/-):** Changes channels or navigates discs.
- **ALBUM (+/-):** Navigates through albums.

3.5 Number Pad and Other Functions

- **Number Buttons (0-9):** Direct input for channels, tracks, or menu selections.
- **--/--- (10):** Used for two-digit or three-digit channel/track entry.
- **+10 (11):** Adds 10 to the current channel or track number.
- **CLR (12):** Clears an entry or cancels an operation.
- **D.TUN:** Direct tuning for radio frequencies.
- **DIMMER:** Adjusts the brightness of the AV Receiver's display.
- **SLEEP:** Sets a sleep timer for the AV Receiver.

4. COMPATIBILITY

The ECONTROLLY RC-865M remote control is compatible with the following Onkyo AV Receiver models and can replace the RC-866M remote:

- Onkyo AV Receiver HT-R391
- Onkyo AV Receiver TX-NR315
- Onkyo AV Receiver TX-NR525
- Onkyo AV Receiver TX-NR737
- Replaces Onkyo Remote Model RC-866M

This remote is a direct replacement and does not require programming for these models. It is not a universal remote and cannot be programmed to control other devices like TVs or Blu-ray players beyond its primary function with the specified Onkyo AV Receivers.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and receiver. Remote is out of range.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity. Remove any obstructions. Ensure you are within a reasonable range and pointing the remote directly at the receiver's IR sensor.
Remote controls the receiver but not my TV or other devices.	The RC-865M is a dedicated replacement remote for specific Onkyo AV Receivers. It is not a universal programmable remote.	This remote is designed to control only the specified Onkyo AV Receivers. It does not have universal programming capabilities for other brands or device types.
Buttons require excessive force to register.	Wear and tear on button contacts.	This may indicate internal wear. If the remote is new, contact the seller for a replacement. For older remotes, consider replacing the unit.

6. SPECIFICATIONS

- **Model:** RC-865M
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Onkyo AV Receivers (HT-R391, TX-NR315, TX-NR525, TX-NR737)

- **Product Dimensions:** Approximately 7 x 2 x 0.65 inches
- **Item Weight:** Approximately 1 ounce (without batteries)
- **Special Feature:** Ergonomic design

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY RC-865M remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty terms and contact details. If you purchased this product from Amazon, you can typically find seller contact information through your order history page.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question