

[Manuals.plus](#) /

> [arungo](#) /

> arungo MP3 Player 32GB with Speaker Earphone Portable HiFi Lossless Sound MP3 Mini Music Player Voice Recorder E-Book HD Screen 1.8 inch Black Support up to 128GB User Manual

arungo MP10

arungo MP3 Player User Manual

Model: MP10

1. PRODUCT OVERVIEW

The arungo MP10 MP3 Player is a versatile and portable device designed for a range of multimedia functions. It offers high-fidelity lossless sound, a clear 1.8-inch HD screen, and includes a 32GB memory card, with support for expansion up to 128GB. Its compact design makes it ideal for various activities, from daily commutes to exercise.



Image: The arungo MP3 Player, showcasing its sleek black design and the included 32GB memory card.

Key Features:

- **Large Storage Capacity:** Includes a 32GB TF card, capable of storing over 5,000 songs and e-books. Supports up to 128GB.
- **Lossless Sound Quality:** Utilizes intelligent digital noise reduction technology for high-quality audio output through both earphones and the built-in speaker.
- **Long Battery Life:** Provides over 10 hours of playback on a single full charge.
- **Multi-functional:** Supports Music, Picture viewing, E-book reading, FM Radio, and HD Recording.
- **Compact and Portable:** Lightweight design for easy carrying in a pocket or armband.

Large Capacity Storage

32GB *Included

32GB TF Card,
stores over 5000 songs and E-books.

128GB *Not included

The memory card is supported max
up to 128GB.



Image: Visual representation of the MP3 player's core functions including Music, Picture, E-book, FM Radio, HD Recording, 32GB Memory Card, and Files.

2. SETUP

2.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB cable to the player's USB port and the other end to a computer's USB port or a compatible USB wall adapter. The battery icon on the screen will turn stable green when fully charged. A full charge typically takes 3-4 hours.

Charging and Transferring Music Files


When the battery icon turns stable in green, it means the battery is fully charged (it may take 3-4 hrs). When transferring the music files into the player, the memory card needs to be inserted into the player firstly.



Image: Illustration of the MP3 player connected to a laptop via USB cable for charging and file transfer, indicating a 3-4 hour charging time.

2.2 Inserting the Memory Card

The 32GB TF card is pre-inserted into the player. If you wish to use a different or larger capacity card (up to 128GB), ensure it is formatted to FAT16/FAT32 file system for optimal compatibility. Insert the Micro SD card into the designated slot until it clicks into place.

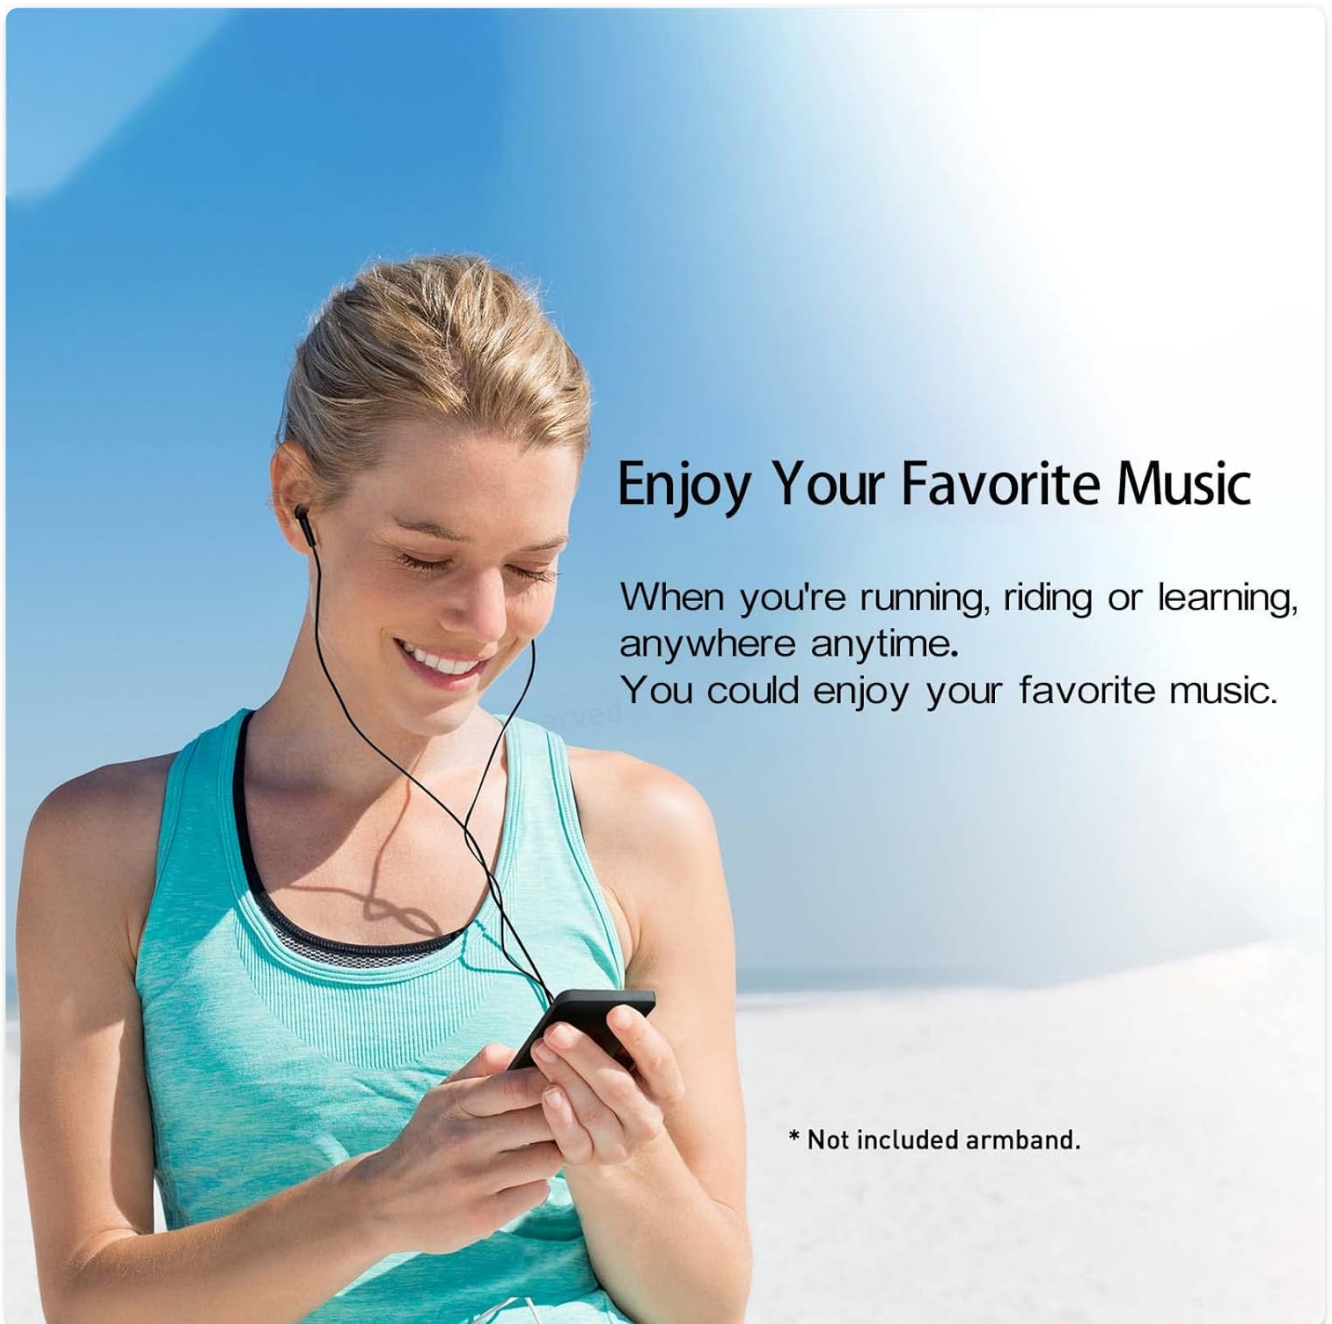

Enjoy Your Favorite Music

When you're running, riding or learning,
anywhere anytime.
You could enjoy your favorite music.

* Not included armband.

Image: Depiction of the MP3 player highlighting its 32GB included storage and support for up to 128GB via a Micro SD card.

2.3 Connecting Earphones

Plug the earphones into the 3.5mm audio jack on the player. Earphones are required for FM Radio functionality.

Buttons Guide:

M: Up/ Menu

*Short press to enter the menu; Long press to return to the main interface.

⏮ : Left/ Previous

*When playing music, Short press to select the previous music file; Long press to rewind the music.

⏸ : Confirm/ Play or Pause

*Long press to turn off or turn on the player.

⏭ : Right/ Next

*When playing music, short press to select the next music file; Long press to fast forward the music.

VOL: Volume/ Down/ Return

*Short press to return to the previous step. Long press to enter the volume adjustment menu, press ⏮ or ⏭ to choose.

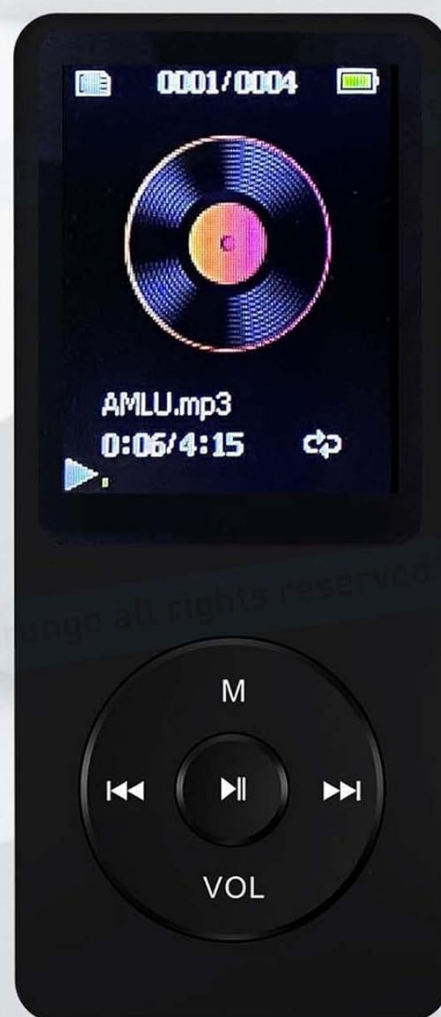


Image: The arungo MP3 Player displayed alongside its included accessories: earphones and a USB charging cable.

3. OPERATING INSTRUCTIONS

3.1 Button Guide

Familiarize yourself with the player's buttons for easy navigation and control:

FM Radio

Adjust the frequency range, choose your liked channel, and enjoy your radio delight.



Tips: This function only can be used when the earphone is connected.

Image: A detailed guide illustrating the function of each button on the arungo MP3 Player.

- **M (Menu/Up):** Short press to enter the menu; Long press to return to the main interface.
- **◀◀ (Left/Previous):** When playing music, short press to select the previous music file; Long press to rewind the music.
- **▶▶ (Confirm/Play/Pause):** Short press to confirm selection or play/pause music; Long press to turn the player on or off.
- **▶▶ (Right/Next):** When playing music, short press to select the next music file; Long press to fast forward the music.
- **VOL (Volume/Down/Return):** Short press to return to the previous step; Long press to enter the volume adjustment menu, then use ◀◀ or ▶▶ to adjust.

3.2 Music Playback

Navigate to the 'Music' option from the main menu. Select a song or folder to begin playback. The player supports

MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, and ACELP formats.

3.3 FM Radio

To use the FM Radio, ensure earphones are connected as they act as the antenna. Navigate to 'FM Radio' from the main menu. You can adjust the frequency range and save up to 30 channels. The frequency range is 87.5MHz~108MHz.



Image: The MP3 player displaying its FM Radio feature, with various frequency points indicated, emphasizing the need for earphones.

3.4 Voice Recorder

Select 'HD Recording' from the menu. Recordings are saved in WAV format. The voice recording range is 5-8 meters.

3.5 E-Book Reader

The player supports TXT format e-books (within 10MB). Navigate to 'E-book' to read your text files.

3.6 Transferring Files

Connect the MP3 player to your computer using the provided USB cable. The player will appear as a removable disk. You can then drag and drop music, picture (JPG/BMP/GIF), video (AVI), and e-book files into the appropriate folders on the player's storage.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Handling:** Handle the device with care to prevent drops or impacts that could damage internal components or the screen.

5. TROUBLESHOOTING

- **Device Not Turning On:** Ensure the battery is charged. Long press the Play/Pause button to power on.
- **Files Not Playing / "Format Error":** Verify that the audio/video/image files are in supported formats (MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/ACELP for audio; JPG/BMP/GIF for pictures; AVI for video; TXT for e-books). Ensure the memory card is properly inserted and formatted to FAT16/FAT32.
- **Computer Not Recognizing Device:** Ensure the USB cable is securely connected to both the player and the computer. Try a different USB port or cable.
- **Random Playback Issues:** If shuffle mode repeats the same sequence, try organizing music into smaller folders or resetting the player.
- **No FM Radio Sound:** Ensure earphones are securely plugged in, as they function as the antenna for the FM radio.
- **Poor Sound Quality:** Check earphone connection. Ensure audio files are not corrupted. Adjust equalizer settings if available.

6. SPECIFICATIONS

Feature	Detail
Model	MP10
Storage Capacity	32GB (included), Max support 128GB
Screen	1.8 Inch TFT LCD Screen
Dimensions	8.99 x 3.91 x 0.71 cm
Weight	68 g
Battery	1 Lithium Polymer battery (included)
Supported Audio Formats	MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/ACELP
Supported Picture Formats	JPG/BMP/GIF
Supported Video Formats	AVI

Supported E-book Format	TXT (Within 10MB)
FM Radio Range	87.5MHz~108MHz
Voice Recording Range	5-8 meters
Connectivity	USB
Special Features	Built-in speaker, A-B Repeat, Support FAT16/FAT32

7. WARRANTY AND SUPPORT

arungo is committed to providing excellent customer service. For any inquiries, technical support, or warranty claims, please refer to the contact information provided with your product packaging or visit the official arungo support website. We offer 24/7 after-sales support to ensure your satisfaction.

