

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool Cook 20 MWP 101 W Microwave Instruction Manual

Whirlpool MWP101W

Whirlpool Cook 20 MWP 101 W Microwave Instruction Manual

Model: MWP101W

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Whirlpool Cook 20 MWP 101 W Microwave. Please read these instructions thoroughly before using the appliance and retain them for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your microwave oven.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the microwave oven if it is damaged or malfunctioning. Contact qualified service personnel for repair.
- Do not attempt to cook whole eggs or sealed containers, as they may explode.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Always use microwave-safe cookware. Metal containers or foil can cause arcing.
- Supervise children closely when the microwave is in use.
- Do not use the microwave for purposes other than heating food.
- Ensure the appliance is properly grounded.
- Regularly clean the microwave interior to prevent grease buildup, which can be a fire hazard.
- Do not operate the microwave without food inside, as this can damage the appliance.

PRODUCT OVERVIEW

The Whirlpool Cook 20 MWP 101 W is a compact and efficient microwave oven designed for everyday heating and cooking tasks. It features a 20-liter capacity and a 700W microwave power output with a 6-stage mechanical control system.

External View



Figure 1: Angled view of the Whirlpool Cook 20 MWP 101 W Microwave, showcasing its white exterior and black door and control panel.



Figure 2: Front view of the Whirlpool Cook 20 MWP 101 W Microwave, highlighting the control knobs and the "COOK 20" branding.

Interior View



Figure 3: Interior view of the microwave oven, showing a dish placed on the glass turntable, ready for heating.

Control Panel

The control panel features two mechanical rotary knobs:

- **Upper Knob:** Power Level Selector (e.g., 100W, 200W, 370W, 500W, 700W, MAX). This knob allows you to select the desired microwave power output.
- **Lower Knob:** Timer Selector (0-30 minutes). This knob sets the cooking duration.

SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the microwave oven from its packaging. Retain packaging materials for future transport or storage if needed.
2. **Placement:** Place the microwave on a flat, stable surface that can support its weight. Ensure there is adequate ventilation space around the appliance (minimum 10 cm at the back, 20 cm at the top, and 5 cm on the sides). Do not block ventilation openings.
3. **Power Connection:** Plug the microwave into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance rating label.
4. **Initial Cleaning:** Before first use, wipe the interior and exterior surfaces with a damp cloth.

OPERATING INSTRUCTIONS

This section details the basic operation of your Whirlpool microwave oven.

Basic Microwave Cooking

1. Place the food in a microwave-safe container on the glass turntable inside the oven.
2. Close the oven door securely.
3. Turn the **Upper Knob** (Power Level Selector) to the desired power setting (e.g., 700W for full power, or a lower setting for defrosting or gentle heating). The microwave offers 6-stage control.
4. Turn the **Lower Knob** (Timer Selector) to set the desired cooking time, up to 30 minutes. The microwave will start operating immediately.
5. When the set time expires, the microwave will automatically stop and a chime will sound.
6. Carefully remove the food. Be aware that the container and food may be hot.

Note: To stop cooking before the timer expires, simply open the oven door or turn the timer knob back to "0".

Power Levels

Power Setting	Approximate Wattage	Recommended Use
Low	100W - 200W	Softening butter, thawing delicate foods.
Medium-Low	370W	Simmering, gentle cooking, defrosting.
Medium	500W	Reheating, cooking denser foods.
High / MAX	700W	Rapid heating, boiling water, cooking most foods.

CLEANING AND MAINTENANCE

Regular cleaning helps maintain the performance and appearance of your microwave oven.

- **Interior:** Wipe the interior surfaces, including the oven cavity, door seal, and turntable, with a damp cloth and mild detergent after each use. For stubborn stains, place a bowl of water with lemon juice inside and heat for a few minutes to loosen residue before wiping.
- **Exterior:** Clean the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.

- **Turntable:** The glass turntable and roller ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are dry before placing them back in the oven.
- **Door:** Keep the door and door seals clean to ensure proper closure.
- **Power Off:** Always unplug the microwave from the power outlet before cleaning.

TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Microwave does not start.	Door not closed properly; power cord unplugged; fuse blown or circuit breaker tripped.	Ensure door is firmly closed; check power cord connection; check household fuse/circuit breaker.
Food is not heating.	Power level set too low; cooking time too short; incorrect cookware used.	Increase power level or cooking time; ensure microwave-safe cookware is used (no metal).
Turntable does not rotate.	Turntable or roller ring not correctly positioned; obstruction.	Reposition turntable and roller ring; remove any obstructions.
Unusual noise during operation.	Turntable or roller ring not correctly positioned; foreign object in cavity.	Check turntable and roller ring placement; inspect cavity for foreign objects.

If the problem persists after attempting these solutions, please contact Whirlpool customer service for assistance.

SPECIFICATIONS

The following table provides detailed technical specifications for the Whirlpool Cook 20 MWP 101 W Microwave.

Feature	Specification
Model Number	MWP101W
Brand	Whirlpool
Capacity	20 Litres
Microwave Power Output	700W
Power Levels	6-stage Mechanical Control
Timer	30-minute Mechanical Timer
Installation Type	Freestanding
Material	Steel
Color	White/Black
Product Dimensions (W x D x H)	Approximately 45.2 cm x 36.5 cm x 26.2 cm
Weight	12 kg
Voltage	2.3E+2 Volts (230V)



Figure 4: Diagram showing the approximate dimensions of the Whirlpool Cook 20 MWP 101 W Microwave: 45.2cm width, 36.5cm depth, and 26.2cm height.

WARRANTY AND SUPPORT

Your Whirlpool Cook 20 MWP 101 W Microwave is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Whirlpool website.

For technical support, service requests, or to purchase genuine spare parts, please contact Whirlpool Customer Service. Contact details can typically be found on the Whirlpool website or in the documentation provided with your appliance.

Whirlpool Official Website: www.whirlpool.com



© 2024 Whirlpool Corporation. All rights reserved.

This manual is for informational purposes only and is subject to change without notice.