

## IKEA B07VS1N4ST

# IKEA EKOLN Waste Bin Instruction Manual

Model: B07VS1N4ST

## PRODUCT OVERVIEW

The IKEA EKOLN Waste Bin is designed for convenient waste disposal in various home environments, including bathrooms and kitchens. Its design features smooth curves and practical functionalities for ease of use and maintenance.

## Key Features

- Soft-closing lid for quiet operation.
- Integrated handle on the back for easy relocation.
- Removable inner bucket simplifies emptying and cleaning.
- Suitable for use in damp areas.



*Image: The IKEA EKOLN Waste Bin in black, featuring a silver-colored lid and a foot pedal.*

## SETUP

Follow these steps to set up your IKEA EKOLN Waste Bin:

1. Unpack the waste bin and ensure all components are present: outer bin, inner bucket, and lid assembly.
2. Place the inner bucket securely inside the outer bin.
3. Position the waste bin in your desired location. The compact design allows placement in various rooms, including bathrooms and kitchens.
4. (Optional) Insert a plastic trash bag into the inner bucket, folding the edges over the rim to secure it.



*Image: The IKEA EKOLN Waste Bin placed in a bathroom next to a sink, demonstrating typical placement.*

## OPERATING INSTRUCTIONS

### Opening the Lid

To open the lid, gently press down on the foot pedal located at the base of the bin. The lid will open smoothly.

### Closing the Lid

Release the foot pedal. The soft-closing mechanism will ensure the lid closes quietly and gently without slamming.

### Emptying the Bin

1. Open the lid using the foot pedal or by hand.
2. Lift the inner bucket out of the main bin using its handle.
3. Dispose of the waste.
4. Place the inner bucket back into the main bin.
5. Close the lid.



*Image: The IKEA EKOLN Waste Bin positioned discreetly next to a toilet, illustrating its compact size.*

## MAINTENANCE AND CARE

### Cleaning the Exterior

Wipe the exterior of the waste bin with a soft cloth dampened in a mild cleaner. Avoid abrasive cleaners or scouring pads, which can damage the finish.

### Cleaning the Inner Bucket

The removable inner bucket can be washed with warm water and a mild detergent. Rinse thoroughly and allow to dry completely before placing it back into the outer bin.

### General Care

- Regularly check the foot pedal mechanism for smooth operation.
- Ensure the lid closes properly to contain odors.
- The bin is designed for damp environments but should not be submerged in water.

## TROUBLESHOOTING

### Lid Does Not Close Softly

Check for any obstructions around the hinge mechanism or the lid's edge. Ensure the inner bucket is correctly seated.

### Foot Pedal Sticks

Inspect the pedal mechanism for debris or damage. Clean any visible dirt. If the issue persists, contact customer support.

Odors Persist

Ensure the inner bucket is clean and dry. Use a fresh trash bag. Consider using odor-absorbing products if necessary.


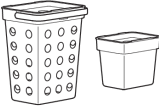

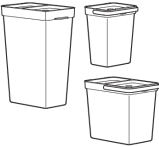
SPECIFICATIONS


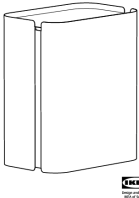
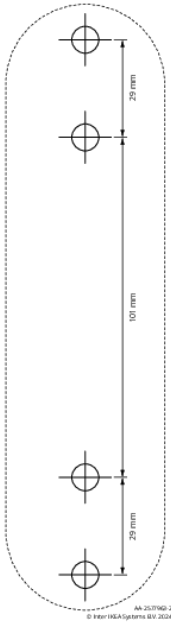

Feature	Detail
Model	EKOLN Waste Bin
ASIN	B07VS1N4ST
Dimensions (L x W x H)	5.91 x 3.94 x 1.97 inches
Weight	1.32 Pounds
Capacity	0.58 Liters
Color	Black
Material	Plastic
Opening Mechanism	Step-On
Special Feature	Soft-Closing Lid, Removable Inner Bucket, Handle
Recommended Use	Bathroom, Home, Kitchen

WARRANTY AND SUPPORT

Specific warranty information for the IKEA EKOLN Waste Bin is not provided in the product details. Please refer to your purchase receipt or contact IKEA customer service for warranty details and support.

Related Documents - B07VS1N4ST

<div><p><b>HÅLLBAR</b></p></div>	<p><a href="#">IKEA HÅLLBAR Bin with Lid Assembly Instructions</a></p> <p>Step-by-step assembly guide for the IKEA HÅLLBAR bin with lid, detailing how to attach the lid and components using provided diagrams and text.</p>
<div><p><b>HÅLLBAR</b></p></div>	<p><a href="#">IKEA HÅLLBAR Bin with Lid Assembly Instructions</a></p> <p>A concise guide to assembling the IKEA HÅLLBAR bin with lid, detailing component attachment and usage.</p>

<div data-bbox="134 100 268 145" data-label="Section-Header"><h2>SNÄPP</h2></div> <div data-bbox="140 152 295 353" data-label="Image"></div>	<div data-bbox="341 174 884 206" data-label="Section-Header"><h3><a href="#">SNÄPP Pedal Bin Assembly Instructions - IKEA</a></h3></div> <div data-bbox="341 217 1393 286" data-label="Text"><p>Step-by-step assembly guide for the IKEA SNÄPP pedal bin, including part identification and assembly actions.</p></div>
<div data-bbox="134 418 274 454" data-label="Section-Header"><h2>FLORSJÖN</h2></div> <div data-bbox="143 470 282 667" data-label="Image"></div>	<div data-bbox="341 492 940 521" data-label="Section-Header"><h3><a href="#">FLORSJÖN Waste Bin Assembly Instructions   IKEA</a></h3></div> <div data-bbox="341 533 1433 602" data-label="Text"><p>Step-by-step guide to assembling the IKEA FLORSJÖN waste bin. Learn how to mount and use your new waste bin with clear instructions and tips.</p></div>
<div data-bbox="129 736 300 1357" data-label="Image"></div>	<div data-bbox="341 978 983 1008" data-label="Section-Header"><h3><a href="#">FLORSJÖN Waste Bin Dimensions and Mounting Guide</a></h3></div> <div data-bbox="341 1019 1466 1088" data-label="Text"><p>Detailed dimensions and mounting point specifications for the IKEA FLORSJÖN waste bin (models 606.048.65, 206.048.67), essential for assembly and installation.</p></div>
<div data-bbox="118 1429 309 1485" data-label="Image"></div>	<div data-bbox="341 1406 978 1435" data-label="Section-Header"><h3><a href="#">IKEA Product Recycling and Waste Disposal Guidelines</a></h3></div> <div data-bbox="341 1447 1457 1516" data-label="Text"><p>Learn how to properly dispose of IKEA products marked with the crossed-out wheeled bin symbol, ensuring environmental protection and compliance with local recycling regulations.</p></div>