

[Manuals.plus](#) /

› [Travelwey](#) /

› Travelwey Digital Alarm Clock User Manual

Travelwey B07VS4NPQ7

Travelwey Digital Alarm Clock

USER MANUAL

Introduction

Thank you for purchasing the Travelwey Digital Alarm Clock. This clock is designed for simplicity and ease of use, featuring a large, clear LED display with adjustable brightness, dual USB charging ports, and a reliable alarm with snooze function. This manual provides detailed instructions to help you set up and operate your new alarm clock effectively.



Image: Front view of the Travelwey Digital Alarm Clock, displaying the time 17:25 in bright orange LED digits on a mirrored surface. The clock has a sleek, white casing.

Safety Information

- Ensure the power adapter is connected to a suitable 230V AC outlet.
- Do not expose the device to water or excessive humidity.
- Avoid placing the clock in direct sunlight or near heat sources.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep out of reach of children.

Product Overview

Familiarize yourself with the various parts and controls of your Travelwey Digital Alarm Clock.



Image: Top view of the alarm clock, highlighting the control buttons: SNOOZE, ALARM, HOUR, and MIN. A dimmer wheel is visible on the right side.

Controls and Ports:

SNOOZE Button: Activates snooze function when alarm sounds.

ALARM Button: Used to set and activate/deactivate the alarm.

HOUR Button: Adjusts the hour for time and alarm settings.

MIN Button: Adjusts the minute for time and alarm settings.

Dimmer Wheel: Adjusts the brightness of the LED display.

DC 5V Input: Power input port.

USB Charging Ports (x2): For charging external devices.

Battery Compartment: For backup batteries.



Image: Rear view of the alarm clock, showing the DC 5V power input, two USB charging ports, and the cover for the battery backup compartment.

Setup

1. **Power Connection:** Insert the power cord into the DC 5V input port on the back of the clock, then plug the 2-pin plug into a 230V AC wall outlet. The display will light up.
2. **Battery Backup Installation:** Open the battery compartment cover on the back of the clock. Insert three AAA batteries (not included), ensuring correct polarity (+/-). These batteries maintain time and alarm settings during a power outage, though the display will be off to conserve power. The alarm will still sound during a power outage if activated.
3. **Initial Time Setting:** Upon first power-on, the time may need to be set. Proceed to the "Operating Instructions" section for detailed steps.

Operating Instructions

Setting the Time:

1. Press and hold the **HOURL** button to enter time setting mode for hours. The hour digits will flash.
2. While the hour digits are flashing, press the **HOURL** button repeatedly to advance the hour.
3. Press and hold the **MIN** button to enter time setting mode for minutes. The minute digits will flash.
4. While the minute digits are flashing, press the **MIN** button repeatedly to advance the minute.
5. To switch between 12-hour and 24-hour format, briefly press the **ALARM** button during time setting.
6. Release the buttons for a few seconds to exit time setting mode. The time will be saved automatically.

Setting the Alarm:

1. Press and hold the **ALARM** button to enter alarm setting mode. The alarm hour digits will flash.
2. Press the **HOURL** button repeatedly to set the desired alarm hour.
3. Press the **MIN** button repeatedly to set the desired alarm minute.
4. Release the **ALARM** button for a few seconds to exit alarm setting mode. The alarm time will be saved.
5. To activate or deactivate the alarm, briefly press the **ALARM** button. An alarm icon will appear on the display when activated.

Snooze Function:

When the alarm sounds, press the large **SNOOZE** button on top of the clock. The alarm will pause for 5 minutes and then sound again. You can press the snooze button continuously until the alarm is manually turned off.

Adjusting Display Brightness (Dimmer):

The clock features a dimmer slider on the side to adjust the brightness of the LED display. Slide the dimmer wheel up or down to achieve your preferred brightness level, from extra bright to very dim, suitable for nighttime use without being intrusive.



Image: Diagram illustrating the dimmer function, showing how the display brightness changes from bright to dim as the slider is adjusted.

Using USB Charging Ports:

The clock is equipped with two USB charging ports on the back, allowing you to charge your smartphone, tablet, or other USB-powered devices (USB cable not included). Simply plug your device's USB cable into one of the ports. These ports are active when the clock is connected to AC power.



Image: The Travelway Digital Alarm Clock with a smartphone connected to one of its rear USB charging ports, demonstrating the charging capability.

Maintenance

- **Cleaning:** To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If the clock experiences frequent power outages or if the backup function seems unreliable, replace the three AAA backup batteries. Ensure the clock is connected to AC power before replacing batteries to avoid losing time settings.

Troubleshooting

Problem	Possible Cause / Solution
Display is blank.	◦ Ensure the power cord is securely plugged into the clock and the wall outlet. ◦ Check if the wall outlet has power. ◦ If running on battery backup during a power outage, the display is intentionally off to conserve power.

Problem	Possible Cause / Solution
Alarm does not sound.	◦ Verify that the alarm is activated (check for the alarm icon on the display). ◦ Ensure the alarm time is set correctly.
USB charging ports are not working.	◦ Confirm the clock is connected to AC power. USB charging does not work on battery backup. ◦ Check the USB cable for damage. ◦ Ensure the device you are trying to charge is compatible and not fully charged.
Time is incorrect after power outage.	◦ The backup batteries may be depleted. Replace the three AAA batteries.

Specifications

Feature	Detail
Product Dimensions	17 x 4 x 6 cm (approx. 6.7 x 1.6 x 2.4 inches)
Item Weight	250 Grams (approx. 0.55 lbs)
Power Source	Corded Electric (AC 230V)
Battery Backup	3 x AAA batteries (not included)
Display Type	Digital LED
Special Features	Alarm, Snooze, Dimmable Display, Dual USB Charging Ports, 12/24 Hour Format
Color	White
Model Number (ASIN)	B07VS4NPQ7

Warranty and Support

Travelwey offers a money-back guarantee for this product. For any questions, technical support, or warranty claims, please refer to the contact information provided with your purchase or visit the official Travelwey website. Please retain your proof of purchase for warranty purposes.