

MaBe LMA72215CBAB0

Mabe LMA72215CBAB0 Aqua-Saver Automatic Washing Machine

Model: LMA72215CBAB0

WELCOME TO YOUR NEW MABE WASHING MACHINE

Thank you for choosing the Mabe LMA72215CBAB0 Aqua-Saver Automatic Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before using the washing machine and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
- Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.

- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before attempting any service.
- Ensure the washing machine is properly grounded.

PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your Mabe washing machine.



Figure 1: Front view of the Mabe LMA72215CBAB0 Aqua-Saver Automatic Washing Machine, showing the top-loading design and control panel.



Figure 2: Detailed view of the control panel, featuring knobs for spin level, temperature, automatic programs, water level, and options. Indicators for delayed start, wash, rinse, spin, and lid lock are also visible.



Figure 3: Product dimensions, indicating a height of 111.63 cm, depth of 67.79 cm, and width of 68 cm.

INSTALLATION AND SETUP

Proper installation is crucial for the performance and longevity of your washing machine. Follow these steps carefully.

1. Unpacking

- Remove all packaging materials, including the base packaging and any internal packing.
- Inspect the washing machine for any shipping damage. Report any damage immediately to your retailer.

2. Location Requirements

- Place the washing machine on a solid, level floor. Uneven surfaces can cause vibration and noise.
- Ensure there is adequate space around the machine for air circulation and maintenance.
- Avoid direct sunlight or extreme temperatures. Do not install in areas where water may freeze.
- The location must have access to hot and cold water supply, a drain, and a grounded electrical outlet.

3. Connecting Water Hoses

- Connect the hot water supply hose to the hot water inlet (marked 'H' or red) and the cold water supply hose to the cold water inlet (marked 'C' or blue) at the back of the machine.
- Connect the other ends of the hoses to your household hot and cold water faucets.
- Tighten all connections securely by hand, then use pliers to tighten an additional two-thirds of a turn. Do not overtighten.
- Turn on the water supply and check for leaks.

4. Drain Hose Installation

- Insert the drain hose into a standpipe or laundry tub. Ensure the hose is securely fastened to prevent it from coming out during the wash cycle.
- The top of the standpipe or laundry tub should be between 60 cm (24 inches) and 90 cm (36 inches) from the floor.
- Do not seal the drain hose into the standpipe; an air gap is necessary to prevent siphoning.

5. Leveling the Washing Machine

- Use a spirit level to check if the machine is perfectly level from front to back and side to side.
- Adjust the leveling feet at the bottom of the machine by turning them clockwise to lower or counter-clockwise to raise.
- Once level, tighten the lock nuts on the leveling feet against the machine cabinet to secure them.

6. Electrical Connection

- Plug the power cord into a grounded 127V/60Hz electrical outlet.
- Do not use an extension cord or adapter.
- Ensure the electrical circuit is protected by a fuse or circuit breaker of appropriate rating.

OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Mabe washing machine.

1. Control Panel Overview

The control panel (refer to Figure 2) features several knobs and indicators:

- **Nivel Centrifugado (Spin Level):** Adjusts the spin speed (4 automatic levels).
- **Temperatura (Temperature):** Selects water temperature (6 levels: Hot, Warm, Cold).
- **Programas Automáticos (Automatic Programs):** Choose from 11 pre-set cycles.

- **Nivel de Agua (Water Level):** Sets the water level (5 automatic load sizes).
- **Opciones (Options):** Additional functions like delayed start, hypoallergenic rinse, intensive wash.
- **Inicio/Pausa (Start/Pause) Button:** To start or pause a cycle.
- **Tapa Asegurada (Lid Secured) Indicator:** Illuminates when the lid is locked during operation.

2. Loading Laundry

- Sort laundry by fabric type, color, and soil level.
- Open the lid and place items loosely into the wash basket. Do not overload the machine. The 22 kg capacity refers to dry laundry weight.
- Close the lid securely.

3. Adding Detergent and Fabric Softener

- Add the recommended amount of detergent directly into the wash basket or the designated dispenser.
- Pour fabric softener into the dispenser located in the agitator.
- The machine also has a dispenser for brighteners on the lid.

4. Selecting a Wash Cycle

Turn the "Programas Automáticos" knob to select one of the 11 available cycles:

- Self-clean (with alarm)
- Baby Clothes
- Sportswear
- Quick Cycle (20 minutes)
- Whites
- Colors
- Jeans
- Bulky Items
- Delicates
- Bedding
- Towels

Adjust Spin Level, Temperature, and Water Level according to your laundry needs using their respective knobs.

5. Starting a Wash Cycle

- Once all settings are selected, press the "Inicio/Pausa" button to start the cycle.
- The lid will lock, and the "Tapa Asegurada" indicator will illuminate.
- To pause a cycle, press the "Inicio/Pausa" button again. Press it once more to resume.

6. Special Features

- **Aqua Saver Green Technology:** This feature optimizes water usage for efficient and eco-friendly washing.
- **Express Wash:** A quick 20-minute cycle for lightly soiled items.

- **Delayed Start:** Use the "Opciones" knob to set a delayed start for 5 or 10 hours.
- **Hypoallergenic Rinse:** An additional rinse cycle for sensitive skin.
- **Intensive Wash:** For heavily soiled items requiring a more thorough cleaning.

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the life of your washing machine.

1. Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth and mild soap.
- Do not use abrasive cleaners, scouring pads, or flammable substances.

2. Cleaning the Dispenser

- Periodically remove and clean the detergent and fabric softener dispensers to prevent residue buildup.
- Rinse them under warm water and dry thoroughly before reinserting.

3. Care During Non-Use

- If the machine will not be used for an extended period, turn off the water supply and unplug the power cord.
- Leave the lid slightly ajar to allow air circulation and prevent odors.

TROUBLESHOOTING

Before calling for service, check the following common issues and their solutions.

Problem	Possible Cause	Solution
Washing machine does not start.	Power cord unplugged; Lid not closed properly; Circuit breaker tripped.	Ensure power cord is securely plugged in; Close the lid completely; Reset the circuit breaker.
Machine does not fill with water.	Water supply faucets are off; Water inlet hoses are kinked; Water pressure is too low.	Turn on water supply faucets; Straighten hoses; Check household water pressure.
Machine does not drain or spin.	Drain hose is kinked or clogged; Load is unbalanced; Lid is open.	Check and clear drain hose; Redistribute laundry evenly; Close the lid.
Excessive vibration or noise.	Machine is not level; Shipping bolts not removed; Load is unbalanced.	Level the machine using the adjustable feet; Ensure all shipping bolts are removed; Redistribute laundry.

SPECIFICATIONS

Detailed technical specifications for the Mabe LMA72215CBAB0 Aqua-Saver Automatic Washing Machine.

Feature	Specification
Brand	MaBe
Model Number	LMA72215CBAB0
Capacity	22 Kilograms
Product Dimensions (L x W x H)	67.8 x 68 x 111.63 cm
Item Weight	58 Kilograms
Color	White
Material	Stainless Steel
Installation Type	Freestanding
Maximum Spin Speed	800 RPM
Number of Standard Programs	11
Special Features	Built-in heater, Aqua Saver Green Technology, Express Wash
Power Supply	127V/60Hz

WARRANTY AND SUPPORT

For technical assistance, warranty information, or to schedule service, please contact Mabe customer support.

When making your purchase, call us to schedule the service you require.

Phone: 461 471 7000

WhatsApp: 55 41635939

Please have your model number (LMA72215CBAB0) and purchase date ready when contacting support.



**Instala, repara y
da mantenimiento
a tus productos con
Servicio mabe**

Al hacer tu compra, llámanos para
programar el servicio que requieras.
Teléfono: 461 471 7000.
WhatsApp: 55 41635939

servicio mabe

Te queda Bien

Figure 4: Mabe Service contact details for installation, repair, and maintenance.