

[manuals.plus](#) /› [EARISE](#) /› [EARISE T35 Portable Bluetooth PA System User Manual](#)

EARISE T35

EARISE T35 Portable Bluetooth PA System User Manual

Model: T35 | Brand: EARISE

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your EARISE T35 Portable Bluetooth PA System. Please read this manual thoroughly before using the device and retain it for future reference.

The EARISE T35 is a versatile audio system designed for various applications, including music playback, public address, and karaoke. It features Bluetooth connectivity, USB and TF card playback, FM radio, and includes a wireless microphone and remote control.

WHAT'S IN THE Box

Verify that all items listed below are included in your package:

- PA Speaker (EARISE T35)
- Wireless Microphone (Requires 2 AA Batteries, not included)
- Remote Controller (Requires 2 AAA Batteries, not included)
- 5V USB Charging Cable
- User Manual (This document)



Image: EARISE T35 Portable Bluetooth PA System, showing the main speaker unit, wireless microphone, and remote control.

PRODUCT FEATURES

- **Bluetooth Streaming:** Connect wirelessly to your devices. The Bluetooth name for pairing is "EARISE.T35".
- **Auto-play Music:** Play music directly from a USB flash drive.
- **Front Panel Button Control Center:** Easy access to all functions.
- **1/4" Microphone Input:** For connecting wired microphones.
- **Aux (3.5mm) Input:** For connecting external audio sources.
- **Built-in Rechargeable Battery:** Provides portable power.
- **FM Radio:** Enjoy your favorite radio stations.
- **Remote Control:** Convenient operation from a distance.

EARISE**Compatible with
Bluetooth 4.2****Wireless microphone
included****Auto-play music from your
USB drive when plugin****Remote controller
included**

Image: Overview of EARISE T35 features, highlighting wireless microphone, Bluetooth 4.2, USB auto-play, and remote control.

SETUP

1. Initial Charging

Before first use, fully charge the PA system using the provided 5V USB charging cable. Connect the cable to the USB charging port on the device and a compatible USB power adapter (not included).

2. Wireless Microphone Setup

1. Open the battery compartment of the wireless microphone and insert two AA batteries (not included), ensuring correct polarity.
2. Turn on the microphone using its power switch.
3. Turn on the EARISE T35 PA system.
4. Adjust the MIC volume knob on the PA system to your desired level.

Your browser does not support the video tag.

Video: Demonstrates how to connect the wireless microphone to the EARISE T35 PA system, including battery installation and volume adjustment.

3. Remote Controller Setup

Open the battery compartment of the remote controller and insert two AAA batteries (not included), ensuring correct polarity.

4. Bluetooth Connection

1. Turn on the EARISE T35 PA system.
2. Ensure the PA system is in Bluetooth mode. If not, press the 'MODE' button until "Bluetooth" or a similar indicator appears on the display.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select "EARISE.T35" from the list to pair. A confirmation sound will indicate successful pairing.
5. If connection fails, ensure no other device is currently paired. Press and hold the 'MODE' button on the PA system for 3 seconds to unpair any previously connected device, then attempt to pair again.



Image: Visual representation of a smartphone connecting to the EARISE T35 via Bluetooth.

Your browser does not support the video tag.

Video: Step-by-step guide on how to connect a Bluetooth device to the EARISE T35, including troubleshooting for connection issues.

OPERATING INSTRUCTIONS



Image: Close-up view of the EARISE T35 control panel, indicating the function of each button and knob.

Control Panel Overview

- **ON/OFF Master Volume:** Power on/off the unit and adjust overall volume.
- **Aux In:** 3.5mm input for external audio devices.
- **MIC In:** 1/4" input for wired microphones.
- **MIC Volume:** Adjusts the volume of the connected microphone.

- **Mode:** Cycles through input modes (Bluetooth, FM, USB, TF, Aux). Press and hold to unpair Bluetooth.
- **Rep/Light:** Repeat function for media playback / Light control.
- **Previous:** Skips to the previous track or station.
- **Play/Pause:** Plays or pauses current media.
- **Next:** Skips to the next track or station.
- **USB Input:** For USB flash drives.
- **TF Card:** For TF (MicroSD) cards.
- **USB Charging Port:** For charging the PA system.

Using Bluetooth Audio

After successfully pairing your device (refer to "Bluetooth Connection" in the Setup section), you can play audio wirelessly from your smartphone or other Bluetooth-enabled device. Use the Play/Pause, Previous, and Next buttons on the PA system or your connected device to control playback.

USB/TF Card Playback

Insert a USB flash drive or TF card containing MP3 audio files into the respective port. The system will automatically switch to USB/TF mode and begin playing. Use the Play/Pause, Previous, and Next buttons to control playback. The 'Rep' button can be used for repeat functions.

Using the Microphone

Ensure the wireless microphone is powered on or a wired microphone is connected to the 1/4" MIC In port. Adjust the MIC Volume knob to control the microphone's output level. The microphone can be used simultaneously with music playback for karaoke or public address.

Your browser does not support the video tag.

Video: Demonstrates the EARISE T35 in use with a wireless microphone, showcasing its portability and sound output for events like karaoke.

FM Radio

Press the 'MODE' button to switch to FM radio mode. Use the Previous and Next buttons to scan for and select radio stations.

Auxiliary Input

Connect an external audio device (e.g., MP3 player, laptop) to the 3.5mm Aux In port using a standard audio cable (not included). The system will automatically switch to Aux mode. Control playback from your connected device.

MAINTENANCE

- Keep the device dry. Do not expose it to moisture or extreme temperatures.
- Clean the exterior with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the device in a cool, dry place when not in use.
- Avoid dropping or subjecting the device to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the PA system using the provided USB cable.

Problem	Possible Cause	Solution
No sound	Volume is too low; incorrect input mode; device not connected properly.	Increase master volume and MIC volume; press 'MODE' to select correct input; ensure Bluetooth is paired or cables are securely connected.
Bluetooth pairing fails	PA system is already paired with another device; Bluetooth is off on mobile device.	Press and hold 'MODE' button for 3 seconds to unpair previous device; ensure Bluetooth is enabled on your mobile device.
Microphone not working	Microphone batteries are dead or inserted incorrectly; MIC volume is too low.	Replace AA batteries in the wireless microphone; check battery polarity; increase MIC volume.

SPECIFICATIONS

- RMS Power:** 12W
- Sound System:** 5.25" Loudspeaker
- Frequency Response:** 90Hz-20kHz
- Signal-to-Noise Ratio (S/N):** >60dB
- Rechargeable Battery:** 3600mAh, 3.7V Lithium
- Power Input:** 5V USB Charging Cable
- Speaker Dimensions (L x W x H):** 22.5 cm (8.86 inch) x 14 cm (5.51 inch) x 34 cm (13.39 inch)
- Item Weight:** 1.88 Kilograms (4.14 pounds)
- Connectivity Technology:** Bluetooth, USB, Aux
- Compatible Devices:** Smartphone
- Mounting Type:** Tabletop

EARISE

Product Dimension



Image: EARISE T35 PA system with its physical dimensions clearly marked.

WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries, please contact EARISE customer support.

Email: support@earise.com