

[Manuals.plus](#) /

> [Skullcandy](#) /

> Skullcandy Method Active Wireless In-Ear Earbuds User Manual

Skullcandy S2NCW-M448

Skullcandy Method Active Wireless In-Ear Earbuds User Manual

Model: S2NCW-M448

INTRODUCTION

Welcome to the user manual for your Skullcandy Method Active Wireless In-Ear Earbuds. These earbuds are engineered for fitness enthusiasts, offering reliable audio performance with water-resistant durability and wireless freedom. They are ideal companions for intense workouts and active lifestyles, providing comfort and stability during movement.





Image: Skullcandy Method Active Wireless In-Ear Earbuds in black, highlighting the design with the inline remote and cable management.

Your browser does not support the video tag.

Video: An official overview of the Skullcandy Method Active Wireless Earbuds, showcasing their features and design.

PACKAGE CONTENTS

Your Skullcandy Method Active Wireless Earbuds package should contain the following items:

- Skullcandy Method Active Wireless In-Ear Earbuds
- Charging Cable (USB)
- User Manual (this document)
- Various sizes of ear tips for a comfortable fit

- Ear hooks for secure placement
- Carrying Pouch



Image: All included accessories with the Skullcandy Method Active Wireless Earbuds, showing the earbuds, USB charging cable, multiple sizes of ear tips, ear hooks, and a mesh carrying pouch.

SETUP

1. Charging Your Earbuds

Before first use, ensure your earbuds are fully charged. A full charge provides approximately 10 hours of battery life.

1. Locate the charging port on the inline remote control.
2. Connect the provided USB charging cable to the charging port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, wall adapter).
4. The LED indicator light on the remote will illuminate to show charging status. Refer to the LED indicator section for specific light patterns.
5. Once fully charged, disconnect the charging cable.

2. Pairing with a Bluetooth Device

The Skullcandy Method Active Earbuds use Bluetooth 5.0 for stable wireless connectivity.

1. Ensure your earbuds are powered off.
2. Press and hold the main power button on the inline remote for approximately 5-7 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, laptop, etc.), go to the Bluetooth settings.
4. Turn on Bluetooth.
5. Search for available devices. You should see "Method Active" or a similar name appear in the list.
6. Select "Method Active" to connect.
7. Once successfully paired, the LED indicator on the earbuds will flash blue intermittently, and you will hear an audible confirmation.
8. Your earbuds are now ready for use.

OPERATING YOUR EARBUDS

Inline Remote Controls

The inline remote provides convenient control over your music and calls.





Image: Detailed view of the inline remote with volume up (+), multi-function (center), and volume down (-) buttons.

Remote Control Functions

Button	Action	Function
Center Button	Press and Hold (3-5s)	Power On/Off
Center Button	Single Press	Play/Pause Music, Answer/End Call

Button	Action	Function
Center Button	Double Press	Next Track
Center Button	Triple Press	Previous Track
Center Button	Press and Hold (2s during call)	Reject Call
Volume Up (+)	Single Press	Increase Volume
Volume Down (-)	Single Press	Decrease Volume

Wearing the Earbuds

For optimal sound quality and secure fit, ensure you select the correct ear tips and ear hooks. The earbuds are designed to be lightweight and comfortable for extended wear.



Image: A person demonstrating the proper fit of the Skullcandy Method Active Earbuds, highlighting the secure placement with ear hooks.

- Experiment with different ear tip sizes to find the best seal for your ear canal. A good seal enhances bass response and noise isolation.
- Position the ear hooks to rest comfortably and securely within the concha of your ear.
- The earbuds feature magnetic backs, allowing them to clasp together around your neck when not in use, preventing loss.



*INCLUDED CONTENTS (BLACK COLORWAY SHOWN)

Image: The magnetic feature of the earbuds, allowing them to connect and be worn securely around the neck.

MAINTENANCE

Proper care will extend the life and performance of your Skullcandy Method Active Earbuds.

Cleaning

- Regularly clean the ear tips and earbud nozzles to prevent wax buildup, which can affect sound quality.
- Remove the silicone ear tips and wash them with mild soap and water. Rinse thoroughly and allow them to dry completely before reattaching.
- Gently wipe the earbud nozzles and the rest of the earbuds with a soft, dry, lint-free cloth.
- Do not use harsh chemicals or abrasive materials for cleaning.

Storage

- When not in use, store your earbuds in the provided carrying pouch to protect them from dust, dirt, and damage.
- Avoid exposing the earbuds to extreme temperatures (hot or cold) or direct sunlight for prolonged periods.

TROUBLESHOOTING

If you encounter any issues with your earbuds, try the following solutions:

Common Issues and Solutions

Problem	Possible Cause	Solution
Earbuds won't turn on	Low battery	Charge the earbuds fully.
Cannot pair with device	Earbuds not in pairing mode; Bluetooth off on device; previously paired device interfering	Ensure earbuds are in pairing mode (flashing red/blue). Turn Bluetooth off and on again on your device. Forget "Method Active" from your device's Bluetooth list and re-pair.
No sound or low volume	Volume too low; ear tips not sealed; earbud nozzles blocked	Increase volume on earbuds and device. Adjust ear tips for a proper seal. Clean earbud nozzles.
Intermittent connection	Too far from device; interference	Move closer to your paired device. Avoid strong Wi-Fi signals or other Bluetooth devices that may cause interference.

SPECIFICATIONS

Technical Specifications

Feature	Detail
Model Name	Method Active
Model Number	S2NCW-M448
Connectivity Technology	Bluetooth 5.0
Ear Placement	In Ear
Water Resistance Level	Waterproof
Battery Life	Up to 10 Hours
Item Weight	0.6 ounces (approx. 17 grams)
Product Dimensions	7.32 x 4.33 x 1.22 inches
Frequency Range	Approximately 20 Hz - 20,000 Hz
Control Type	Media Control (Inline Remote)
Material	Plastic

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Skullcandy website or the warranty document included with your purchase. You can also find additional support and FAQs on their support pages.

A PDF version of the warranty document is available [here](#).



© 2024 Skullcandy. All rights reserved.