

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VOMELON](#) /

› [VOMELON Rechargeable Milk Frother User Manual](#)

## VOMELON MFB1501D

# VOMELON Rechargeable Milk Frother

Model: MFB1501D

Your guide to perfect frothed beverages.

## INTRODUCTION

Thank you for choosing the VOMELON Rechargeable Milk Frother. This portable and powerful device is designed to create rich, creamy foam for your coffee, latte, cappuccino, matcha, hot chocolate, and other beverages. Its ergonomic design, two-speed operation, and rechargeable battery make it an ideal companion for both home and travel use.

## What's Included

Your VOMELON Milk Frother package includes the following components:

- 1 x Rechargeable Milk Frother Unit
- 2 x Whisks (one single-loop, one double-loop)
- 1 x USB Charging Cable
- 1 x Stainless Steel Storage Tube
- 1 x User Manual (this document)
- 1 x 12-Month Service Card



## Package includes :

- 2 x whisk
- 1 x warranty card
- 1 x user manual
- 1 x milk frother
- 1 x USB cable
- 1 x stainless steel storage tube

Image: All components included in the VOMELON Milk Frother package.

## PRODUCT COMPONENTS

Familiarize yourself with the main parts of your VOMELON Milk Frother:

- **Main Unit:** Contains the motor, rechargeable battery, and control button.
- **Detachable Whisk Head:** Made from food-grade 304 stainless steel, easily attaches and detaches for cleaning and storage.
- **USB Charging Outlet:** Located on the main unit for convenient recharging.
- **Adjustable 2-Speed Button:** Controls the frothing speed.

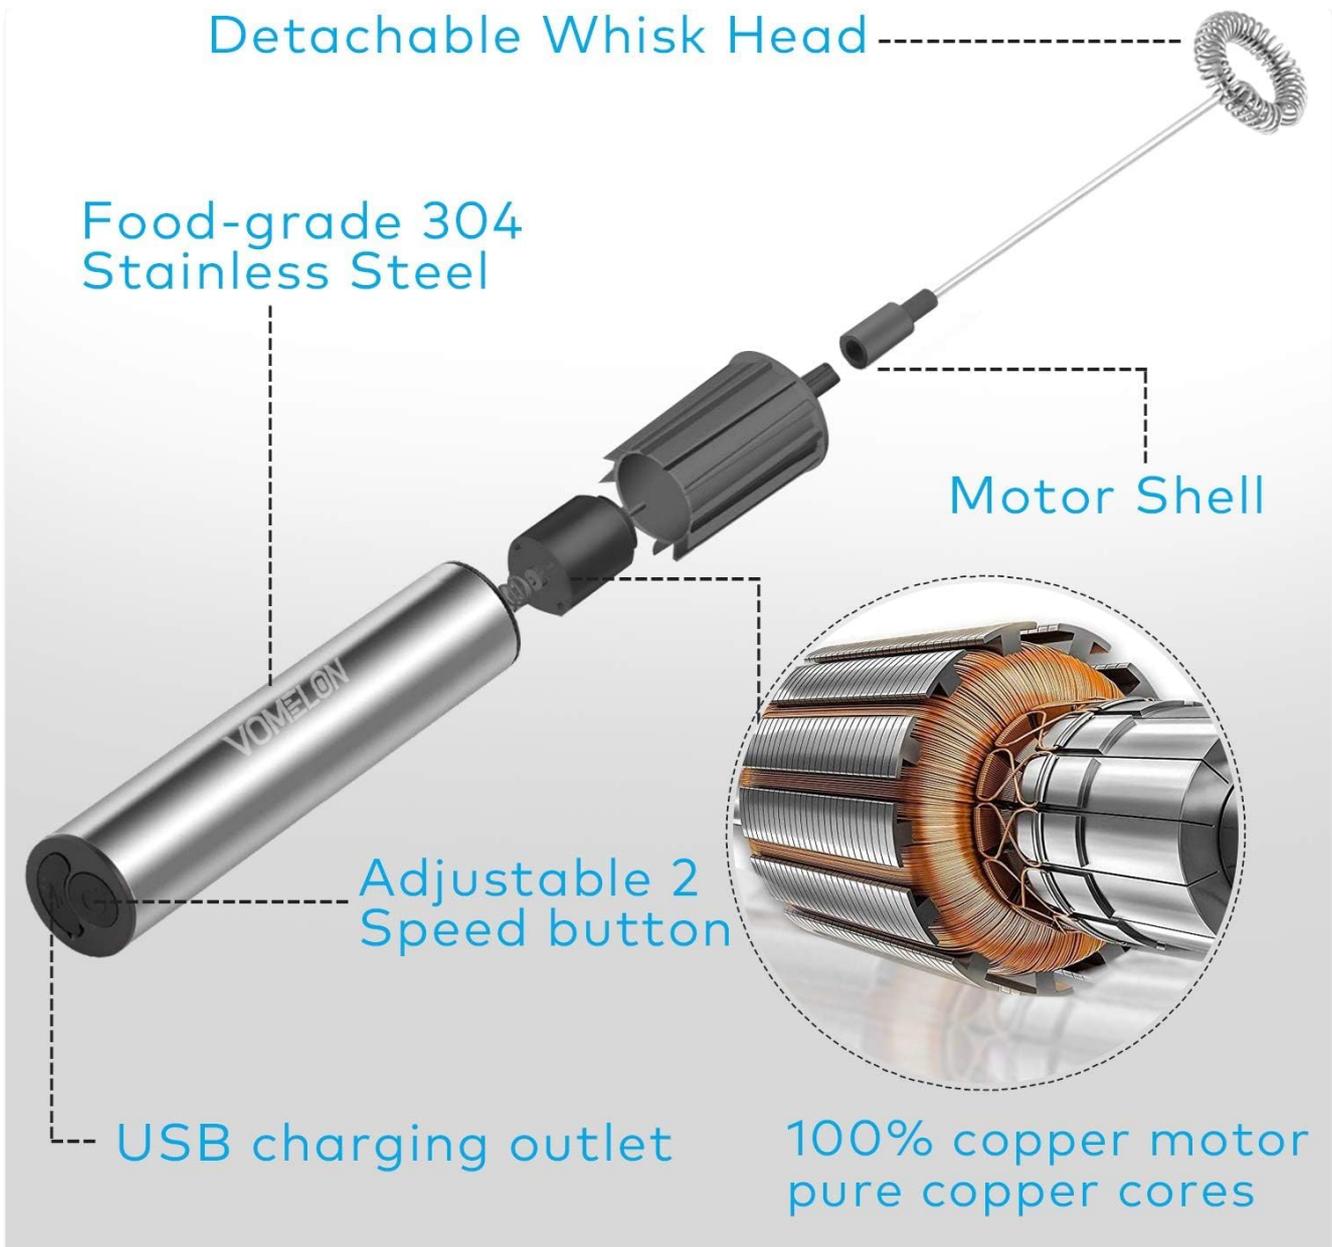


Image: Detailed breakdown of the frother's components, highlighting the whisk, motor, and charging port.

## SETUP AND CHARGING

### Initial Charging

Before first use, fully charge your VOMELON Milk Frother. The built-in lithium-ion battery provides long-lasting power and eliminates the need for frequent battery replacement.

1. Connect the small end of the provided USB charging cable to the USB charging outlet on the frother unit.
2. Connect the larger end of the USB cable to a USB power source (e.g., computer USB port, USB wall adapter, power bank).
3. The indicator light will show red during charging and turn green when fully charged.
4. A full charge typically takes approximately 1.5 hours and can last for up to 30 uses.

# BUIL-IN RECHARGEABLE LITHIUM-ION BATTERY

## No need to replace AAA batteries now



**Fast Charge:**  
Ready in 1.5 Hours



**Lasts up to 30 Uses**  
per charge

①



②



③



Image: Steps for charging the frother using the included USB cable.

## Attaching the Whisk

Select the desired whisk (single or double loop) and firmly insert it into the frother's motor shell until it clicks into place.

## OPERATING INSTRUCTIONS

The VOMELON Milk Frother features a smart one-touch button operation with two speed settings for versatile use.

### Basic Operation

1. Prepare your beverage in a tall cup or container. For best frothing results with milk, ensure it is heated.
2. Immerse the whisk head into the liquid you wish to froth or mix.
3. Press the power button once to activate the frother at the lower speed (approximately 11,000 RPM).
4. Press the power button a second time to switch to the higher speed (approximately 13,000 RPM) for faster and denser foam.
5. Press the power button a third time to turn the frother off.

## Applications

This versatile frother can be used for a variety of applications:

- **Milk Frothing:** Create creamy foam for lattes, cappuccinos, and hot chocolate.
- **Matcha Tea:** Whisk matcha powder into a smooth, lump-free tea.
- **Eggs:** Quickly beat eggs for omelets or scrambled eggs.
- **Protein Shakes:** Mix protein powder into liquids for a smooth consistency.
- **Other Beverages:** Ideal for mixing various hot and cold drinks.



Image: Examples of how the frother can be used for different ingredients and beverages.



*Use triple whisk to mix eggs.  
The whisk is also made of sturdy,  
thick 18/8 stainless steel.*

*Triple whisk makes more foams.  
Enjoy your Latte with VOMELON milk frother.*

Image: The frother with a triple whisk, demonstrating its effectiveness for eggs and milk frothing.

## CARE AND MAINTENANCE

Proper cleaning and care will ensure the longevity and optimal performance of your VOMELON Milk Frother.

### Cleaning

- After each use, detach the whisk head from the main unit.
- Rinse the whisk head directly under running water.
- The whisk head is also dishwasher safe for convenient cleaning.
- Do **NOT** immerse the main frother unit (handle with motor and battery) in water. Wipe it clean with a damp cloth if necessary.



**Simply rinse the whisks head or wash the whisk head in the dishwasher**

Image: Instructions for cleaning the whisk head by rinsing or using a dishwasher.

## Storage

Use the provided stainless steel storage tube to protect the whisk and frother unit when not in use or during travel. This helps prevent bending or damage to the whisk.

## TROUBLESHOOTING

If you encounter issues with your VOMELON Milk Frother, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not turn on or stops working.	Battery is depleted.	Charge the frother fully using the provided USB cable. Ensure the indicator light turns green when charging is complete.

Problem	Possible Cause	Solution
Frother runs slowly or with reduced power.	Low battery charge.	Recharge the frother.
Whisk wobbles or detaches during use.	Whisk not properly attached.	Ensure the whisk is firmly inserted into the motor shell until it clicks into place.
Liquid overflows during frothing.	Cup is too full or frother is set to too high a speed for the liquid volume.	Use a taller cup or fill your cup halfway, froth, then add more liquid. Start on the lower speed setting.
Frother does not charge.	Faulty USB cable or power source; internal battery issue.	Try a different USB cable and a different USB power source. If the issue persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	VOMELON
Model Number	MFB1501D
Color	Silver
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel (304 Food-Grade)
Power Source	Rechargeable Battery Powered (Lithium Ion)
Speeds	2 (approx. 11,000 RPM and 13,000 RPM)
Item Weight	8.1 ounces
Package Dimensions	9.13 x 4.49 x 1.73 inches
Special Features	Ergonomic Handle, Rechargeable, Detachable Whisks
Product Care Instructions	Dishwasher Safe (Whisk Head Only)

## WARRANTY AND SUPPORT

### Warranty Information

Your VOMELON Milk Frother comes with a 12-month service warranty from the date of purchase. Please refer to the included service card for specific terms and conditions. Keep your proof of purchase for warranty claims.

### Customer Support

For any questions, concerns, or technical assistance not covered in this manual, please contact VOMELON customer support. You can typically find contact information on the product packaging, the included service card, or by visiting the official VOMELON website or the retailer's support page where you purchased the product. When contacting support, please have your product model number (MFB1501D) and purchase details ready to expedite assistance.

