

DELTA WDMT-1030

DELTA 10'x30' WDMT PE Wedding Party Tent Instruction Manual

Model: WDMT-1030

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your DELTA 10'x30' WDMT PE Wedding Party Tent. This tent is designed for temporary outdoor events, offering shelter and protection. Please read all instructions carefully before assembly and use to ensure safety and proper function.

2. SAFETY INFORMATION

Adhere to the following safety guidelines to prevent injury or damage:

- **Weather Conditions:** Do not use the tent in severe weather conditions, including strong winds, heavy rain, or snow. High winds can cause the tent to collapse or become airborne, leading to serious injury or property damage.
- **Anchoring:** Always ensure the tent is securely anchored to the ground using all provided ropes and stakes. Insufficient anchoring can lead to instability.
- **Fire Hazard:** Keep all open flames, heaters, and heat-producing equipment away from the tent fabric. The tent material is not fireproof.
- **Temporary Structure:** This tent is intended for temporary use only. It is not designed as a permanent structure.
- **Assembly:** Adult assembly is required. Keep children and pets away from the assembly area to prevent accidents.
- **Site Selection:** Choose a level, clear area free from overhead obstructions (like power lines or tree branches) and sharp objects on the ground.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts

are missing or damaged, contact customer support.

- Galvanized Steel Poles (various lengths for roof and legs)
- Metal Connectors (for joining poles)
- PE Roof Cover (Polyethylene, water resistant)
- PE Sidewalls (with windows, removable)
- Ropes and Stakes (for anchoring)
- Carry Bags (1 included for transport and storage)



Image 1: The DELTA 10'x30' WDMT PE Wedding Party Tent shown with its included carry bag.

4. SETUP INSTRUCTIONS

It is recommended that at least two people assist with the assembly of this tent. Follow these steps carefully for proper and safe installation.

1. **Prepare the Area:** Choose a flat, clear area for assembly. Unpack all components and lay them out, identifying each part.
2. **Assemble the Roof Frame:** Begin by connecting the shorter galvanized steel poles with the metal connectors to form the rectangular top frame of the tent. Ensure all connections are secure.
3. **Attach Roof Cover:** Carefully drape the PE roof cover over the assembled roof frame. Align the corners and edges. Secure the cover to the frame temporarily as per the design (e.g., with bungee balls or ties).
4. **Assemble Leg Poles:** Attach the longer leg poles to the connectors on the roof frame. Do not fully raise the tent yet.
5. **Raise the Frame:** With the help of another person, carefully lift the frame. Insert the remaining leg poles into their respective connectors, ensuring the tent stands upright.
6. **Secure All Connections:** Double-check all pole connections and ensure they are fully inserted and stable.

7. **Attach Sidewalls:** Fasten the PE sidewalls to the tent frame. The sidewalls feature windows and are designed to be removable, allowing for flexible configurations.
8. **Anchor the Tent:** Use the provided ropes and stakes to securely anchor each leg and corner of the tent to the ground. Proper anchoring is critical for stability and safety, especially in light wind conditions.



Image 2: The tent fully assembled on a grassy area, showcasing its side profile.



Image 3: A front view of the assembled tent, showing the entrance and windowed sidewalls.



Image 4: Detail of the galvanized steel frame and metal connectors, illustrating a secure joint.

5. OPERATING INSTRUCTIONS

To maximize the utility and lifespan of your tent:

- **Sidewall Configuration:** The sidewalls are removable. You can attach or remove them as needed to adjust ventilation, privacy, or protection from elements.
- **Weather Monitoring:** Always monitor weather forecasts. If strong winds or heavy precipitation are expected, disassemble the tent to prevent damage.
- **Ventilation:** Ensure adequate ventilation, especially if using the tent in warm weather or with many occupants.

6. MAINTENANCE

Proper maintenance will extend the life of your tent:

- **Cleaning:** Clean the tent fabric (roof and sidewalls) with mild soap and water. Do not use harsh detergents or abrasive cleaners, as these can damage the material. Rinse thoroughly and allow to air dry completely.
- **Drying:** Ensure all fabric components are completely dry before folding and storing to prevent mildew and mold growth.
- **Frame Care:** Inspect the galvanized steel frame for any signs of rust or damage. Clean any dirt or debris from the poles and connectors.
- **Storage:** Store the disassembled tent in its carry bags in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Refer to these common issues and solutions:

- **Tent Instability:** Ensure all pole connections are fully engaged and tight. Verify that all anchoring ropes and stakes are properly secured to the ground.
- **Water Pooling on Roof:** Check that the roof cover is taut and evenly stretched over the frame. Adjust tension if necessary to allow water to run off.
- **Missing or Damaged Parts:** If you discover missing or damaged components upon unpacking, do not attempt to assemble the tent. Contact customer support for assistance.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	DELTA
Model	WDMT-1030
Product Dimensions	360"L x 120"W x 106.8"H (10'x30')
Material	Polyethylene (PE) - Water Resistant
Frame Material	Alloy Steel (Galvanized Steel)
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	True
Item Weight	106 pounds
Assembly Required	Yes

9. CUSTOMER SUPPORT


For assistance with parts, assembly, or any other inquiries regarding your DELTA 10'x30' WDMT PE Wedding Party Tent, please contact DELTA customer support. Refer to the seller's contact information or the product listing for specific support details.

This product is typically eligible for a 30-day return policy. Please consult your purchase documentation for specific terms and conditions.



[Party Tent Assembly Instructions - PT-1030-8-WHITE](#)

Detailed assembly instructions and parts list for the PaylessHere PT-1030-8-WHITE Party Tent. Learn how to build your outdoor gazebo canopy.

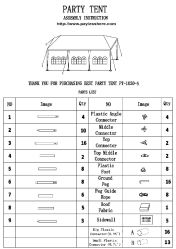

[Best Party Tent PT-1030-5 Assembly Instructions](#)

Assembly instructions for the Best Party Tent PT-1030-5, including a parts list and step-by-step visual guides for setting up the tent.



[Tuff Stuff Overland Delta Roof Top Tent Owner's Manual & Installation Guide](#)

A comprehensive guide for installing, using, and maintaining your Tuff Stuff Overland Delta Roof Top Tent. Includes setup instructions, orientation options, parts list, and warranty information.



[Delta Children Teepee Assembly Instructions \(Model TP202\)](#)

Step-by-step assembly guide for the Delta Children Teepee (Model TP202). Includes safety warnings, part identification, assembly steps, and care tips for this children's play tent.



[Tuff Stuff Delta Overland Rooftop Tent Owner's Manual and Installation Guide](#)

Comprehensive owner's manual and installation guide for the Tuff Stuff Delta Overland Rooftop Tent, covering setup, mounting, orientation, maintenance, and warranty information.



[Nordlux Delta Wall Outdoor Lamp Installation and Maintenance Guide](#)

This guide provides comprehensive instructions for installing, maintaining, and understanding the warranty for Nordlux Delta Wall outdoor lamps. It covers safety precautions, material care for various finishes, and proper disposal procedures.