

[Manuals.plus](#) /

› [LITBLOOM](#) /

› LITBLOOM Lighted Brown Willow Branches (Model B07VVJRZNB) Instruction Manual

LITBLOOM B07VVJRZNB

LITBLOOM Lighted Brown Willow Branches (Model B07VVJRZNB) Instruction Manual

INTRODUCTION

Thank you for choosing LITBLOOM Lighted Brown Willow Branches. These decorative branches feature 100 warm white LED lights, designed to add a soft, ambient glow to your indoor or outdoor spaces. With a convenient timer function and battery operation, they offer flexible placement and ease of use. Please read this manual carefully before setup and operation to ensure safe and optimal performance.



Image: LITBLOOM Lighted Brown Willow Branches, 32 inches tall, with 100 warm white LED lights, arranged in a vase.

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the product to rain or snow directly for extended periods. While rated IP44 for water resistance, direct heavy exposure should be avoided.
- Keep away from flammable materials.
- Do not allow children to play on or near the display.
- Always turn off and unplug the display when not in use or during inclement weather.
- Ensure batteries are inserted correctly according to polarity markings.

- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not used for a long period.

PACKAGE CONTENTS

Your package should contain the following items:

- LITBLOOM Lighted Willow Branches (Quantity: 1 set, typically includes multiple branches bundled together)
- Battery Box with Timer Function

Note: Vase and 3 AA batteries are NOT included.

SETUP INSTRUCTIONS

1. **Unpack the Branches:** Carefully remove the lighted willow branches from their packaging. The branches are designed with a knock-down structure and are flexible, allowing for easy shaping.
2. **Insert Batteries:** Locate the battery box. Open the battery compartment and insert 3 AA batteries (not included), ensuring correct polarity (+/-). Close the compartment securely.



Image: The battery box with clearly marked Timer, ON, and OFF settings. Requires 3 AA batteries.

3. **Arrange the Branches:** Place the branches into a vase or desired container. Gently bend and shape the flexible branches to achieve your preferred artistic arrangement. The branches are strong yet pliable, allowing for various display options.



Image: A set of lighted brown willow branches arranged in a clear vase, showcasing their flexibility and warm LED lights.

OPERATING INSTRUCTIONS

The battery box features a 3-way switch for operation:

- **ON:** Slide the switch to the "ON" position to keep the lights continuously illuminated.
- **OFF:** Slide the switch to the "OFF" position to turn the lights off.
- **TIMER:** Slide the switch to the "TIMER" position to activate the built-in 24-hour timer. The lights will stay on for 6 hours, then automatically turn off for 18 hours, and repeat the cycle daily.

For optimal battery life, utilize the timer function.

MAINTENANCE

- **Cleaning:** Gently wipe the branches with a soft, dry cloth to remove dust. Do not use liquid cleaners or immerse the product in water.
- **Storage:** When not in use, especially during off-seasons, remove the batteries from the battery box. Store the

branches in a cool, dry place away from direct sunlight and extreme temperatures.

- **Bulb Replacement:** The LED bulbs are non-replaceable. The product is designed for a long lifespan of approximately 30,000 hours.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or inserted incorrectly. Switch is in the "OFF" position. Timer function is active and lights are in the "off" cycle.	Replace with fresh 3 AA batteries, ensuring correct polarity. Slide the switch to "ON" or "TIMER". Wait for the timer cycle to turn lights back on, or switch to "ON".
Lights are dim.	Batteries are low.	Replace with fresh 3 AA batteries.
Branches do not hold shape.	Branches may need more careful shaping.	Gently bend and adjust the internal wires of the branches until the desired shape is achieved.

SPECIFICATIONS

- **Brand:** LITBLOOM
- **Model:** B07VVJRZNB
- **Product Type:** Lighted Willow Branches
- **Color:** Brown
- **Height:** 32 inches
- **Number of LEDs:** 100
- **Light Color:** Warm White
- **Power Source:** 3 AA Batteries (not included)
- **Timer Function:** 6 hours ON / 18 hours OFF (24-hour cycle)
- **Material:** Plastic
- **Indoor/Outdoor Usage:** IP44 Waterproof for Indoor and Outdoor Use
- **Bulb Type:** LED (non-replaceable)
- **Lifespan:** Approximately 30,000 hours
- **Certifications:** CE, ROHS

WARRANTY AND SUPPORT

LITBLOOM products are manufactured with quality and safety in mind, holding CE and ROHS certifications. While specific warranty periods may vary by retailer, LITBLOOM is committed to customer satisfaction. For any questions, concerns, or support needs regarding your Lighted Willow Branches, please contact the retailer where you purchased the product or visit the official LITBLOOM website for further assistance.

Manufacturer: Hairui Decor Lights

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question