

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [goopow](#) /

› [Goopow H11 Kids Digital Camera User Manual](#)

goopow H11

Goopow H11 Kids Digital Camera User Manual

Model: H11 | Brand: Goopow

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation of your Goopow H11 Kids Digital Camera. Please read this manual thoroughly before using the product and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Goopow H11 Kids Digital Camera (with soft silicone cover)
- USB Charging Cable
- 32GB Micro SD Card
- Lanyard
- User Manual



Image: Goopow H11 Kids Digital Camera, 32GB SD card, USB cable, and lanyard.

3. PRODUCT OVERVIEW

The Goopow H11 is a compact digital camera designed for children, featuring a durable soft silicone cover. It supports photo capture, video recording, playback, and includes built-in games.



Compact Size



Phone

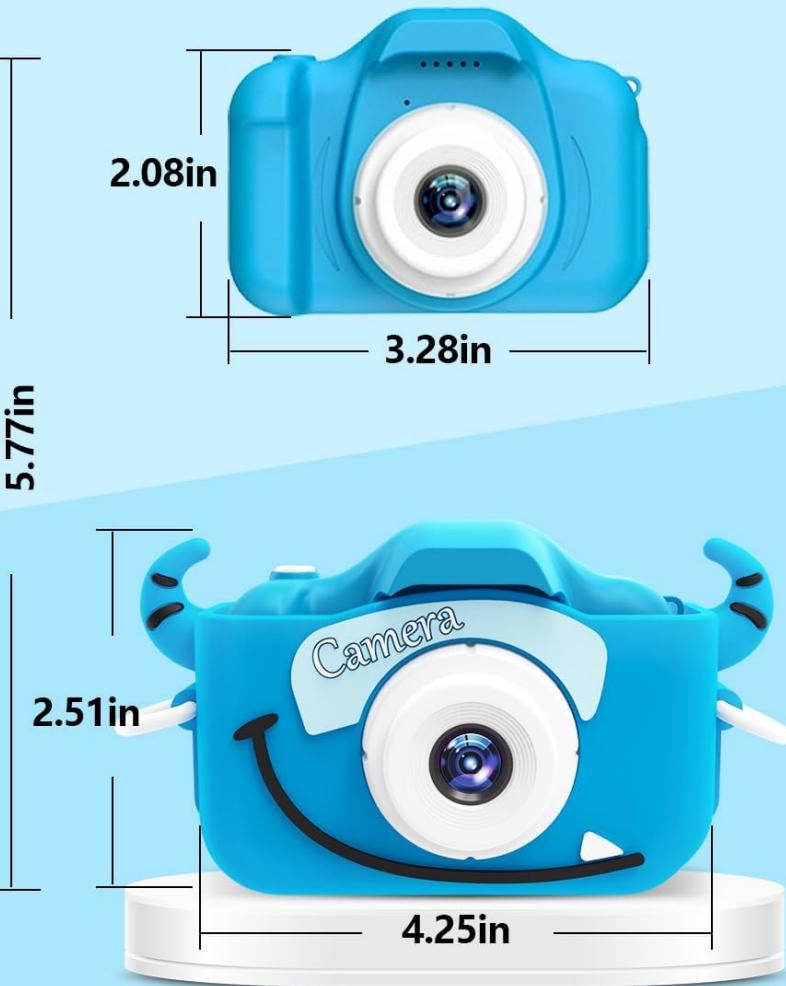


Image: Dimensions of the Goopow H11 Kids Digital Camera, highlighting its compact size.

Key Features:

- **2.0" LCD Screen:** For viewing photos and videos.
- **1080P Video Recording:** Capture clear video moments.
- **8X Digital Zoom:** For capturing distant subjects.
- **Selfie Mode:** Front-facing camera for self-portraits.
- **Multiple Functions:** Photo capture, video recording, playback, games, time-lapse, and various scene selections/frames.
- **Durable Silicone Cover:** Provides protection against drops and bumps.
- **Built-in Rechargeable Battery:** 3.7V Lithium battery, USB rechargeable.
- **32GB SD Card Included:** Ample storage for photos and videos.

Your browser does not support the video tag.

Video: A promotional video showcasing the Goopow Kids Camera, highlighting its design, various colors, and features like selfie mode, digital zoom, and fun filters.

4. SETUP

4.1. Charging the Camera

Before first use, fully charge the camera. Connect the provided USB charging cable to the camera's charging port and a compatible USB power adapter (not included) or computer USB port. The charging indicator light will illuminate during charging and turn off when fully charged.

Important: Use a charger with an output of no more than 1A. Avoid fast chargers, as they can damage the battery. Charging should be supervised by an adult.

4.2. Inserting/Removing the SD Card

The camera comes with a 32GB Micro SD card pre-installed. If you need to remove or insert the card:

1. Gently lift the silicone cover to expose the SD card slot.
2. To insert, push the Micro SD card into the slot until it clicks into place.
3. To remove, gently push the card again until it pops out.

4.3. Attaching the Lanyard

Attach the provided lanyard to the camera for easy carrying and to prevent accidental drops. Thread the lanyard through the designated loops on the camera's silicone cover.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the power button (usually located on the top or side) for a few seconds to turn the camera on or off.



Image: The Goopow H11 Kids Digital Camera displaying its main menu with icons for camera, video, playback, settings, games, and music.

5.2. Navigation

Use the directional buttons (up, down, left, right) to navigate through the menu options. Press the "OK" or shutter button to select an option.

5.3. Taking Photos

1. From the main menu, select the camera icon.
2. Frame your shot using the LCD screen.
3. Press the shutter button (top right) to take a picture.
4. To switch to selfie mode, use the appropriate button (refer to the camera's button layout).

Video Record Function



Image: The Goopow H11 Kids Digital Camera in selfie mode, showing three children smiling on the screen.

5.4. Recording Videos

1. From the main menu, select the video camera icon.
2. Press the shutter button to start recording. Press it again to stop.

Multiple Funny Frames



Image: The Goopow H11 Kids Digital Camera recording video, with a scene of children at a birthday party displayed on the screen.

5.5. Playback

Select the playback icon from the main menu to view your captured photos and videos. Use the directional buttons to browse through them.

5.6. Special Features

- Frames and Filters:** Access various fun frames and filters from the camera menu to add creative effects to your photos.
- Digital Zoom:** Use the zoom buttons (if available) to adjust the 8X digital zoom.
- Games:** The camera includes multiple puzzle games for entertainment.

Enjoy Selfie Time



Image: The Goopow H11 Kids Digital Camera displaying various funny frames and filters that can be applied to photos.



Image: The Goopow H11 Kids Digital Camera demonstrating its 8X digital zoom capability, showing a child's face at different zoom levels.

6. MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures or direct sunlight for extended periods.
- Ensure the charging port and SD card slot are free from dust and debris.

7. TROUBLESHOOTING

Problem	Solution
Camera does not turn on.	Ensure the battery is charged. Connect to a charger and try again.
Cannot take photos/videos.	Check if the SD card is inserted correctly and has sufficient storage space.

Problem	Solution
Poor image quality.	Ensure adequate lighting. Clean the camera lens if it's dirty.
Camera freezes.	Press the reset button (if available, refer to product diagram) or hold the power button for 10 seconds to force a restart.

8. SPECIFICATIONS

- **Model:** H11
- **Brand:** Goopow
- **Product Dimensions:** 1.3 x 7.52 x 4.45 inches
- **Item Weight:** 3.7 ounces
- **Battery:** 1 Lithium Polymer battery (included)
- **Optical Zoom:** 8x
- **Maximum Webcam Image Resolution:** 12 MP
- **Supported File Format:** JPEG
- **Image Stabilization:** Digital

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Goopow website. Keep your proof of purchase for warranty claims.