

[Manuals.plus](#) /

› [DELTA](#) /

› DELTA 12'x30' WDMT PE Party Tent Instruction Manual

## DELTA WDMT-1230

# DELTA 12'x30' WDMT PE Party Tent Instruction Manual

Model: WDMT-1230

## 1. INTRODUCTION

Thank you for choosing the DELTA 12'x30' WDMT PE Party Tent. This manual provides comprehensive instructions for the safe and efficient assembly, operation, and maintenance of your new outdoor event canopy. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



## 2. SAFETY INFORMATION

---

Your safety is paramount. Please observe the following precautions:

- Ensure the tent is set up on a stable, level surface.
- Do not exceed the tent's weight limit or capacity.
- Exercise caution during assembly and disassembly due to potentially heavy components.
- Handle sprung metal clips and frame parts with care to prevent injury.
- Do not install or leave the tent erected in strong winds (above 15 mph), heavy rain, or snow. Severe weather can cause structural damage and personal injury.
- Keep all flame and heat sources away from the tent fabric.
- Always secure the tent to the ground using all provided stakes and ropes.

## 3. PACKAGE CONTENTS

---

Before assembly, verify that all components are present. If any parts are missing or damaged, please contact customer support.

- Galvanized Steel Frame Poles (various lengths and types)
- Metal Connectors
- Polyethylene (PE) Roof Cover
- Polyethylene (PE) Sidewalls (removable)
- Ground Stakes (U-shaped)
- Bungee Cords for securing cover and sidewalls
- 2 Storage Bags



Image 3.1: Included storage bags for tent components.



Image 3.2: Bungee cords for securing tent fabric.



Image 3.3: U-shaped ground stakes for anchoring.

## 4. SETUP INSTRUCTIONS

---

Assembly typically requires 2-4 people. Choose a clear, level area for setup.

### 4.1. Frame Assembly

1. Unpack all frame poles and connectors. Sort them by size and type.
2. Begin by assembling the roof frame. Connect the ridge poles and eave poles using the appropriate metal connectors. Ensure all connections are secure.
3. Attach the leg poles to the assembled roof frame. Lift the frame carefully, with multiple people, to avoid bending poles.
4. Ensure all frame components are fully inserted into their connectors.



Image 4.1: The galvanized steel frame fully assembled.

### 4.2. Attaching the Roof Cover

5. Carefully unfold the PE roof cover and drape it over the assembled frame. Ensure the cover is centered and evenly distributed.
6. Secure the roof cover to the frame using the provided bungee cords. Attach the bungee cords through the grommets on the cover and around the frame poles.



Image 4.2: Tent with roof cover installed, prior to sidewall attachment.

### 4.3. Installing Sidewalls

7. Unroll the sidewalls. Attach them to the tent frame using the integrated fasteners (e.g., Velcro, bungee loops, zippers).
8. Ensure all sidewalls are properly aligned and secured to provide full enclosure. The sidewalls are removable and can be adjusted based on weather conditions or event needs.

### 4.4. Anchoring the Tent

9. Once the tent is fully assembled, use the U-shaped ground stakes to anchor each leg firmly into the ground.
10. For additional stability, especially in moderate weather, attach guy ropes (not included, but recommended) to the tent frame and secure them with additional stakes.

## 5. OPERATING INSTRUCTIONS

---

The DELTA Party Tent is designed for temporary outdoor use. Proper operation ensures longevity and safety.

- **Weather Conditions:** This tent is water-resistant but not waterproof. It is intended for fair weather conditions. Do not use in heavy rain, strong winds, or snow. Disassemble the tent if adverse weather is expected.
- **Ventilation:** Ensure adequate ventilation, especially if using heating or cooking equipment inside (maintain safe distances from tent fabric).
- **Entry/Exit:** Utilize the zippered sidewalls for easy entry and exit.

## 6. MAINTENANCE

---

Regular maintenance will extend the life of your party tent.

- **Cleaning:** Clean the PE cover and sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material. Allow all parts to dry completely before storage to prevent mildew.
- **Frame Inspection:** Periodically inspect the galvanized steel frame for any signs of rust, bending, or damage. Replace damaged parts immediately.
- **Storage:** When not in use, disassemble the tent and store all components in the provided storage bags in a cool, dry place, away from direct sunlight.

## 7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Tent is unstable:** Ensure all frame connections are fully engaged. Verify that all ground stakes are securely driven into the ground. Consider using additional guy ropes and stakes for increased stability.
- **Water pooling on roof:** Ensure the roof cover is taut and evenly distributed over the frame. Adjust bungee cords if necessary. Water pooling can lead to structural collapse.
- **Difficulty with assembly:** Double-check the parts list against the components received. Refer to the assembly diagrams (if provided separately) and ensure poles are correctly oriented. If instructions are unclear, contact customer support.
- **Zipper issues:** Ensure zippers are clean and free of debris. Apply a silicone-based lubricant if they are stiff. Avoid forcing stuck zippers.

## 8. SPECIFICATIONS

Feature	Detail
Brand	DELTA
Model Number	WDMT-1230
Product Dimensions (L x W x H)	360"L x 144"W x 106.8"H (12'x30'x8.9')
Size	12'x30'
Material (Cover & Walls)	Polyethylene (PE)
Frame Material	Galvanized Steel
Color	White
Water Resistance Level	Water Resistant
UV Light Protection	True
Closure Type	Zipper
Required Assembly	Yes

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact DELTA customer service directly. Keep your purchase receipt for warranty claims.

Manufacturer: WPIC



© 2024 DELTA. All rights reserved.