

AULCMEET Replacement Remote Control for MXQ PRO 4K Android TV Boxes

AULCMEET Replacement Remote Control User Manual

For MXQ PRO 4K and Compatible Android TV Boxes

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Compatibility](#)

1. OVERVIEW

This manual provides instructions for the AULCMEET replacement remote control, designed for use with various Android TV Box models, including the MXQ PRO 4K series. This remote offers a direct replacement solution, ensuring seamless control over your compatible device without complex programming.



Image: Users operating a TV box with a remote control, demonstrating typical usage.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

The remote control is designed as a direct replacement and typically does not require programming or pairing for compatible devices. Once batteries are installed, it should be ready for use.







Image: Front view of the AULCMEET replacement remote control, highlighting the button layout.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your AULCMEET replacement remote control:

- **Power Button ():** Turns the connected TV Box or TV (if programmed) on or off.
- **SET / TV IN / VOL- / VOL+ (TV Control Section):** These buttons are typically for controlling basic TV functions (power, input, volume) if the remote supports TV programming. Refer to your TV Box manual for specific programming instructions if available.
- **SETUP / APP / VOL- / VOL+ (Android TV Box Control Section):**
 - **SETUP:** Accesses system settings or setup menus.
 - **APP:** Opens the applications menu or a specific app.
 - **VOL- / VOL+:** Adjusts the volume of the Android TV Box.
- **Home Button (△):** Returns to the main home screen of the Android TV Box.
- **Back Button (←):** Navigates back to the previous screen or menu.
- **Navigation Pad (Up, Down, Left, Right):** Used to move the cursor or selection on the screen.
- **OK Button:** Confirms a selection or opens a highlighted item.
- **Menu Button (≡):** Opens context-sensitive menus or options.
- **Mouse Button (🖱️):** Activates or deactivates mouse pointer mode (if supported by the TV Box).
- **Number Pad (0-9):** For direct input of numbers, such as channel numbers or passwords.
- **Mute Button ():** Mutes or unmutes the audio.
- **Delete/Back Button (⌫):** Deletes characters during text input or acts as a backspace.

4. MAINTENANCE

4.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and TV Box; Infrared sensor blocked.	Replace batteries. Ensure a clear line of sight to the TV Box. Check if the TV Box's IR sensor is obstructed.
Certain buttons do not respond.	Button malfunction; TV Box specific compatibility.	Ensure the remote is compatible with your specific TV Box model. Some advanced functions might not be universally supported. Clean the remote if buttons are sticky.
Remote controls TV Box but not TV (Volume/Power).	TV control functions not programmed or not supported.	This remote primarily controls the Android TV Box. TV control buttons (SET, TV IN, TV VOL) may require specific programming not covered by this manual, or may not be supported for all TV models. Refer to your TV Box or TV manual for universal remote programming if applicable.

6. SPECIFICATIONS

- **Brand:** AULCMEET
- **Product Dimensions:** 6 x 2 x 0.55 inches
- **Item Weight:** 1.58 ounces
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 18 (Refers to the range of compatible TV Box models, not simultaneous control)
- **Compatible Devices:** Set Top Box (Android TV Boxes)
- **Power Source:** 2 x AAA Batteries (not included)

7. COMPATIBLE ANDROID TV BOX MODELS

This replacement remote control is compatible with a wide range of Android TV Box models, including but not limited to:

- MXQ PRO 4K
- MXQ Pro
- M8
- M8C
- M8N
- M9C
- MX9
- T95M
- T95N
- T95X
- M10

- H96
- H96 pro+
- X96mini
- X96w
- X96
- MXQ-4K
- M8S
- M8S V88
- M12
- T95
- T95Z
- *Note: Not compatible with H96 Plus.*

8. SAFETY INFORMATION

- Keep the remote control away from water and excessive moisture.
- Avoid exposing the remote to direct sunlight or extreme temperatures.
- Do not drop or subject the remote to strong impacts.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not attempt to disassemble or modify the remote control.

9. WARRANTY AND SUPPORT

Specific warranty information for this product is typically provided at the time of purchase or included with the product packaging. Please refer to your purchase documentation for details regarding warranty coverage and terms.

For technical support or further assistance, please contact the seller or manufacturer directly through the platform where the product was purchased.