

Brennenstuhl 1157504130

Brennenstuhl Eco-Line Power Strip 3-Socket 3m - Model 1157504130 User Manual

Comprehensive instructions for safe and efficient use.

[Introduction](#) [Safety Instructions](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

Thank you for choosing the Brennenstuhl Eco-Line 3-Socket Power Strip, Model 1157504130. This power strip is designed to provide reliable power distribution for your electronic devices. Please read this manual carefully before use to ensure safe operation and optimal performance. Keep this manual for future reference.



Figure 1: Brennenstuhl Eco-Line 3-Socket Power Strip (Model 1157504130). This image shows the black power strip with three Type F (Schuko) sockets and an integrated 3-meter power cable.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow these safety precautions to reduce the risk of fire, electric shock, and injury.

- Do not exceed the maximum load capacity specified in the technical specifications. Overloading can cause overheating and fire.
- This power strip is designed for indoor use only. Do not expose it to moisture, rain, or extreme temperatures.

- Do not connect multiple power strips in series. This can lead to overloading and fire hazards.
- Ensure that the power plug is fully inserted into the wall socket. A loose connection can cause overheating.
- Do not use the power strip if the cable or housing is damaged. Contact qualified personnel for repair or replacement.
- Keep out of reach of children.
- Do not cover the power strip during operation to allow for proper heat dissipation.
- Always unplug the power strip from the wall socket before cleaning or when not in use for extended periods.
- Do not disassemble the power strip. There are no user-serviceable parts inside.

3. SETUP

Follow these steps to set up your Brennenstuhl Eco-Line power strip:

1. **Unpack:** Carefully remove the power strip from its packaging. Inspect it for any signs of damage.
2. **Placement:** Choose a dry, indoor location away from direct sunlight, heat sources, and moisture. Ensure there is adequate ventilation around the power strip.
3. **Connect to Wall Socket:** Plug the power strip's main plug into a properly grounded wall socket. Ensure the connection is firm.
4. **Connect Devices:** Plug your electronic devices into the available sockets on the power strip. Ensure that the total power consumption of all connected devices does not exceed the maximum load capacity of the power strip (refer to Specifications).

4. OPERATING INSTRUCTIONS

The Brennenstuhl Eco-Line power strip is designed for simple operation.

- **Powering On/Off:** This model does not feature an individual on/off switch. Power is supplied to all connected devices when the power strip is plugged into a live wall socket. To disconnect power, unplug the power strip from the wall socket.
- **Connecting Devices:** Insert the plugs of your electronic devices firmly into the sockets of the power strip.
- **Disconnecting Devices:** To remove a device, pull its plug directly from the socket. Do not pull by the cable.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and safe operation of your power strip.

- **Cleaning:** Always unplug the power strip from the wall socket before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners, sprays, or abrasive materials.
- **Inspection:** Periodically inspect the power strip, cable, and plug for any signs of damage, such as cuts, fraying, or discoloration. If damage is found, discontinue use immediately and replace the unit.
- **Storage:** When not in use for extended periods, store the power strip in a dry, clean place, away from extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your power strip, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power to connected devices.	Power strip not plugged in. Wall socket is not live. Overload protection tripped (if applicable, though this model is basic). Damaged power strip or cable.	Ensure the power strip is firmly plugged into a live wall socket. Test the wall socket with another device. Reduce the number of connected devices. Discontinue use and replace the power strip.
Power strip feels warm.	Overloaded. Poor ventilation.	Unplug some devices to reduce the load. Ensure the power strip is not covered and has adequate airflow. If it remains excessively hot, discontinue use.

If the problem persists after attempting these solutions, contact customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	1157504130
Brand	Brennenstuhl
Number of Sockets	3
Socket Type	Type F (Schuko)
Cable Length	3 meters
Nominal Voltage	230 Volts AC
Max. Current	16 A
Max. Power Load	3680 W
Color	Black
Indoor/Outdoor Use	Indoor Use Only

8. WARRANTY INFORMATION

Brennenstuhl products are manufactured to high-quality standards. This product comes with a manufacturer's warranty against defects in materials and workmanship. The specific warranty period and terms may vary by region and retailer. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by:

- Improper use or installation.
- Unauthorized repairs or modifications.
- Accidents, abuse, or neglect.
- Exceeding the maximum load capacity.

For detailed warranty information, please refer to the documentation provided with your purchase or visit the official Brennenstuhl website.

9. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to report a problem with your Brennenstuhl Eco-Line power strip, please contact Brennenstuhl customer support.

You can typically find contact information on the official Brennenstuhl website or on the product packaging. When contacting support, please have your product model number (1157504130) and proof of purchase ready.

Brennenstuhl Official Website: www.brennenstuhl.com

© 2023 Brennenstuhl. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question