

Intempo EE4661GRNSTKEU

Intempo EE4661GRNSTKEU Urban Wireless Bluetooth Headphones Instruction Manual

Model: EE4661GRNSTKEU

INTRODUCTION

Thank you for purchasing the Intempo EE4661GRNSTKEU Urban Wireless Bluetooth Headphones. This manual provides essential information for the safe and efficient use of your headphones. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

- Do not expose the headphones to extreme temperatures, direct sunlight, or high humidity.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Keep the headphones away from water and other liquids. Although rated waterproof, prolonged submersion or exposure to harsh chemicals may cause damage.
- Do not attempt to disassemble or modify the headphones. This will void the warranty and may cause damage.
- Use only the provided USB charging cable or a certified equivalent for charging.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x Intempo EE4661GRNSTKEU Urban Wireless Bluetooth Headphones
- 1 x USB Charging Cable

PRODUCT OVERVIEW

The Intempo Urban Wireless Bluetooth Headphones feature an over-ear design with a built-in microphone

and easy-to-use controls. They are also foldable for convenient storage and transport.



Image: Intempo EE4661GRNSTKEU Urban Wireless Bluetooth Headphones in green, showing the over-ear design and adjustable headband.



Image: Intempo EE4661GRNSTKEU Urban Wireless Bluetooth Headphones in green, shown in their folded position for compact storage.

Key Features:

- Wireless Bluetooth connectivity
- Built-in microphone for hands-free calls
- Foldable design for portability
- Adjustable headband for comfort
- Touch controls for operation

SETUP

1. Charging the Headphones

1. Locate the USB charging port on the headphones.
2. Connect the small end of the provided USB charging cable to the headphone's charging port.
3. Connect the larger end of the USB cable to a powered USB port (e.g., computer, USB wall adapter).
4. The LED indicator on the headphones will illuminate to show charging status. It will typically change color or turn off when fully charged.
5. Allow approximately 2-3 hours for a full charge.

2. Bluetooth Pairing

1. Ensure the headphones are fully charged.

2. Press and hold the power button on the headphones until the LED indicator flashes, indicating pairing mode. (Refer to specific button location on your device).
3. On your device (smartphone, tablet, TV, smart speaker), enable Bluetooth and search for available devices.
4. Select "Intempo EE4661GRNSTKEU" or a similar name from the list of found devices.
5. Once paired, the LED indicator on the headphones will typically stop flashing and remain solid, or turn off.
6. The headphones have a wireless range of up to 25 meters (82 feet) in an open environment.

OPERATING INSTRUCTIONS

Power On/Off

- To power on: Press and hold the power button until the LED indicator lights up.
- To power off: Press and hold the power button until the LED indicator turns off.

Music Playback

- **Play/Pause:** Tap the multi-function button (or designated touch control area).
- **Next Track:** Double-tap the multi-function button (or swipe forward on touch control).
- **Previous Track:** Triple-tap the multi-function button (or swipe backward on touch control).
- **Volume Up:** Tap the volume up button (or swipe up on touch control).
- **Volume Down:** Tap the volume down button (or swipe down on touch control).

Phone Calls

- **Answer/End Call:** Tap the multi-function button (or designated touch control area) during an incoming call or active call.
- **Reject Call:** Press and hold the multi-function button (or designated touch control area) for 2 seconds during an incoming call.
- **Voice Assistant:** Press and hold the multi-function button (or designated touch control area) for 2 seconds when not on a call to activate your device's voice assistant.

MAINTENANCE

- Clean the headphones with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the headphones in a cool, dry place when not in use. The foldable design allows for compact storage.
- Avoid dropping or subjecting the headphones to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Battery is depleted.	Charge the headphones using the provided USB cable.

Problem	Possible Cause	Solution
Cannot pair with device.	Bluetooth is not enabled on the device, headphones are not in pairing mode, or device is out of range.	Ensure Bluetooth is enabled on your device. Put headphones into pairing mode. Move device closer to headphones (within 25m).
No sound or low volume.	Volume is too low on headphones or connected device, or headphones are not properly connected.	Increase volume on both headphones and connected device. Re-pair the headphones.
Poor sound quality.	Interference or device is out of range.	Move closer to the connected device. Avoid obstacles between headphones and device.

SPECIFICATIONS

Brand	Intempo
Model Number	EE4661GRNSTKEU
Connectivity Technology	Wireless (Bluetooth)
Wireless Range	Up to 25 meters
Headphone Jack	USB (for charging)
Special Features	Microphone function, Foldable design
Material	Plastic
Compatible Devices	Mobile phones, Tablets, TVs, Smart speakers
Water Resistance Level	Waterproof
Control Method	Touch
Ear Placement	Over-ear
Noise Control	None

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.