

ONN ONA16AA005

ONN CD/AM/FM Portable Boombox ONA16AA005 User Manual

Model: ONA16AA005

INTRODUCTION

Thank you for purchasing the ONN CD/AM/FM Portable Boombox. This manual provides important information regarding the setup, operation, and maintenance of your new device. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Please check that all items are present:

- ONN CD/AM/FM Portable Boombox
- User Guide
- Power Cord

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your boombox.



Image: Front view of the ONN CD/AM/FM Portable Boombox, showing the control panel, speakers, and handle.



Image: Angled view of the ONN CD/AM/FM Portable Boombox, highlighting its compact design and top-loading CD player.

Controls and Features:

- **Power Button:** Turns the unit on or off.
- **Volume Control:** Adjusts the audio output level.
- **Function Selector:** Switches between CD, AM, FM, and AUX modes.
- **CD Compartment:** Top-loading tray for compact discs.
- **Tuning Dial/Buttons:** For selecting radio frequencies.
- **Play/Pause, Stop, Skip/Search Buttons:** For CD playback control.
- **Program/Repeat Button:** For CD track programming and repeat functions.
- **3.5mm Auxiliary Line-in Jack:** Connect external audio devices.
- **Built-in Handle:** For easy portability.

SETUP

Powering the Boombox:

Your boombox can be powered by AC power or batteries.

AC Power:

1. Ensure the boombox is turned off.
2. Insert the included power cord into the AC input jack on the back of the unit.
3. Plug the other end of the power cord into a standard AC wall outlet (120V ~ 60Hz).

Battery Power (Batteries not included):

1. Open the battery compartment cover on the bottom of the unit.
2. Insert the required number of C-size batteries (usually 6), ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

OPERATING INSTRUCTIONS

CD Playback:



Image: The ONN CD/AM/FM Portable Boombox with its top-loading CD compartment open, ready for disc insertion.

1. Press the Power button to turn on the boombox.
2. Set the Function Selector to 'CD'.

3. Open the CD compartment cover.
4. Place a CD (Audio CD, CD-R/-RW) onto the spindle with the label side facing up.
5. Close the CD compartment cover. The CD will begin to play automatically or display the total number of tracks.
6. Use the Play/Pause, Stop, Skip/Search buttons to control playback.
7. To program tracks: While in stop mode, press the 'Program' button. Select desired tracks using Skip/Search, then press 'Program' again to confirm each track. Press 'Play' to start programmed playback.
8. To repeat tracks/CD: Press the 'Repeat' button during playback. Press once for single track repeat, twice for all tracks repeat.

AM/FM Radio Operation:

1. Press the Power button to turn on the boombox.
2. Set the Function Selector to 'AM' or 'FM'.
3. Extend the FM telescopic antenna for better FM reception. For AM, rotate the unit for best reception.
4. Use the Tuning Dial to select your desired radio station.
5. Adjust the Volume control to your preferred listening level.

Using the Auxiliary Input:



onnTM

New



MC Clearance

Image: The ONN CD/AM/FM Portable Boombox with a 3.5mm auxiliary cable connected to a smartphone, demonstrating its external audio input capability.

1. Press the Power button to turn on the boombox.
2. Set the Function Selector to 'AUX'.
3. Connect one end of a 3.5mm audio cable (not included) to the 'AUX IN' jack on the boombox.
4. Connect the other end of the audio cable to the headphone jack or audio output of your external device (e.g., MP3 player, smartphone).
5. Start playback on your external device.
6. Adjust the volume on both the boombox and your external device for optimal sound.

MAINTENANCE

Proper care will ensure long-lasting performance from your boombox.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** If the CD lens gets dirty, use a commercially available CD lens cleaner. Do not touch the lens.

- **Storage:** If storing the unit for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.

TROUBLESHOOTING

If you experience issues with your boombox, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected; Batteries depleted or incorrectly inserted.	Ensure power cord is securely plugged in; Replace batteries or check polarity.
CD does not play	CD inserted incorrectly; CD is dirty or scratched; Function selector not on 'CD'.	Insert CD with label side up; Clean or replace CD; Set function selector to 'CD'.
Poor radio reception	Antenna not extended; Unit position.	Fully extend FM antenna; Rotate unit for better AM reception.
No sound from AUX input	AUX cable not connected properly; Function selector not on 'AUX'; Volume too low on external device.	Check AUX cable connection; Set function selector to 'AUX'; Increase volume on external device.

SPECIFICATIONS

Feature	Detail
Brand	ONN
Model	ONA16AA005
Connectivity Technology	Auxiliary
Color	Black
Speaker Type	Stereo
Power Source	Corded Electric / Battery (C-size)
Item Weight	3.74 pounds
Package Dimensions	11.3 x 10.7 x 6.3 inches

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official ONN website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question