

[Manuals.plus](#) /

> [Tefal](#) /

> Tefal ActiFry Genius XL YV9708 2-in-1 Air Fryer Instruction Manual

Tefal YV9708

Tefal ActiFry Genius XL YV9708 2-in-1 Air Fryer Instruction Manual

Model: YV9708

Brand: Tefal

1. INTRODUCTION

The Tefal ActiFry Genius XL YV9708 is a 2-in-1 air fryer designed to prepare complete meals with minimal oil. Featuring dual cooking zones and a unique Dual Motion Technology, this appliance combines hot air circulation with an automatic stirring paddle to ensure even cooking. It offers 9 pre-programmed settings for various dishes and a generous 1.7 kg capacity, suitable for family meals.

2. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Always place the appliance on a stable, heat-resistant surface, away from water or heat sources.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Keep the appliance and its cord out of reach of children.
- Do not use sharp or metallic objects in the cooking chamber as they may damage the non-stick coating. It is recommended to use wooden, plastic, or silicone kitchen utensils.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling or cleaning parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Hot surfaces: The appliance generates heat and steam during use. Exercise caution to prevent burns.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your ActiFry Genius XL YV9708.



Image 3.1: Exploded view of the ActiFry Genius XL, illustrating the main unit, lid, main cooking bowl, stirring paddle, upper cooking tray, and measuring spoon.

- **Main Unit:** Houses the heating element, motor, and control panel.
- **Lid:** Transparent lid with a release button, allowing you to monitor cooking.
- **Main Cooking Bowl:** The primary cooking area, with a non-stick coating.
- **Stirring Paddle:** Automatically rotates to ensure even cooking and browning.
- **Upper Cooking Tray:** A removable tray for cooking a second dish simultaneously.
- **Measuring Spoon:** For precise oil measurement.
- **Control Panel:** Touch screen interface for program selection and manual settings.



Image 3.2: The main cooking bowl, upper cooking tray, stirring paddle, and measuring spoon are shown detached from the main unit, highlighting their removable nature for cleaning.

4. SETUP

Before first use, follow these steps to prepare your ActiFry Genius XL.

1. **Unpacking:** Remove all packaging materials, stickers, and accessories from the appliance.
2. **Cleaning:** Wash the lid, main cooking bowl, stirring paddle, upper cooking tray, and measuring spoon with hot soapy water. Rinse thoroughly and dry completely. The main unit can be wiped with a damp cloth.
3. **Assembly:** Place the stirring paddle in the center of the main cooking bowl. Insert the main cooking bowl into the main unit. Close the lid securely.
4. **Placement:** Position the appliance on a flat, stable, heat-resistant surface, ensuring adequate ventilation around it.

5. OPERATING INSTRUCTIONS

The ActiFry Genius XL offers both pre-programmed settings and manual control for versatile cooking.

5.1 Control Panel



Image 5.1: The touch control panel displays time, mode, and 9 distinct program icons for various food types, along with Start/Stop buttons.

The control panel features a touch screen with:

- **Mode Display:** Shows selected program or manual settings.
- **Time Display:** Indicates remaining cooking time.
- **Program Icons (1-9):** Select one of the 9 automatic programs.
- **Start/Stop Button:** Initiates or pauses cooking.
- **+/- Buttons:** Adjust time or temperature in manual mode.

- **Delayed Start/Keep Warm:** Buttons for these functions (hold for 2 seconds).

5.2 Pre-programmed Settings

The appliance features 9 automatic programs that adjust cooking temperature, time, and stirring for optimal results:

1. Fries
2. Breaded Snacks
3. Doughnuts/Fritters
4. Rolls/Patties
5. Chicken
6. Wok
7. World Cuisine
8. Desserts
9. Fish

To use a program:

1. Add ingredients to the main cooking bowl and/or upper tray.
2. Close the lid.
3. Select the desired program by pressing its icon on the control panel.
4. Press the Start button. The appliance will automatically adjust settings.

5.3 2-in-1 Cooking

The ActiFry Genius XL allows you to cook two different dishes simultaneously using the main bowl and the upper tray.



Image 5.2: The ActiFry Genius XL in operation, demonstrating its 2-in-1 capability by cooking fries in the lower bowl and chicken pieces in the upper tray.

1. Place ingredients for the main dish (e.g., fries) in the main cooking bowl.
2. Place ingredients for the secondary dish (e.g., chicken pieces) in the upper cooking tray.
3. Carefully place the upper cooking tray into the appliance above the main bowl.
4. Select a suitable 2-in-1 program or set manual time and temperature.
5. Press Start. The appliance will cook both dishes simultaneously.

2 SEPARATE GARBEREICHE, UM ZWEI REZEPTE AUF EINMAL ZUZUBEREITEN



WENIG ODER GAR
KEIN ÖL**

99%
WENIGER
FETTZUSATZ*



OHNE
SCHÜTTELN :
GLEICHMÄSSIG
KNUSPRIGE
ERGEBNISSE



INTELLIGENTE
PROGRAMME



HUNDERTE VON REZEPTEN
IN DER APP VERFÜGBAR



Image 5.3: A user carefully inserts the upper cooking tray, filled with chicken, into the ActiFry Genius XL, demonstrating the setup for dual-zone cooking.

5.4 Manual Mode

For custom cooking, you can manually set the time and temperature (80°C to 220°C).

1. Press the 'Mode' button until the manual setting appears.
2. Use the +/- buttons to adjust the cooking time.
3. Use the +/- buttons to adjust the temperature.
4. Press Start to begin cooking.

5.5 Delayed Start and Keep Warm

To activate Delayed Start or Keep Warm functions, press and hold the respective button for 2 seconds. Follow the on-screen prompts to set the desired delay time or activate the keep warm feature after cooking.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

- **Before Cleaning:** Always unplug the appliance and allow it to cool completely before disassembling or cleaning.
- **Dishwasher Safe Parts:** The lid, main cooking bowl, stirring paddle, and upper cooking tray are removable and dishwasher safe.



Image 6.1: Detachable parts of the ActiFry Genius XL, including the lid and cooking bowl, are shown being placed into a dishwasher for convenient cleaning.

- **Hand Washing:** For hand washing, use hot soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
- **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water.
- **Storage:** Ensure all parts are clean and dry before storing the appliance.

7. TROUBLESHOOTING

If you encounter issues with your ActiFry Genius XL, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; lid not closed properly.	Check power cord connection; try a different outlet; ensure lid is securely closed.
Food not cooking evenly.	Too much food; stirring paddle obstructed; incorrect program/settings.	Do not overload the bowl; check for obstructions around the paddle; select appropriate program or adjust time/temperature.

Problem	Possible Cause	Solution
Unusual noise during operation.	Stirring paddle not correctly installed; foreign object; internal cable touching fan.	Ensure paddle is properly seated. If a cable is touching the fan, gently push it away (if accessible and safe to do so, otherwise contact support).
Smoke coming from the appliance.	Excess oil/grease; food residue; damaged heating element.	Unplug immediately. Clean the appliance thoroughly. If smoke persists after cleaning, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact Tefal customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	YV9708
Brand	Tefal
Power	1500 Watts
Capacity	1.7 Kilograms
Voltage	230 Volts
Material	Steel
Dimensions (L x W x H)	32.8 x 47.6 x 26.3 cm
Weight	6.4 Kilograms
Temperature Control	Yes (80°C to 220°C)
Automatic Programs	9
Special Feature	2-in-1 Cooking, Dual Motion Technology

9. WARRANTY AND SUPPORT

Your Tefal ActiFry Genius XL YV9708 comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical assistance, spare parts, or further inquiries, please contact Tefal customer support through their official website or the contact information provided in your product packaging.