

- Manuals.plus /
- › Dayllon /
 - › Dayllon Analog Digital Watch for Kids, Model 1163 Instruction Manual

Dayllon 1163

Dayllon Analog Digital Watch for Kids, Model 1163

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Dayllon Analog Digital Watch, Model 1163. This watch is designed for children aged 5-15, offering both analog and digital time displays, along with various useful functions. This manual provides detailed instructions on how to set up and operate your watch to ensure optimal performance and enjoyment.

2. PRODUCT OVERVIEW AND FUNCTIONS

The Dayllon Model 1163 watch combines classic analog hands with a clear digital display, offering multiple features for daily use.

FUNCTION INTRODUGTION



Image 2.1: Overview of watch functions including time, week, date, water resistance, stopwatch, alarm, EL light, and 12/24 hour format.

Key Functions:

- **Time Display:** Analog and Digital (12/24 hour format).
- **Date & Week Display:** Shows current date and day of the week.
- **Stopwatch:** For timing activities.
- **Alarm:** Daily alarm function.
- **EL Light:** Electroluminescent backlight for visibility in low light.
- **Water Resistance:** Rated 50M (WR 50M).

Button Identification:

FEATURE SKETCH



Image 2.2: Diagram showing the location and labels of the watch's buttons.

- **LIGHT Button (Top Left):** Activates the backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Stopwatch, Alarm Setting).
- **DATE / Start/Stop Button (Top Right):** Used to display date, start/stop stopwatch, or adjust settings.
- **ALARM / Reset Button (Bottom Right):** Used to reset stopwatch or adjust settings.
- **Crown (Middle Right):** Primarily for setting analog time.

3. SETUP INSTRUCTIONS

3.1 Setting Analog Time:

1. Pull out the **Crown** (middle right button).
2. Rotate the **Crown** to adjust the analog hour and minute hands to the desired time.
3. Push the **Crown** back in to start the analog timekeeping.

3.2 Setting Digital Time, Date, and 12/24 Hour Format:

1. From the normal time display, press the **MODE** button three times to enter the time setting mode. The seconds digits will flash.
2. Press the **ALARM / Reset** button to reset the seconds to zero.
3. Press the **DATE / Start/Stop** button to move the flashing selection to the hour digits.
4. Press the **ALARM / Reset** button to adjust the hour. Note the 'A' or 'P' for AM/PM in 12-hour format, or 'H' for 24-hour format.
5. Press the **DATE / Start/Stop** button to move the flashing selection to the minute digits.
6. Press the **ALARM / Reset** button to adjust the minutes.
7. Continue pressing the **DATE / Start/Stop** button to cycle through and set the month, date, and day of the week using the **ALARM / Reset** button to adjust each value.
8. To switch between 12-hour and 24-hour format, when the hour digits are flashing, press the **DATE / Start/Stop** button until the 'A', 'P', or 'H' indicator flashes, then press **ALARM / Reset** to toggle.
9. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

3.3 Setting the Alarm:

1. From the normal time display, press the **MODE** button twice to enter the alarm setting mode. The hour digits of the alarm time will flash.
2. Press the **ALARM / Reset** button to adjust the alarm hour.
3. Press the **DATE / Start/Stop** button to move the flashing selection to the minute digits.
4. Press the **ALARM / Reset** button to adjust the alarm minutes.
5. Press the **MODE** button to exit the alarm setting mode.
6. To activate/deactivate the alarm, from the normal time display, press and hold the **ALARM / Reset** button, then press the **DATE / Start/Stop** button. An alarm icon should appear/disappear on the display.

4. OPERATING INSTRUCTIONS

4.1 Using the Backlight (EL Light):

To illuminate the digital display in dark conditions, simply press the **LIGHT** button (top left). The backlight will stay on for a few seconds.

BLACKLIGHT SETTING

Use imported EL Lamp. Press the LIGHT BUTTON to tell time clearly at night.



Image 4.1: Illustration of the watch display with and without the EL backlight activated.

4.2 Using the Stopwatch:

1. From the normal time display, press the **MODE** button once to enter stopwatch mode. The display will show '00:00:00'.
2. Press the **DATE / Start/Stop** button to start the stopwatch.
3. Press the **DATE / Start/Stop** button again to pause the stopwatch.
4. Press the **ALARM / Reset** button to reset the stopwatch to '00:00:00'.
5. Press the **MODE** button to exit stopwatch mode and return to the normal time display.

5. WATER RESISTANCE GUIDELINES

The Dayllon Model 1163 watch is rated for 50 meters (5ATM) water resistance. This means it is suitable for:

50M DAILY WATERPROOF

Do not use while swimming, surfing or bathing.



Image 5.1: Visual guide to the watch's 50M daily waterproof capabilities, including handwashing, rain, washing face, and light swimming.

- Handwashing
- Exposure to rain
- Washing face
- Light swimming

Important Note: While rated for 50M, it is recommended to avoid using the watch while swimming, surfing, or bathing in hot water, and do not press any buttons underwater. Exposure to hot water or steam can compromise the watch's seals.

6. MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth to remove dirt and sweat. For stubborn dirt, a slightly damp cloth can be used, followed by drying.
- **Avoid Chemicals:** Do not expose the watch to strong chemicals, solvents, or detergents, as these can damage the case, strap, or seals.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (very hot or very cold) for prolonged periods,

as this can affect battery life and accuracy.

- **Impact:** While durable, avoid dropping the watch or subjecting it to strong impacts.
- **Battery Replacement:** When the display dims or functions become erratic, the battery may need replacement. This should ideally be done by a qualified watch technician to ensure water resistance is maintained.

7. TROUBLESHOOTING

- **Watch not displaying time/functions:** Check if the battery is depleted. If the display is blank or very dim, the battery may need replacement.
- **Digital time is incorrect:** Refer to Section 3.2 "Setting Digital Time, Date, and 12/24 Hour Format" and follow the steps carefully. Ensure you are in the correct setting mode.
- **Analog time is incorrect:** Refer to Section 3.1 "Setting Analog Time" and adjust the crown.
- **Alarm sounds unexpectedly or cannot be turned off:** Ensure you have followed the steps in Section 3.3 "Setting the Alarm" to activate/deactivate the alarm. Some users have reported difficulty in completely turning off the alarm function, only being able to change its set time. If the alarm continues to sound despite attempts to deactivate it, you may need to contact customer support.
- **Water inside the watch:** If moisture appears inside the watch, stop using it immediately and have it inspected by a professional. This indicates a breach in the water resistance.

8. SPECIFICATIONS



Image 8.1: Detailed product parameters including dimensions, weight, and materials.

Brand Name	Dayllon
Model Number	1163
Display Type	Analog-Digital
Watch Movement Type	Japanese Quartz
Water Resistance Depth	50 Meters (5ATM)
Band Material Type	Silicone (PU)
Case Material	ABS Resin

Dial Color	Black
Case Diameter	44 Millimeters (1.73 inches)
Band Width	20 Millimeters (0.79 inches)
Band Length	250 Millimeters (9.84 inches)
Item Weight	0.11 Kilograms (3.84 ounces)
Age Range Description	Kid

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Dayllon customer service directly. Contact details are typically available on the manufacturer's official website or through your point of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

