

Manuals.plus /

> [Ceppekyy](#) /

> Wireless Earbuds, Bluetooth 5.0 in-Ear TWS Headphones Auto Pairing Earphones with 2000mAh Charging Case LED Battery Display 80H Playtime, IPX7 Waterproof Built-in Mic Headsets for Sports

Ceppekyy H01

Wireless Earbuds User Manual

Model: H01 | Brand: Ceppekyy

INTRODUCTION

Thank you for choosing the Ceppekyy H01 Wireless Earbuds. These earbuds are designed to provide a high-fidelity audio experience with advanced features such as Bluetooth 5.0 connectivity, automatic pairing, and a portable charging case with an LED battery display. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 2 x Wireless Earbuds (Left and Right)
- 1 x Portable Charging Case
- 1 x USB Type-C Charging Cable
- 2 x Pairs of Silicone Ear Caps (Small, Large)
- 1 x User Manual

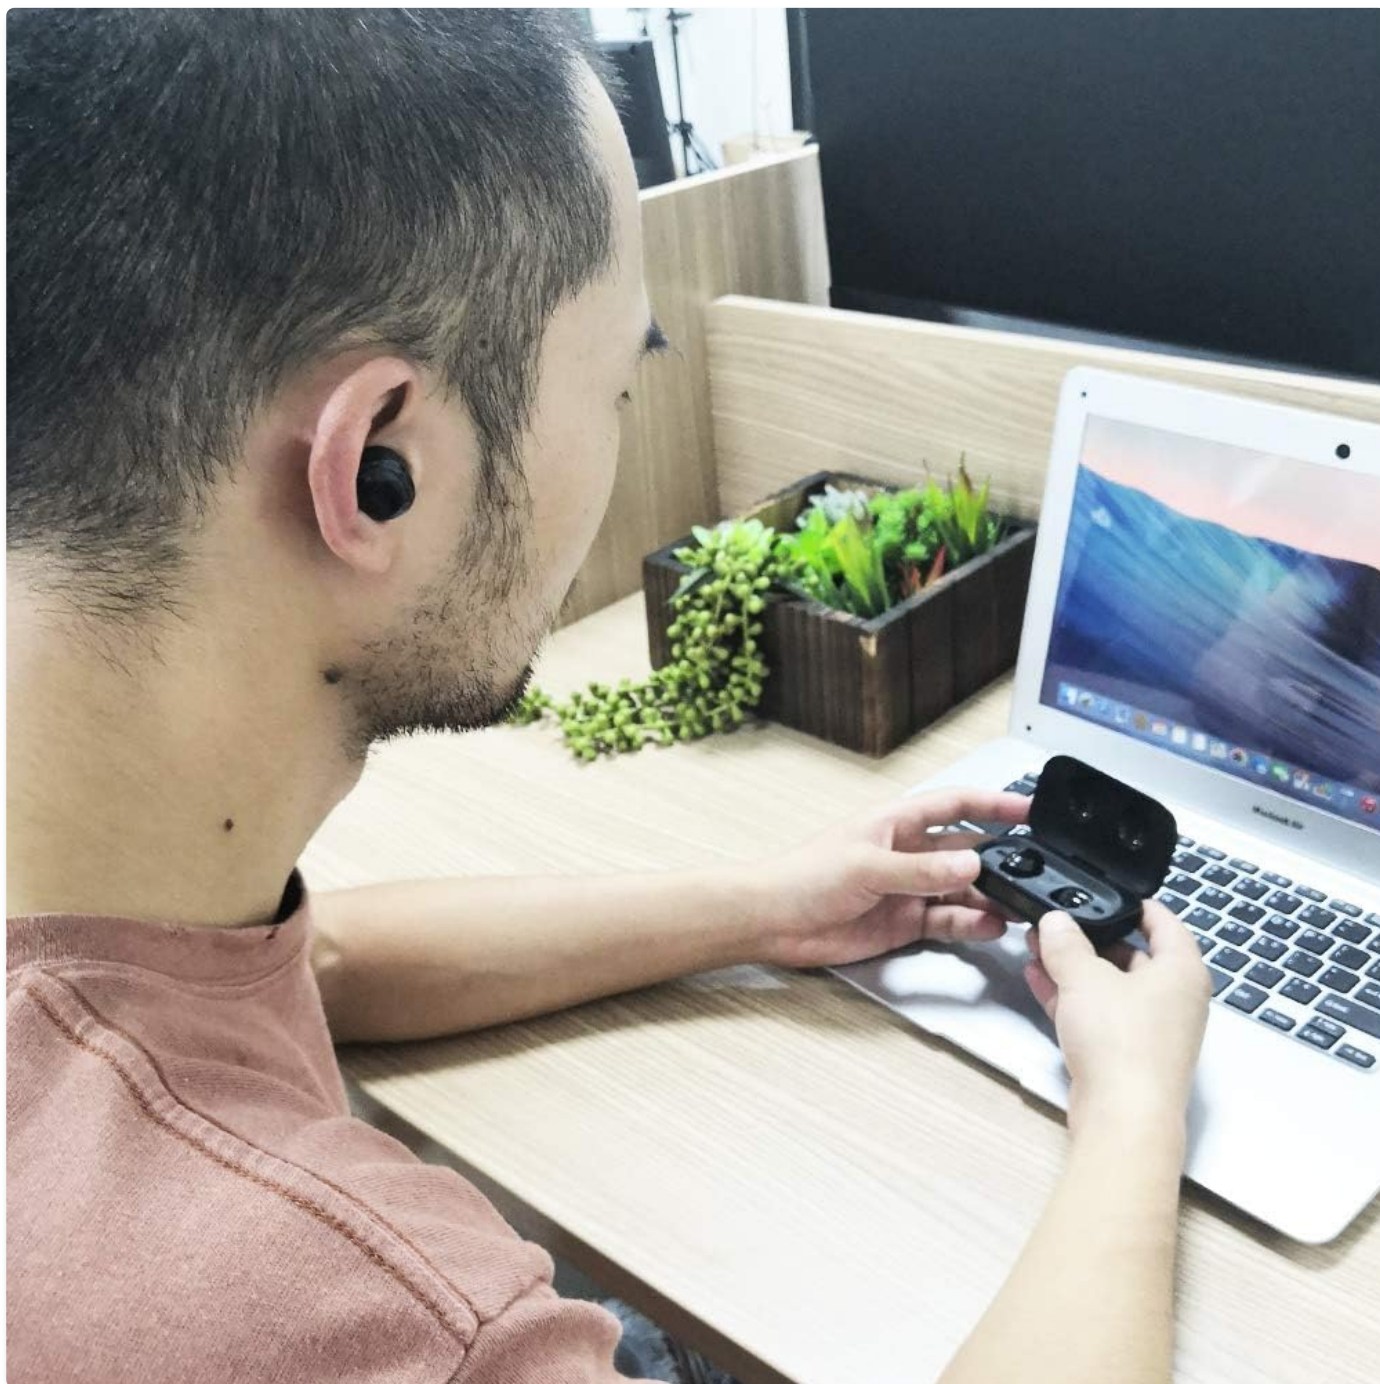 


Image: Detailed diagram of the Ceppekyy H01 components and included accessories.

PRODUCT DIAGRAM

Familiarize yourself with the different parts of your Ceppekyy H01 Wireless Earbuds and charging case:

- **Charging Case:** Houses and charges the earbuds, features an LED battery display for both earbuds and the case itself. Includes a Type-C charging input and a USB output for power bank functionality.
- **Earbuds:** Each earbud features a multifunction touch button, flash light/microphone, and magnetic charging contacts.

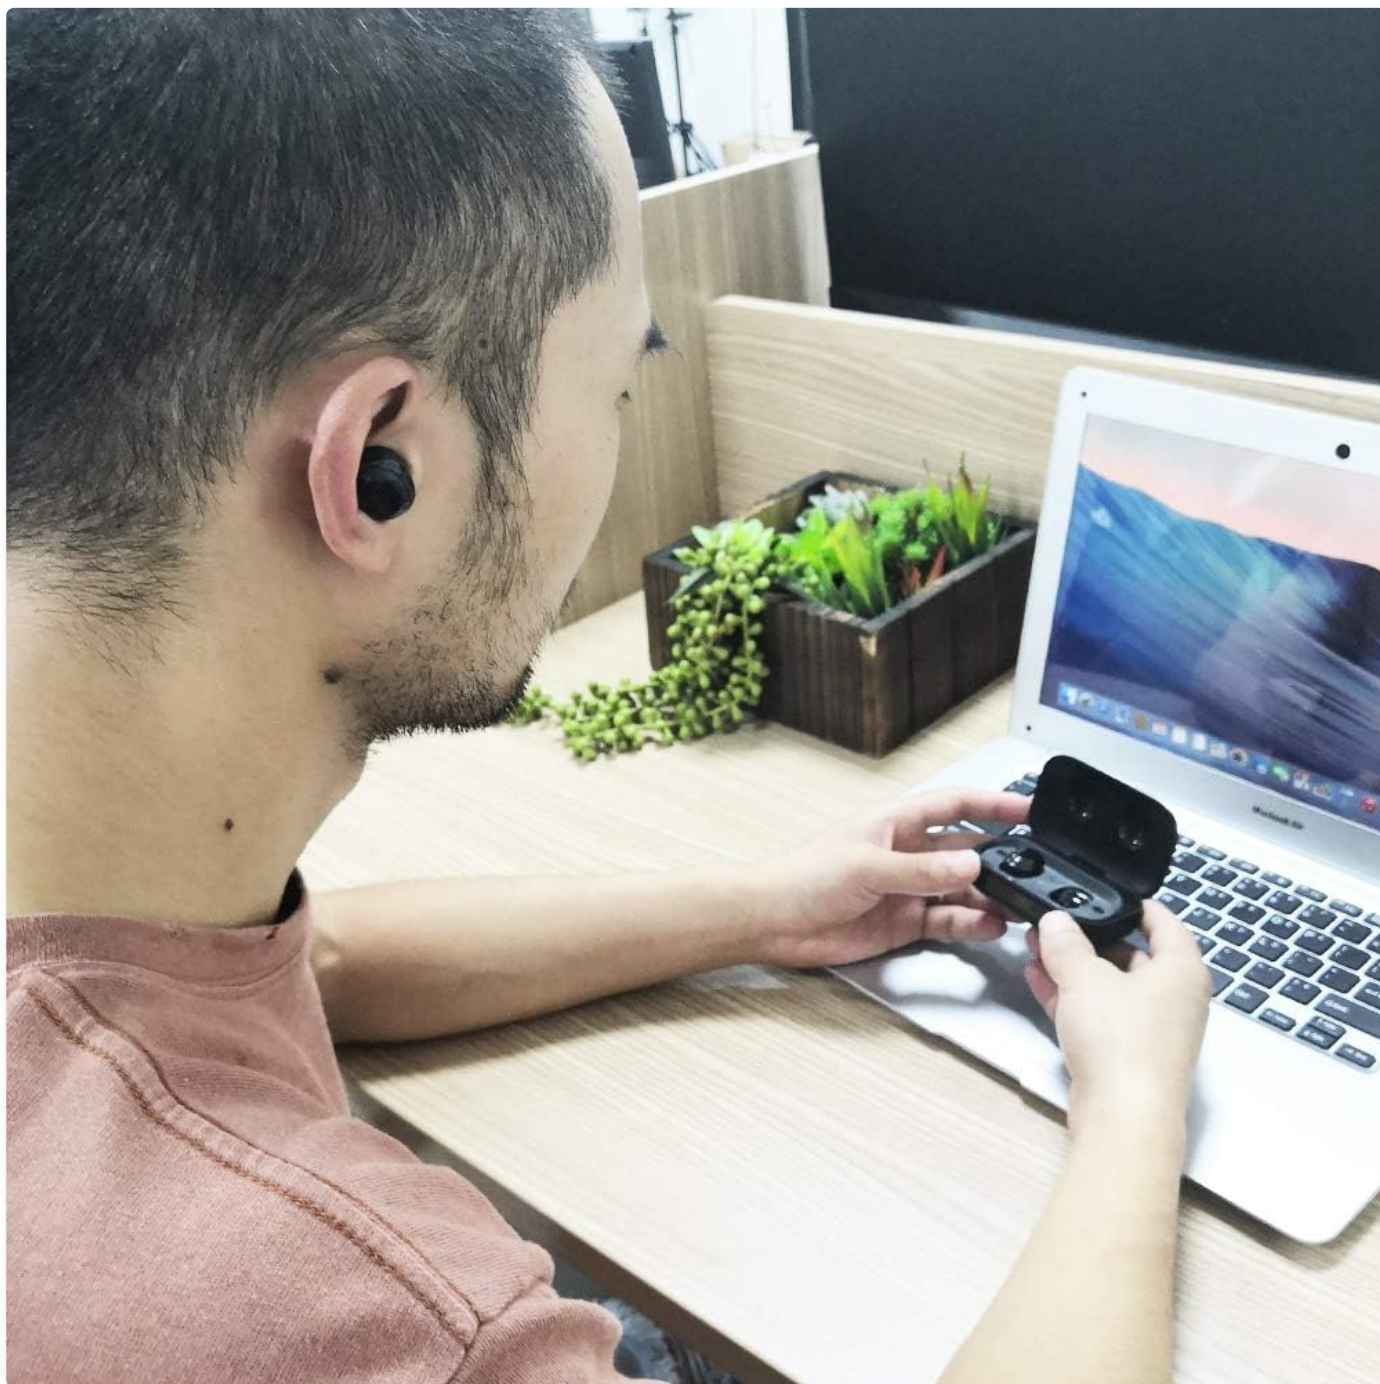 


Image: Exploded view of the charging case and earbud, highlighting key features and ports.

SETUP

Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into their respective slots in the charging case. Ensure the magnetic contacts align.
2. Connect the provided USB Type-C cable to the charging case's Type-C input port and the other end to a USB power source (e.g., wall adapter, computer USB port).
3. The LED display on the charging case will indicate the charging status. The charging case takes approximately 1.5 hours to fully charge, and the earbuds take about 45 minutes.

The 2000mAh charging case can provide up to 15 full charges for the earbuds, offering over 80 hours of total playtime. It can also serve as an emergency power bank for other devices via its USB output port.



Image: Visual representation of the long battery duration and charging times.

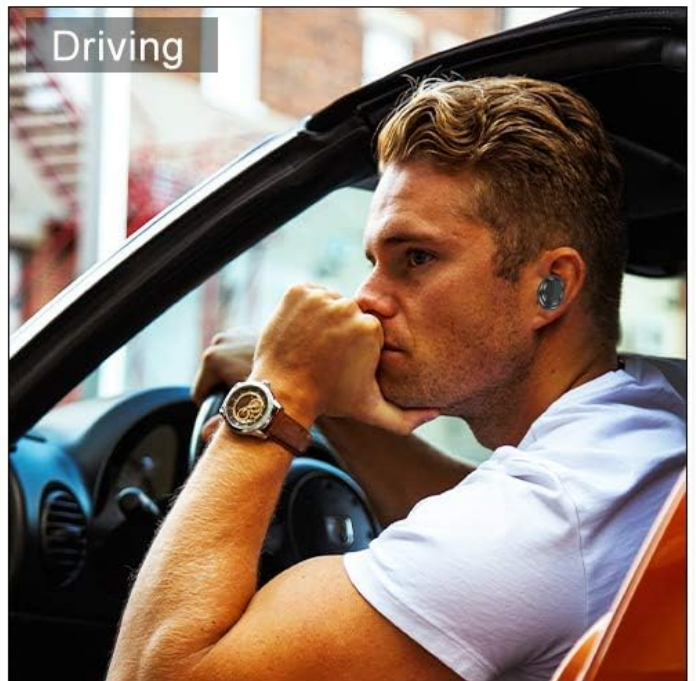 
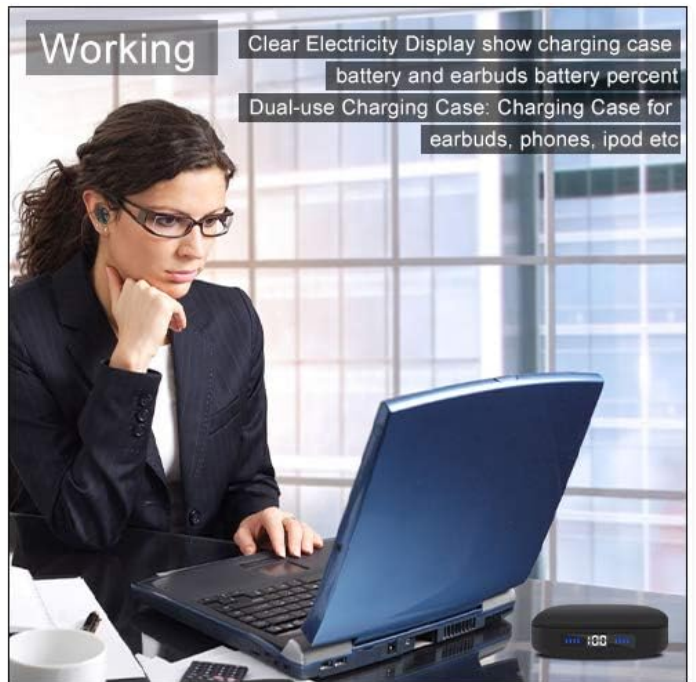 
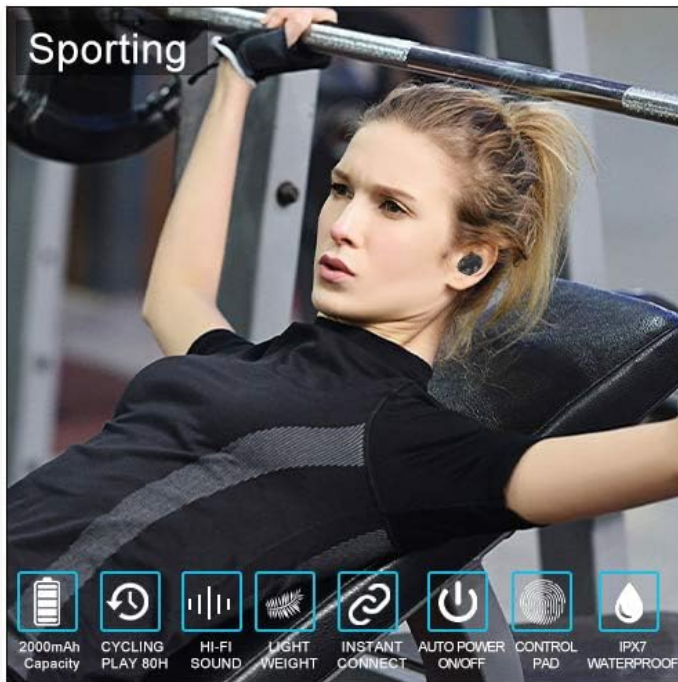 


Image: The charging case being used to charge a smartphone, demonstrating its power bank capability.

Pairing with Your Device

The Ceppekyy H01 earbuds feature an automatic pairing system for a hassle-free experience.

1. **Initial Pairing:** Open the charging case and take out both earbuds. They will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "H01" from the list of found devices to connect. Once connected, you will hear a confirmation prompt.

After the initial pairing, the earbuds will automatically connect to the last paired device when taken out of the case. Both the left and right earbuds can be used independently (Master-Slave Switching Freely).

ONE STEP AUTOMATIC PAIRING



1, Take earbuds out of charging case



2, Connect to the "H01" from your device

NOTE: UPGRADE Double-earbuds MODE: Master-slave switching freely, earbuds will always pairing automatically



Bluetooth 5.0



33ft super stable connection



Image: Step-by-step guide for automatic pairing of the earbuds with a mobile device.

OPERATING THE EARBUDS

Touch Controls

The Ceppekyy H01 earbuds feature smart touch controls on each earbud for easy management of calls and music playback.

- **Play/Pause:** Single tap on either earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold on either earbud.
- **Next Song:** Double tap on the Right earbud.
- **Previous Song:** Double tap on the Left earbud.
- **Volume Up:** Triple tap on the Right earbud.
- **Volume Down:** Triple tap on the Left earbud.
- **Activate Voice Assistant (Siri/Google Assistant):** Press and hold for 2 seconds on either earbud.

- **Power On/Off:** Press and hold for 5 seconds (when not in case).



Image: Visual guide to the touch control functions on the earbuds.

Audio and Call Functions

The earbuds provide Hi-Fi sound quality and in-call stereo sound. Ensure the earbuds are properly seated in your ears for optimal audio performance. Different sized ear caps are provided for a comfortable and secure fit.

3D SOUND EFFECT

BINAURAL STEREO EFFECT



COMFORTABLE
TO WEAR



SIRI



VOLUME+



VOLUME-



POWER ON/OFF



HANG UP



ANSWER



PLAY



PAUSE

Image: Illustration of comfortable wear and available ear tip sizes.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your earbuds.

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Avoid using abrasive materials or harsh chemicals.
- **Ear Tips:** Remove and clean the silicone ear tips periodically to prevent wax buildup, which can affect sound quality.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage.
- **Water Resistance:** The earbuds are IPX7 waterproof, meaning they can resist sweat and water splashes. They are ideal for gym and outdoor activities. However, they are not designed for prolonged submersion. **Do not put the earbuds into water over 1 meter deep or for longer than 30 minutes, as this will cause damage. The earbuds will automatically turn off in water.**



Image: Demonstration of the IPX7 waterproof feature.

TROUBLESHOOTING

If you encounter any issues with your Ceppekyy H01 earbuds, please refer to the following common solutions:

- **Only one earbud has sound:** Place both earbuds back into the charging case, close the lid, then take them out together again. Alternatively, try turning them off and on manually.
- **Interference/Disconnection:** Avoid using the earbuds in areas with intensive Wi-Fi signals, as wireless and Wi-Fi devices operating on the same 2.4GHz frequency band can cause interference.
- **Earbuds not charging:** Ensure the earbuds are correctly seated in the charging case and the case itself has sufficient charge. Clean the charging contacts on both the earbuds and the case.
- **Earbuds not pairing:** Ensure Bluetooth is enabled on your device and the earbuds are out of the case. If issues persist, try forgetting the device in your phone's Bluetooth settings and re-pairing.
- **Earbuds automatically turn off:** If not paired for 3 minutes, the earbuds will automatically power off to save

battery.

SPECIFICATIONS

Detailed technical specifications for the Ceppekyy H01 Wireless Earbuds:

Feature	Specification
Model Name	H01
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.0
Bluetooth Range	10m / 33 Feet (unobstructed)
Earbuds Working Time	Up to 5.5 hours
Charging Case Battery Capacity	2000mAh
Earbuds Charging Time	45 minutes
Charging Case Charging Time	1.5 hours
Water Resistance Level	IPX7 Waterproof
Control Type	Touch Control
Frequency Range	20Hz - 20,000Hz
Earbud Dimension	19*21.5*25mm (0.75x0.85x0.98ins)
Earbud Weight	0.02lb
Charging Case Dimension	80x50x25mm (3.1x2x0.9ins)
Charging Case Weight	0.22lb
Compatible Devices	Android, iOS (iOS 7+, Android 4.0+)
Material	Silicone, Plastic

WARRANTY AND SUPPORT

For any questions, concerns, or technical support regarding your Ceppekyy H01 Wireless Earbuds, please contact Ceppekyy customer service. Please refer to the product packaging or the official Ceppekyy website for contact information and details regarding warranty coverage.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07W6P9C7G>

More documents and user manuals: <https://manuals.plus/>