

## T 48L 110V/60HZ

# T 1500W Electric Toaster Oven User Manual

Model: 48L, 110V/60HZ

## 1. INTRODUCTION AND SAFETY INSTRUCTIONS

---

This manual provides essential information for the safe and efficient operation of your T 1500W Electric Toaster Oven. Please read all instructions carefully before use and retain this manual for future reference.

### Important Safety Precautions:

- Always place the oven on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Do not touch hot surfaces. Use oven mitts or pot holders when handling hot items or parts.
- Ensure the power cord is not damaged and is kept away from hot surfaces.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

## 2. PRODUCT FEATURES

---

The T Electric Toaster Oven is designed for versatile baking and cooking, incorporating several features for ease of use and efficient performance.

- **1500W Power:** Provides efficient heating for various cooking tasks.

- **48L Capacity:** Generous interior space suitable for family meals and multiple items.
- **Wide-Area Temperature Control:** Adjustable temperature range from 100°C to 230°C to accommodate diverse recipes.
- **Stereo Heating:** Utilizes upper and lower heating elements for even cooking.
- **30-Minute Timer:** Convenient timer function for precise cooking duration.
- **Double Tube Heating:** Enhanced heating performance for consistent results.
- **Stereoscopic Heat Dissipation:** Designed for effective heat management and safety.
- **Knob Control:** Simple and intuitive control for temperature and time settings.
- **Double Baking Position:** Allows for cooking multiple items simultaneously or adjusting rack height.
- **Three-Layer Explosion-Proof Toughened Glass Door:** Offers durability, safety, and easy monitoring of cooking progress.

### 3. COMPONENTS AND ACCESSORIES



**Image Description:** This image displays the T 1500W Electric Toaster Oven from the front, with its glass door open. The interior shows two baking racks and a baking pan. On the right side, the control panel with two rotary knobs is visible. The oven has a red top and black body.

Your T Electric Toaster Oven comes with the following components and accessories:

- Main Oven Unit
- Baking Rack (Grill)
- Baking Pan (Grill)
- User Manual (This document)



**Image Description:** This image shows the T Electric Toaster Oven from an angle, with a text box overlaying part of the image. The text box lists "Product Information" including "Name: Electric oven", "Control mode: knob", "Power: 1500W", "Capacity: 12L/48L", "Commodity color: red", and "Accessories: grills and grills".

## 4. SETUP

---

1. **Unpacking:** Carefully remove the oven and all accessories from the packaging. Remove any protective films or packaging materials.
2. **Placement:** Place the oven on a flat, stable, and heat-resistant surface. Ensure there is adequate space (at least 10-15 cm) around all sides of the oven for proper ventilation. Do not place it near flammable materials or under cabinets that are not heat-resistant.
3. **Power Connection:** Ensure the voltage of your power outlet matches the oven's requirements (110V/60HZ). Plug the power cord into a grounded electrical outlet.
4. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash the baking rack and pan with warm, soapy water, rinse, and dry thoroughly.
5. **First Use Burn-Off:** It is recommended to run the oven empty for about 10-15 minutes at the highest temperature setting (230°C) to burn off any manufacturing residues. A slight odor or smoke may be present during this process; ensure the area is well-ventilated.

## 5. OPERATING INSTRUCTIONS

---


The T Electric Toaster Oven features simple knob controls for temperature and time.



**Image Description:** This close-up image shows the control panel of the oven. There are two main rotary knobs: the top knob is for temperature adjustment, ranging from 100°C to 230°C, and the bottom knob is for the 0-30 minute timer. A red power indicator lamp is located below the timer knob.

### 5.1. Temperature Control

- The top knob controls the oven's temperature.
- Rotate the knob clockwise to select your desired temperature, ranging from 100°C to 230°C.
- Refer to your recipe for the appropriate temperature setting.

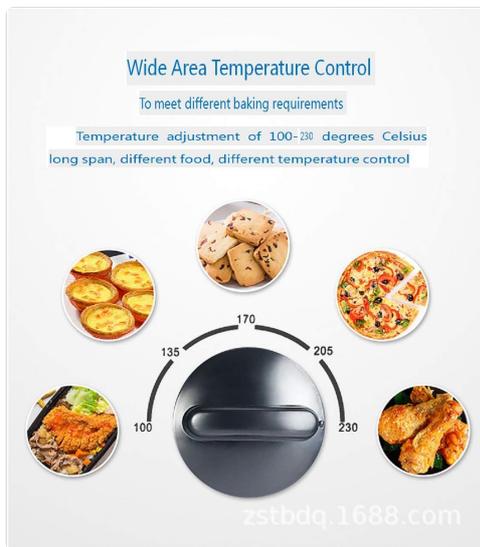


**Image Description:** This image highlights the wide-area temperature control feature. A large rotary knob is shown with temperature markings from 100°C to 230°C. Around the knob, various food items like cookies, egg tarts, pizza, and chicken legs are depicted, suggesting different temperature requirements for different foods.

## 5.2. Time Control

- The bottom knob controls the cooking time.
- Rotate the knob clockwise to set the timer for up to 30 minutes.
- The oven will automatically turn off once the set time has elapsed, indicated by a bell sound.
- To stop cooking before the timer finishes, turn the timer knob counter-clockwise to the "OFF" position.


## 5.3. Double Baking Position

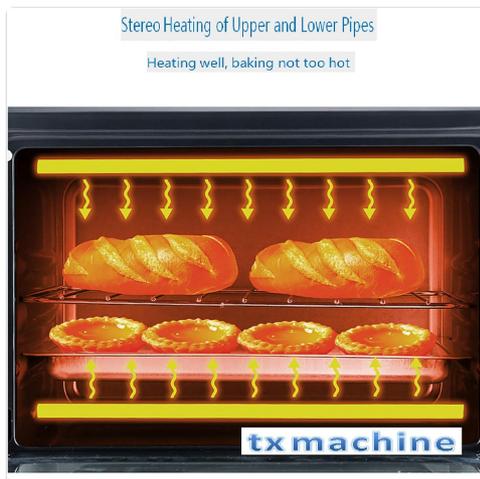

**Image Description:** This image illustrates the stereo heating system and double baking position. It shows the interior of the oven with upper and lower heating elements glowing. On the upper rack, two loaves of bread are baking, while on the lower rack, four egg tarts are placed in a pan. This demonstrates the ability to bake multiple items simultaneously.

- The oven is designed with a double-layer interior, allowing for two baking positions.
- You can place the baking rack and pan at different heights to optimize cooking for various food types or to cook multiple items at once.
- For best results, ensure adequate space around food items for even heat circulation.

## 5.4. Example Applications

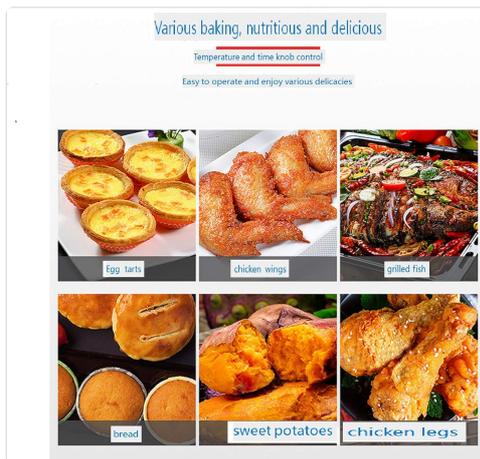

**Image Description:** This image showcases a variety of food items that can be prepared in the oven. It includes egg tarts, chicken wings, grilled fish, bread, sweet potatoes, and chicken legs, demonstrating the oven's versatility for different baking and grilling needs.

The oven is suitable for preparing a wide range of dishes, including:

- Egg tarts
- Chicken wings
- Grilled fish
- Bread
- Sweet potatoes
- Chicken legs
- And various other baked and grilled items.

## 6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

1. **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads, as they may scratch the finish.
3. **Interior Cleaning:** For the interior, wipe with a damp cloth and mild detergent. For stubborn food residues, a non-abrasive oven cleaner designed for toaster ovens can be used, following the product instructions. Ensure all cleaner residue is wiped away.
4. **Glass Door:** The three-layer toughened glass door can be cleaned with a glass cleaner or a damp cloth. Avoid harsh chemicals that could damage the seal.
5. **Accessories:** The baking rack and pan can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing or reinserting into the oven.
6. **Do Not Immerse:** Never immerse the main oven unit, power cord, or plug in water or any other liquid.

## 7. TROUBLESHOOTING

If you encounter any issues with your oven, please refer to the following common problems and solutions:

- **Oven does not turn on:**

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the timer knob is set to a cooking duration and not "OFF".
- Verify that the circuit breaker has not tripped.

- **Food is not cooking evenly:**

- Ensure the oven is preheated to the correct temperature.
- Avoid overcrowding the oven; allow space for heat circulation.
- Rotate food items halfway through cooking if necessary.
- Check if the baking rack is positioned correctly for the food type.

- **Oven produces smoke during operation:**

- A small amount of smoke during first use is normal (refer to "First Use Burn-Off").
- Excessive smoke may indicate food spills or grease buildup. Allow the oven to cool and clean the interior thoroughly.
- Ensure no packaging materials or foreign objects are inside the oven.

- **Timer does not work:**

- Ensure the timer knob is rotated past the "OFF" position to set a time.
- If the issue persists, contact customer support.

For issues not covered here, please contact customer support.

## 8. SPECIFICATIONS



**Image Description:** This image displays key product parameters. It shows a diagram of the oven with dimensions (340mm width, 210mm depth, 215mm height). Below the diagram, a list of specifications is provided: Power: 1500W, Voltage: 110V/60HZ, 220V/50HZ, Product capacity: 12L, Temperature Control Temperature: 100-230°C, Timing: 30 minutes. Note: The current model is 48L, not 12L as shown in this image's text.

Specification	Detail
Brand	T
Model	48L Electric Toaster Oven
Power	1500W

Specification	Detail
Voltage/Frequency	110V/60HZ
Capacity	48 Liters
Temperature Control	100°C - 230°C
Timer	Up to 30 minutes
Control Type	Knob
Material	Stainless Steel (housing)
Door Style	Dropdown Door, Three-layer toughened glass
Product Dimensions (Approx.)	52cm (L) x 39cm (W) x 36cm (H)

Note: The image showing product parameters indicates a 12L capacity and different dimensions. Please refer to the 48L capacity and dimensions provided in the table above for the specific model B07W7PZBPR.

## 9. WARRANTY AND SUPPORT

This product comes with a **12-month guarantee** from the date of purchase.

If you have any questions, require technical assistance, or need to claim warranty service, please contact your retailer or the manufacturer directly. Please have your model number (48L, 110V/60HZ) and purchase information ready when contacting support.

### Related Documents - 48L 110V/60HZ

	<p><a href="#">Keenstone Toaster WT-330 V2 User Manual</a></p> <p>User manual for the Keenstone Toaster WT-330 V2, detailing product features, specifications, operating instructions, safety warnings, and cleaning maintenance.</p>
	<p><a href="#">Manuale di Istruzioni Tosaerba a Batteria Stiga EL 340/380/420 Li 48L</a></p> <p>Manuale completo per i tosaerba a batteria Stiga EL 340 Li 48L, EL 380 Li 48L, EL 420 Li 48L. Include istruzioni di sicurezza, montaggio, uso, manutenzione e risoluzione problemi per un giardinaggio efficiente e sostenibile.</p>

	<p><a href="#">Euro-Pro TO289 6-Slice Stainless Steel Convection Toaster Oven Owner's Manual</a></p> <p>This owner's manual provides essential safety instructions, operating procedures, and maintenance guidelines for the Euro-Pro TO289 6-Slice Stainless Steel Convection Toaster Oven. Learn how to use its various functions including broiling, baking, toasting, grilling, and keep warm, along with care instructions and warranty information.</p>
	<p><a href="#">PYY Bubble Waffle Maker User Manual</a></p> <p>Comprehensive user manual for the PYY Bubble Waffle Maker, detailing safety warnings, ingredients, cooking instructions, troubleshooting, and cleaning methods for commercial and home use.</p>
	<p><a href="#">Rocita J-280C Bone Saw Machine User Manual</a></p> <p>User manual for the Rocita J-280C Bone Saw Machine, covering introduction, safety tips, assembly, operation, cleaning, maintenance, and customer service.</p>
	<p><a href="#">Sunwaytech Hybrid Solar Inverter/Charger User Manual</a></p> <p>This user manual provides comprehensive instructions for the installation, operation, and specifications of the Sunwaytech Hybrid Solar Inverter/Charger, covering setup, settings, troubleshooting, and technical details.</p>