

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DELTA](#) /

› [DELTA 32'x20' Budget PE Party Tent Instruction Manual](#)

DELTA BUDGET-PE-3220

DELTA 32'x20' Budget PE Party Tent Instruction Manual

Model: BUDGET-PE-3220

[Introduction](#) [Safety](#) [Contents](#) [Specifications](#) [Setup](#) [Operation](#) [Maintenance](#)
[Troubleshooting](#) [Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and effective assembly, operation, and maintenance of your DELTA 32'x20' Budget PE Party Tent. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

The DELTA 32'x20' Budget PE Party Tent is designed to provide temporary shelter for various outdoor events, offering protection from sun and light rain. Its robust galvanized steel frame and durable PE fabric ensure stability and longevity when properly installed and maintained.



Image: The DELTA 32'x20' Budget PE Party Tent, showcasing its full assembled structure with side walls.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in serious injury or damage to the product.

- Always secure the tent to the ground using the provided stakes and ropes, especially in windy conditions. In strong winds, the tent should be disassembled.
- Keep open flames, heaters, and other heat sources away from the tent fabric to prevent fire hazards. The tent material is not fireproof.
- While the tent provides UV protection, prolonged exposure to direct sunlight can still cause sunburn. Use additional sun protection as needed.
- Ensure adequate ventilation if using the tent in enclosed spaces or with many occupants.
- Do not hang heavy objects from the tent frame.
- Regularly inspect all components for wear, damage, or loose connections. Replace damaged parts immediately.
- Do not assemble or disassemble the tent during adverse weather conditions (e.g., strong winds, heavy rain, lightning).

3. PACKAGE CONTENTS

Upon receiving your DELTA 32'x20' Budget PE Party Tent, verify that all components are present and

undamaged. The package typically includes 4 boxes weighing a total of 253 pounds.

- 1 x Top Cover (180g PE cloth, waterproof)
- 10 x Window Walls (140g PE, removable)
- 2 x Zipper Doors (140g PE)
- Galvanized Steel Frame Components (1.5 inch / 38mm steel tubes, 1.66 inch / 42mm metal connectors)
- 4 x Super Stakes for added stability
- Ropes and other necessary hardware for assembly



Image: The tent components are packed into three durable black storage bags for transport and storage.

4. SPECIFICATIONS

Feature	Detail
Brand	DELTA
Model Number	BUDGET-PE-3220

Dimensions	32 feet x 20 feet
Floor Area	640 Square Feet
Frame Material	Galvanized Steel (1.5 inch / 38mm tubes, 1.66 inch / 42mm connectors)
Top Cover Material	180g Polyethylene (PE)
Side Wall Material	140g Polyethylene (PE)
Color	White
Water Resistance Level	Waterproof
UV Protection	Yes
Item Weight	267 Pounds
Assembly Required	Yes

5. SETUP INSTRUCTIONS

5.1. Preparation

- Choose a flat, level area for assembly, clear of overhead obstructions and sharp objects.
- Unpack all components and verify against the package contents list.
- Lay out all frame poles and connectors in an organized manner to facilitate assembly.
- Ensure you have at least 2-4 people for assembly, as the tent is large and requires coordinated effort.

5.2. Assembly Steps

1. **Assemble the Roof Frame:** Connect the roof poles and connectors according to the diagram provided in the full manual (not included here). The push-button system allows for quick and secure connections.
2. **Attach the Top Cover:** Carefully drape the top cover over the assembled roof frame. Ensure it is centered and evenly distributed. Secure the cover to the frame using any integrated fasteners or ties.
3. **Assemble the Leg Poles:** Attach the leg poles to the roof frame connectors. Lift the structure gradually, with multiple people, to avoid bending poles.
4. **Secure the Frame:** Once the full frame is upright, ensure all connections are firmly locked.
5. **Install Side Walls and Doors:** Attach the removable window walls and zipper doors to the frame using the provided fasteners. These can be configured as needed for ventilation or enclosure.
6. **Anchor the Tent:** Use the provided super stakes and ropes to firmly anchor the tent to the ground. This is crucial for stability, especially in windy conditions. Drive stakes deep into the ground and tension ropes evenly.



Image: Illustration of the heavy-duty stakes and how they are used to secure the tent to the ground, providing essential stability.



Image: Close-up views of the galvanized steel frame connections, highlighting the secure locking mechanisms and turnbuckle tensioners.

6. OPERATION

The DELTA 32'x20' Budget PE Party Tent is designed for versatile use as a temporary outdoor shelter. It is

suitable for various events such as parties, weddings, picnics, and commercial gatherings.

- **Ventilation:** The removable window walls and zipper doors allow for adjustable ventilation. Open or close them as needed to manage airflow and temperature inside the tent.
- **Weather Protection:** The waterproof top cover provides protection from rain, while the PE fabric offers UV safeguarding. However, the tent is not designed for extreme weather conditions.
- **Entry/Exit:** Utilize the zipper doors for convenient entry and exit. Ensure zippers are functioning smoothly and are not forced.



Image: The DELTA tent with its side walls installed, featuring arched window designs that provide light and visibility while maintaining enclosure.

7. MAINTENANCE

Proper maintenance will extend the lifespan of your party tent.

- **Cleaning Fabric:** Clean the PE fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Cleaning Frame:** Wipe down the galvanized steel frame with a damp cloth to remove dirt and debris.

Inspect for any signs of rust or corrosion, especially at connection points.

- **Storage:** Ensure all fabric components are completely dry before folding and storing them in the provided bags. Store the tent in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Before and after each use, inspect all poles, connectors, fabric, stakes, and ropes for damage, wear, or missing parts. Replace any damaged components promptly.

8. TROUBLESHOOTING

- **Tent is unstable:** Ensure all frame connections are fully engaged and locked. Verify that all stakes are driven deep into the ground and ropes are taut and evenly tensioned. Disassemble in high winds.
- **Water pooling on roof:** Check that the top cover is properly tensioned and evenly distributed over the frame. Adjust the frame or cover as needed to prevent sagging.
- **Difficulty with assembly/disassembly:** Refer to the assembly steps. Ensure you have enough people to assist. Do not force connections; check for proper alignment.
- **Zippers sticking:** Apply a silicone-based lubricant to the zipper teeth. Ensure the fabric is not caught in the zipper.

9. WARRANTY AND SUPPORT

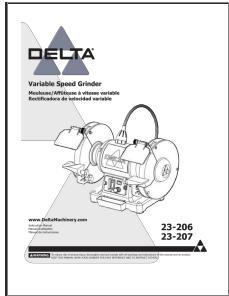
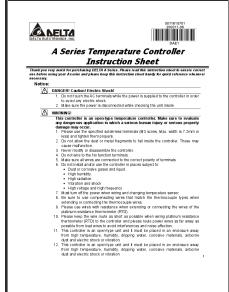
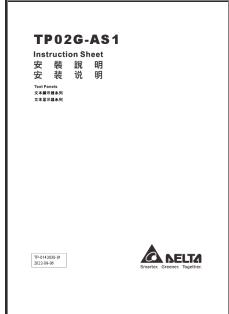
For customer support, inquiries, or to report missing/damaged parts, please contact the seller, WPIC-Store, directly through your Amazon order page or visit the [DELTA Store on Amazon](#).

Protection plans are available for purchase separately to extend coverage beyond the standard return period. Options include 2-Year and 3-Year Protection Plans, as well as a Complete Protect plan.

© 2025 DELTA. All rights reserved.

Related Documents - BUDGET-PE-3220

 User Manual This manual provides instructions for the safe and effective use of the DELTA Z19-3U*P2 Blank Panel. It includes safety information, assembly instructions, and operational guidelines. Please read this manual thoroughly before using the product.	<p>DELTA Z19-3U*P2 Rack Cabinet Blank Panel User Manual</p> <p>User manual for the DELTA Z19-3U*P2 Blank Panel, designed to bridge gaps in rack cabinets. Includes safety information, package contents, specifications, and manufacturer details.</p>
 User Manual This manual provides instructions for the safe and effective use of the DELTA M520 Micro Camera. It includes safety information, assembly instructions, and operational guidelines. Please read this manual thoroughly before using the product.	<p>DELTA M520 Micro Camera User Manual</p> <p>User manual for the DELTA M520 Micro Camera, detailing its features, specifications, safety precautions, and proper disposal. Includes information on its discreet design and technical capabilities.</p>

	<p><u>Delta Variable Speed Grinder 23-206 & 23-207 User Manual</u></p> <p>This manual provides comprehensive instructions for the Delta 23-206 (6-inch) and 23-207 (8-inch) Variable Speed Grinders, covering features, specifications, safety guidelines, operation, maintenance, and troubleshooting.</p>
	<p><u>DELTA FUT007 Remote Control User Manual - MiBOXER LED Lighting</u></p> <p>Comprehensive user manual for the DELTA FUT007 remote control, compatible with MiBOXER/Mi-Light 2.4 GHz LED lighting controllers. Features include zone control, brightness adjustment, and CCT settings.</p>
	<p><u>DELTA A Series Temperature Controller Instruction Sheet - User Manual</u></p> <p>Detailed instruction sheet for DELTA A Series Temperature Controllers (DTA4848, DTA4896, DTA7272, DTA9696). Covers safety, operation, specifications, and technical details for industrial temperature control.</p>
	<p><u>Delta TP02G-AS1 Operator Panel: Instruction Sheet and Specifications</u></p> <p>A comprehensive guide to the Delta TP02G-AS1 operator panel, covering installation, hardware operation, panel functions, specifications, password management, and communication connections. Includes detailed diagrams and safety warnings.</p>