

- Manuals.plus /
- › [SURKER](#) /
 - › SURKER Electric Shaver Razor Grooming Kit User Manual

SURKER 958804XINSOUGU

SURKER Electric Shaver Razor Grooming Kit User Manual

Model: 958804XINSOUGU

IMPORTANT SAFETY INFORMATION

Always use the trimmer first on long hair to avoid pulling or discomfort. Be cautious when using the shaver near water, and ensure it is fully dry before charging. Clean the shaver under running water, but avoid immersing the charging port to prevent electrical hazards. Always follow the provided directions for safe and optimal operation.

PRODUCT OVERVIEW

The SURKER Electric Shaver Razor Grooming Kit is a versatile 3-in-1 grooming solution designed for men. It includes a main shaver unit and four detachable attachments: an electric shaver head, a trimmer head, a facial cleansing brush, and a nose hair trimmer head. This kit is engineered for both dry and wet use, offering flexibility and convenience for various grooming needs.



Image: The SURKER grooming kit, showcasing the main shaver unit along with its four interchangeable heads: the rotary shaver, beard trimmer, nose hair trimmer, and facial cleansing brush.



Image: All components of the SURKER grooming kit laid out, including the main unit, rotary shaver head, beard trimmer head, nose hair trimmer head, facial cleansing brush, protective cap, cleaning brush, and USB charging cable.

SETUP AND CHARGING

Initial Charge

Before first use, fully charge the shaver. The device features a USB charging capability, allowing it to be charged from various sources such as a computer, laptop, USB charger, or power bank. A full charge takes approximately 90 minutes and provides up to 60 minutes of cordless runtime.



Beard Shaver



Storage Box



ON/OFF



LED Indicator



Regular Charging



USB Charge



Image: The main shaver unit displaying its LED indicator, which shows battery percentage, charging status, and travel lock. The image also highlights the USB charging port.

Attaching and Detaching Heads

To attach or detach any of the four grooming heads, align the desired head with the main unit and gently twist until it clicks into place. To remove, twist in the opposite direction and pull away. Ensure the device is turned off before changing heads.



Rotate to put on and
take off the head

Image: A hand demonstrating the twisting motion required to attach or detach the shaver head from the main body of the SURKER grooming device.

OPERATING INSTRUCTIONS

Power On/Off and Travel Lock


Press the power button to turn the device on or off. The upgraded LCD display will show the battery capacity in percent. To activate the travel lock, press and hold the power button for 3 seconds. The travel lock indicator will appear on the display, preventing accidental activation during travel. To unlock, press and hold the power button again for 3 seconds.

Using the Electric Shaver Head


The 3D floating heads with precision blades adapt to the contours of your face, neck, and jaw for a smooth and quick shave. For best results, move the shaver in small, circular motions against the direction of hair growth. This shaver

supports both dry and wet shaving, allowing use with or without shaving cream or gel.

4-Direction Flex Heads

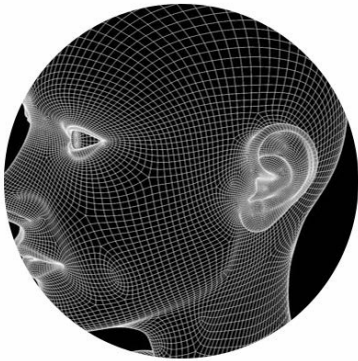

3D Intelligent Floating
Adapt To Facial Contours

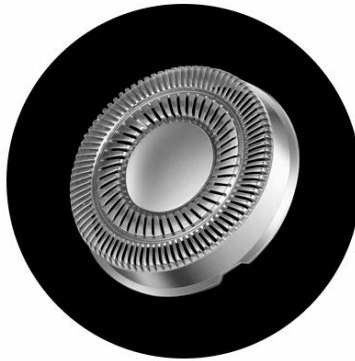

Anti-allergenic
Double-track Blade Net



High Precision Steel

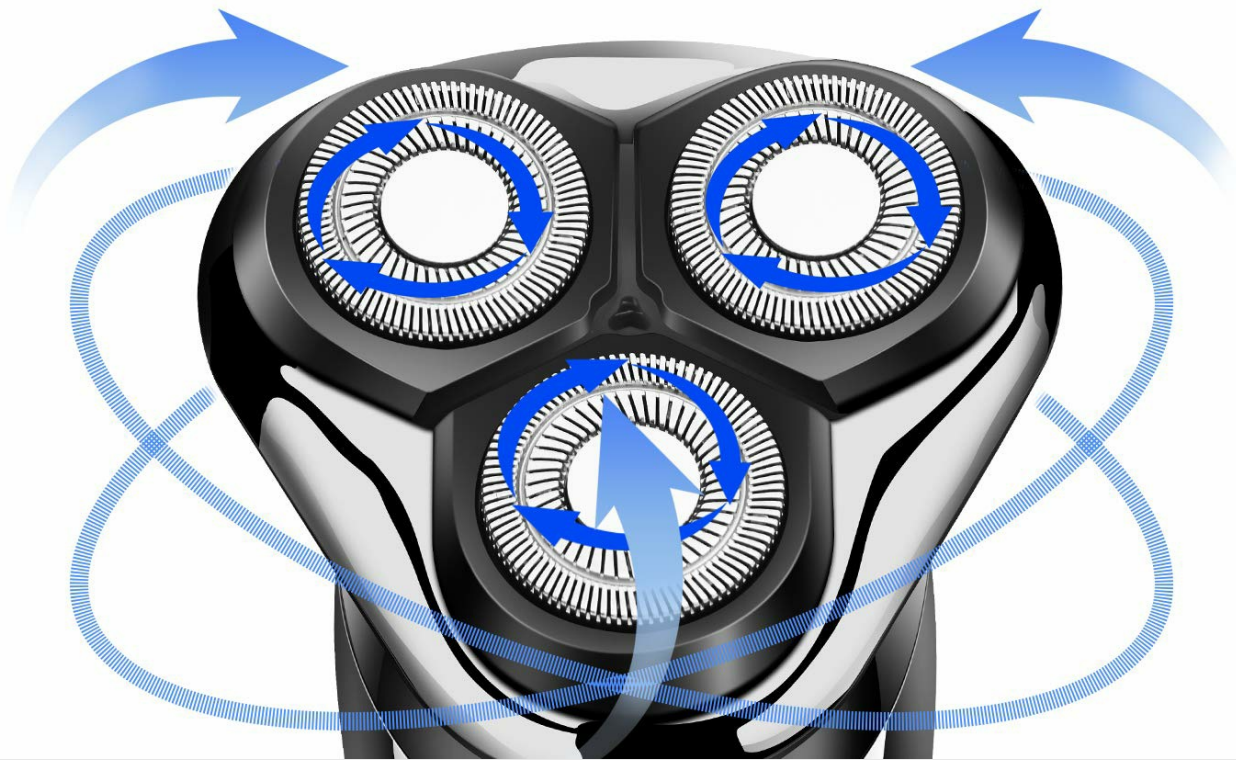 


Image: A close-up of the rotary shaver head, illustrating its 4-direction flex heads, 3D intelligent floating design, anti-allergenic double-track blade net, and high precision steel blades.

Using Other Attachments

- **Trimmer Head:** Ideal for shaping beards, sideburns, and general hair trimming. Use with or without the comb attachment for desired length.
- **Nose Hair Trimmer Head:** Gently insert the trimmer into the nostril or ear canal. Move it slowly to trim unwanted hair.
- **Facial Cleansing Brush:** Attach the brush head and apply your preferred facial cleanser. Gently move the brush in circular motions on your face for deep cleansing.



Electric shaver

Nose hair trimmer

Hair trimmer

Face washing brush

Image: Visual guide showing the specific areas of the face and head where each attachment is intended for use: electric shaver for beard, nose hair trimmer for nose, hair trimmer for head/hair, and face washing brush for facial cleansing.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your SURKER grooming kit. The device is fully washable, making cleaning simple and efficient.

Cleaning the Shaver Heads

1. Turn off the device and detach the head you wish to clean.
2. Rinse the head under running water. For the shaver head, you can open the blade cover to rinse the inside thoroughly.
3. Use the small cleaning brush provided to remove any trapped hairs from the blades or mesh.

4. Allow the head to air dry completely before reattaching or storing.



Image: The SURKER electric shaver being rinsed under running water, demonstrating its waterproof design. A magnified inset shows water flowing through the open shaver head for thorough cleaning.

General Care and Storage

- Always ensure the charging port is dry before connecting the USB cable.
- Store the device and its attachments in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep the protective cap on the shaver head when not in use to prevent damage to the blades.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted; Travel lock is activated.	Charge the device for at least 90 minutes. Deactivate travel lock by pressing and holding the power button for 3 seconds.
Poor shaving performance / pulling hair.	Blades are dull or clogged with hair; Hair is too long.	Clean the shaver head thoroughly. If hair is long, use the trimmer attachment first before shaving. Consider replacing the shaver head if blades are worn.
Charging indicator not working.	Charging cable or adapter issue; Charging port is wet.	Ensure the USB cable and adapter are functioning correctly. Verify the charging port is completely dry before plugging in.
Attachments do not fit or detach easily.	Incorrect alignment; Debris in connection.	Ensure correct alignment and twist firmly until it clicks. Clean any debris from the connection points on both the head and the main unit.

SPECIFICATIONS

Brand: SURKER
Model Name: 958804XINSOUGU
Product Dimensions: 2.76 x 8.46 x 9.65 inches
Item Weight: 1.08 Pounds
Power Source: Battery Powered (1 AA battery included)
Special Features: Dry Shave, Rechargeable, Fast Charging, Travel Lock, Washable
Recommended Uses: Beard, Nose Hair, Face, Eyebrow
UPC: 645312946693
ASIN: B07W8TQ2QL

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or contact the manufacturer directly. For technical support or assistance with your SURKER Electric Shaver Razor Grooming Kit, please reach out to SURKER customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07W8TQ2QL>

More documents and user manuals: **<https://manuals.plus/>**