

[Manuals.plus](#) /

› [fullstar](#) /

› Fullstar The Original Pro Chopper - 9-in-1 Vegetable Chopper Instruction Manual (Model: Vegetable Chopper)

fullstar Vegetable Chopper

Fullstar The Original Pro Chopper - 9-in-1 Vegetable Chopper Instruction Manual

Model: Vegetable Chopper (9-in-1, White)

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Fullstar The Original Pro Chopper. This versatile kitchen tool is designed to simplify food preparation by offering multiple functions including chopping, slicing, dicing, and spiralizing. Please read all instructions carefully before first use and retain this manual for future reference.



Image 1.1: The Fullstar 9-in-1 Vegetable Chopper with its components and examples of chopped food.

2. PRODUCT COMPONENTS

Your Fullstar Pro Chopper includes the following components:

- **Chopper Lid:** The top pressing component with a soft grip handle.
- **Catch Tray (1200ml capacity):** The transparent container that collects chopped food.
- **Blade Organizer:** For safe storage of unused blades.
- **Finger Guard:** For protecting fingers during use, especially with smaller items.
- **Peeler:** A bonus tool for peeling vegetables and fruits.
- **Cleaning Scraper:** For removing food residue from the chopper lid.
- **2 Cleaning Brushes:** For thorough cleaning of blades and crevices.
- **7 Interchangeable Blades:** Includes various dicing, slicing, and spiralizing inserts.



Image 2.1: Overview of all included components for the Fullstar 9-in-1 Chopper.

3. SETUP

Follow these steps to set up your Fullstar Pro Chopper for use:

- 1. Unpack Components:** Carefully remove all parts from the packaging. Wash all components with warm, soapy water before first use, then rinse and dry thoroughly.
- 2. Select Blade:** Choose the desired blade insert for your task (e.g., large dicing, small dicing, spiralizer).
- 3. Insert Blade:** Align the chosen blade insert with the grooves in the chopper base and press down firmly until it clicks into place. Ensure it is securely seated.
- 4. Attach Catch Tray:** Place the chopper base with the inserted blade onto the catch tray. The non-skid rubberized bottom of the catch tray will help keep it stable on your work surface.



1. Place blade insert into chopper



2. Push top lid down

Image 3.1: Step-by-step visual guide for inserting a blade and securing the lid.

4. OPERATING INSTRUCTIONS

Always exercise caution when handling sharp blades. Use the finger guard when appropriate.

4.1. Dicing and Chopping

1. Prepare your vegetable or fruit by cutting it into pieces that fit onto the blade grid. For harder vegetables like carrots or potatoes, pre-cut into smaller, manageable sections.
2. Place the prepared food item onto the center of the chosen dicing blade.
3. Align the chopper lid over the food and press down firmly and quickly with both hands on the soft grip handle. The food will be pushed through the blade and into the catch tray below.
4. Repeat as needed.



Big Dicer



Small Dicer



Image 4.1: Examples of dicing with different blade sizes and the chopper in action.

4.2. Spiralizing

1. Select either the ribbon or spiralizer insert.
2. Insert the chosen spiralizer blade into the chopper base.
3. For best results, use firm, straight vegetables like zucchini or carrots. Trim the ends of the vegetable.
4. Place the vegetable onto the spiralizer blade and twist while applying gentle downward pressure. The spiralized vegetables will collect in the catch tray.



Ribbon



Spiral



Image 4.2: Demonstrating the ribbon and spiralizer inserts for creating vegetable noodles.

4.3. Other Functions (Juicer, Peeler, Egg Slicer, Yolk Splitter)

Your chopper comes with additional tools to enhance your food preparation:

- **Juicer:** Attach the juicer insert to extract juice from citrus fruits.
- **Peeler:** Use the included peeler for removing skins from fruits and vegetables.
- **Egg Slicer:** Insert the egg slicer blade to create uniform slices of hard-boiled eggs.
- **Yolk Splitter:** Use the yolk splitter attachment to separate egg yolks from whites.



Juicer



Peeler



Egg Slicer



Yolk Splitter

Image 4.3: Demonstrating the juicer, peeler, egg slicer, and yolk splitter functions.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and performance of your Fullstar Pro Chopper.

- **Immediate Cleaning:** Clean the chopper immediately after each use to prevent food from drying and sticking.
- **Dishwasher Safe:** All components of the Fullstar Pro Chopper are dishwasher safe (top rack recommended).
- **Hand Washing:** For hand washing, disassemble all parts. Use warm, soapy water and the provided cleaning brushes to remove any food residue from the blades and crevices. Rinse thoroughly under running water.
- **Blade Care:** Handle blades with extreme care. Use the cleaning scraper to push out any trapped food from the blade grids. Always store blades in the blade organizer when not in use.
- **Drying:** Ensure all components are completely dry before reassembling or storing to prevent rust and bacterial growth.



Image 5.1: Illustration of cleaning the chopper blade with a brush.

6. TROUBLESHOOTING

If you encounter any issues with your Fullstar Pro Chopper, refer to the following common solutions:

Problem	Possible Cause	Solution
Food not chopping cleanly	Food piece is too large or too hard; insufficient force applied.	Pre-cut food into smaller pieces. Apply firm, quick pressure to the lid. Ensure blades are clean.
Food stuck in blade grid	Fibrous vegetables or small pieces lodged.	Use the cleaning scraper or brush to carefully dislodge food. Do not use fingers.
Chopper slides on counter	Counter surface is wet or oily; non-skid base is dirty.	Ensure counter surface is clean and dry. Clean the non-skid base of the catch tray.
Difficulty inserting/removing blades	Blade not aligned correctly; residue in grooves.	Ensure blade is aligned with grooves. Clean any residue from the blade and chopper base grooves.

7. SPECIFICATIONS

- **Brand:** fullstar
- **Model Number:** Vegetable Chopper
- **Product Dimensions:** 9.06"L x 10.55"W x 4.92"H
- **Material:** Stainless Steel (Blades), BPA-Free Plastic (Body)
- **Color:** White
- **Special Feature:** Interchangeable Blades
- **Recommended Uses:** Egg, Vegetable, Fruit
- **Product Care Instructions:** Dishwasher Safe (Top Rack)
- **Blade Material:** 420 Stainless Steel
- **Item Weight:** 2.97 pounds (1.35 Kilograms)
- **Operation Mode:** Manual
- **UPC:** 725101346283

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact Fullstar customer service directly. Keep your purchase receipt as proof of purchase. For further assistance, visit the official Fullstar website or contact their support channels.