

Nintendo DSi

Nintendo DSi Matte Black User Manual

Model: DSi (045496718749-cr)

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Nintendo DSi Matte Black console. Please read through these instructions carefully to ensure proper use and to maximize your gaming experience.

SETUP

1. Unboxing and Initial Inspection

Upon receiving your Nintendo DSi, carefully remove all components from the packaging. Verify that the console and any included accessories are present and undamaged. As this is a renewed product, minor cosmetic imperfections may be present.

2. Powering On the Console

To power on your Nintendo DSi, open the console. Locate the **POWER** button on the lower left side of the bottom screen. Press this button to turn on the system. The power indicator light will illuminate.



Figure 1: Nintendo DSi Matte Black console in open position, displaying the dual screens, D-pad, action buttons, and power button.

3. Inserting a Game Card

The Nintendo DSi supports Nintendo DS game cards. To insert a game card, locate the game card slot on the top edge of the console. Gently push the game card into the slot until it clicks into place. To remove, press the card in again until it springs out.



Figure 2: Bottom view of the Nintendo DSi, highlighting the game card slot for inserting Nintendo DS cartridges.

4. Initial System Settings

Upon first power-on or after a system reset, you may be prompted to configure basic settings such as language and country of residence. Follow the on-screen instructions using the stylus on the touchscreen to complete these settings.

OPERATING THE NINTENDO DSi

1. Dual Screens and Touchscreen Functionality

The Nintendo DSi features dual 3.25-inch screens. The bottom screen is a touchscreen, which can be operated using the included stylus or your finger. The top screen typically displays game graphics or additional information.



Figure 3: Nintendo DSi Matte Black console with the stylus positioned for touchscreen interaction.

2. Camera Features

The DSi includes both an inward-facing and an outward-facing camera. These cameras allow you to take photos and apply various effects using 11 different lenses. Access the camera application from the main menu.

3. Wireless Connectivity and Online Features

The console can connect wirelessly to browse the internet, share photos, and engage in multiplayer gaming with other DSi users. Access these features through the respective applications on the DSi menu.

4. Nintendo DSi Shop

The Nintendo DSi Shop allows users to download exclusive games, clocks, and calendar applications. An internet connection is required to access and download content from the shop.

5. Music Playback

The Nintendo DSi supports music playback in AAC format. Music files can be stored on a standard SD Card (not included) and accessed through the Nintendo DSi Sound application.

MAINTENANCE

1. Cleaning the Console

Use a soft, dry cloth to clean the exterior of the console. For screens, a microfiber cloth is recommended. Avoid using harsh chemicals or abrasive materials, as these can damage the screens or casing.

2. Battery Care

To prolong battery life, avoid exposing the console to extreme temperatures. If the console will not be used for an extended period, ensure it is fully charged before storage and periodically recharge it to prevent deep discharge.

3. SD Card Handling

Always ensure the console is powered off before inserting or removing an SD Card. Improper handling can lead to data corruption or damage to the card slot.

TROUBLESHOOTING

Console Does Not Power On

If the console does not power on, ensure the battery is charged. Connect the AC adapter and attempt to power on the system. If the issue persists, the battery may need replacement or there could be an internal hardware issue.

Screen Issues (Discoloration, Scratches)

As a renewed product, minor screen imperfections such as light scratches or slight discoloration may be present. If these issues significantly impair functionality or are beyond expected wear, refer to the seller's return or warranty policy.

Game Card Not Recognized

Ensure the game card is fully and correctly inserted into the slot. Try removing and re-inserting the card. Clean the contacts on the game card with a soft, dry cloth if necessary. Test with another game card to determine if the issue is with the console or the specific game card.

SPECIFICATIONS

| Feature | Detail |
|-----------------------|---------------------------|
| Model Number | 045496718749-cr |
| Screen Size | Dual 3.25-inch screens |
| Cameras | Inward and outward facing |
| Wireless Connectivity | Supported |
| Audio Format | AAC (via SD Card) |
| Dimensions | 8 x 5 x 9 inches |
| Weight | 14 ounces |
| Manufacturer | Nintendo |



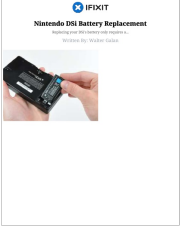
WARRANTY AND SUPPORT

This Nintendo DSi is a renewed product. Please refer to the seller's specific warranty and return policy for details regarding coverage and support. Typically, renewed products come with a limited warranty from the seller, often including a return period for defects or dissatisfaction.

For general product information and health and safety guidelines, you may visit the official Nintendo website at www.nintendo.com/healthsafety/.

Protection plans may be available for purchase separately to extend coverage beyond the seller's policy. Check with your retailer for available options.

Related Documents - DSi

| | |
|---|--|
|  | <p>Nintendo DS Main Circuit Board Replacement Guide - iFixit</p> <p>Detailed step-by-step instructions from iFixit for replacing the main circuit board (motherboard) on a Nintendo DS. Includes tools, parts, and disassembly/reassembly procedures.</p> |
|  | <p>Nintendo DSi XL Quick-Start Guide</p> <p>A quick-start guide for the Nintendo DSi XL, covering initial system setup, taking photos, loading software, and introducing built-in applications. Learn how to configure settings, use the camera, and troubleshoot common issues.</p> |
|  | <p>Nintendo DSi Battery Replacement Guide</p> <p>Step-by-step guide to replacing the battery in your Nintendo DSi console. Learn how to safely remove and replace the battery with simple tools.</p> |



Thank you for choosing the
 Pokémon™ Rumble Blast game for
 the Nintendo 3DS™ system.

Please note that, for this manual, "Nintendo 3DS" refers to both Nintendo 3DS and Nintendo 3DS XL.

Please read this manual carefully before using the software. Please also read your operations manual for more details and tips to help you enjoy your playing experience.

⚠ IMPORTANT

Before using this software, read all content within the Health and Safety Information application on the HOME Menu.

To access this application, tap the  icon on the HOME Menu, then tap **Open** and read the contents of each section carefully. When you are finished, press  to return to the HOME Menu.

You should also thoroughly read your operations manual, including the "Health and Safety Information" section, before using this software.

Protecting Your Privacy

This software allows you to share information, such as your Mii™ and Mii name, with other users through local communication. Keep the following in mind when sharing personal information through these features.

- To protect your privacy, do not give out personal information such as last name, phone number, birth date, age, school, e-mail, or home address when communicating with others.

IMPORTANT

Your Nintendo 3DS system and this software are not designed for use with any unauthorized device or unlicensed accessory. Such use may be illegal, voids any warranty, and is a breach of your obligations under the User Agreement. Further, such use may lead to injury to yourself or others and may cause performance issues and/or damage to your Nintendo 3DS system and related services. Nintendo (as well as any Nintendo licensee or distributor) is not responsible for any damage or loss caused by the use of such device or unlicensed accessory. Except as authorized, copying of any Nintendo software is illegal and is strictly prohibited by domestic and international intellectual property laws. "Back-up" or "archival" copies are not authorized.

Nintendo respects the intellectual property of others, and we ask Nintendo 3DS software Content Providers to do the same. In accordance with the Digital Millennium Copyright Act in the US, the Electronic Commerce Directive in the EU, and other applicable law, we have adopted a policy of removing, in appropriate circumstances, all of our sole discretion, any Nintendo 3DS software that infringes on any other's intellectual property. If you believe your intellectual property rights are being infringed, please visit www.nintendo.com/ippolicy to view the full policy and understand your rights.

© 2011 Pokémon.
© 1995-2011 Nintendo/Creatures
Inc./GAME FREAK inc. Developed
by Ambrella.

Trademarks are property of their respective owners. Nintendo 3DS is a trademark of Nintendo.

Powered by mobiclip

CTR-P-ACCE-USZ

Pokémon Rumble Blast - Nintendo 3DS Game Manual

Official Nintendo 3DS manual for Pokémon Rumble Blast, detailing gameplay, controls, and safety information for players.



Mario Party 2 Instruction Booklet for Nintendo 64

Official instruction booklet for Mario Party 2 on the Nintendo 64 system. Learn about game controls, characters, board game rules, mini-games, and how to play. Includes essential information for maximizing your gaming experience.



[Nintendo Entertainment System \(NES\) Instruction Manual and Warranty Information](#)

Official instruction manual and warranty information for the Nintendo Entertainment System (NES), covering setup, operation, troubleshooting, and parts ordering. Learn how to connect your NES, play games, and understand warranty terms.

