

[Manuals.plus](#) /

› [Adviace](#) /

› Adviace Replacement Fireplace Fan Blower and Heating Element for Heat Surge Electric Fireplace Models ADL-2000M-X, ADL-2000MX

Adviace ADL-2000M-X

Adviace Replacement Fireplace Fan Blower and Heating Element

Brand: Adviace | **Model:** ADL-2000M-X, ADL-2000MX

INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your Adviace Replacement Fireplace Fan Blower and Heating Element. This unit is designed to replace existing fan blower and heating elements in compatible electric fireplaces, enhancing heat distribution. Please read this manual thoroughly before installation and use to ensure safe and efficient operation.

SAFETY INFORMATION

- Always disconnect power to the fireplace unit before attempting any installation, maintenance, or repair.
- Installation should only be performed by individuals with appropriate electrical knowledge and experience.
- Ensure all wiring connections are secure and comply with local electrical codes.
- Do not operate the unit if any components are damaged or if wiring is exposed.
- Keep children and pets away from the fireplace during operation and maintenance.
- This unit generates heat. Avoid touching the heating element directly during or immediately after operation.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x Replacement Fan Blower Assembly
- 1 x Heating Element (integrated)

COMPATIBILITY

This replacement unit is compatible with the following Heat Surge and Amish electric fireplace series:

- ADL-2000M-X
- ADL-2000MX
- Roll-N-Glow
- Accent
- Cozy
- Curio insert
- HT series
- X5, X5A, X5B, X5C, X5C-S
- X1, X3, X4

Important: Please measure the space available in your fireplace unit and compare it with the dimensions provided in the Specifications section to ensure proper fit before installation.

SETUP AND INSTALLATION

1. **Preparation:** Ensure the electric fireplace is completely unplugged from the power outlet. Allow the unit to cool down if it has been recently in use.
2. **Access Old Unit:** Carefully open the fireplace casing to access the existing fan blower and heating element assembly. Refer to your fireplace's original manual for specific access instructions.
3. **Disconnect Wiring:** Take clear photos of the existing wiring connections before disconnecting them. This will serve as a reference for connecting the new unit. Disconnect all wires leading to the old fan blower and heating element.
4. **Remove Old Unit:** Unscrew or unclip the old fan blower and heating element assembly from its mounting position.
5. **Install New Unit:** Position the Adviace replacement unit into the designated space. Ensure it fits securely.
6. **Connect Wiring:** Using your reference photos, connect the wiring from the fireplace to the new Adviace unit. Ensure all connections are tight and correctly matched (e.g., power, ground, control wires).
7. **Secure Unit:** Fasten the new assembly using the appropriate screws or clips.
8. **Close Casing:** Carefully close and secure the fireplace casing.
9. **Test:** Plug the fireplace back into the power outlet and test the fan and heating functions.



Image 2: Angled view of the replacement unit, showing the blower fan and heating coils.



Image 3: Detailed view of the wiring terminals on the heating element, highlighting connection points.



Image 4: Side profile of the blower motor, showing its compact design.

OPERATION

Once installed, the Adviace Replacement Fan Blower and Heating Element operates in conjunction with your electric fireplace's existing controls. Refer to your fireplace's original operating manual for instructions on how to activate the fan and heating functions.

- The fan blower is designed to distribute warm air generated by the heating element into the room.
- The heating element provides the warmth, typically controlled by a thermostat or power settings on your fireplace.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your replacement unit:

- **Cleaning:** Periodically, with the power disconnected, gently clean any dust or debris from the fan blades and heating element using a soft brush or vacuum cleaner with a brush attachment. Ensure no foreign objects obstruct the airflow.
- **Inspection:** Annually, or if you notice reduced performance, inspect the wiring for any signs of wear, fraying, or loose connections. Check the fan blades for any damage.
- **Do Not Lubricate:** The fan motor is typically sealed and does not require lubrication. Attempting to lubricate it may cause damage.



Image 5: Underside view of the blower, showing mounting points and general construction.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan or Heater not working	No power to fireplace; Loose wiring connection; Faulty fireplace control.	Check if fireplace is plugged in and receiving power. Verify all wiring connections are secure. Consult your fireplace's manual for control troubleshooting.
Reduced airflow or heat output	Dust/debris on fan blades or heating element; Obstruction in airflow path.	Disconnect power and clean the fan and heating element. Ensure no objects are blocking air vents.
Unusual noise from unit	Loose mounting; Debris in fan; Damaged fan blade.	Disconnect power and check if the unit is securely mounted. Inspect fan for debris or damage. If noise persists, contact support.

If troubleshooting steps do not resolve the issue, please contact Adviace customer support.

SPECIFICATIONS

- **Fan Blower Size:** L 10" x W 3.5" x H 3"
- **Heater Element Size:** L 8.27" x W 1.38"
- **Heat Output:** 1350 Watts
- **Voltage:** 120V
- **Power Source:** Corded Electric
- **Installation Type:** User-Installation
- **Item Weight:** 1.94 pounds (0.88 Kilograms)

- **Model Name:** ADL-2000M-X



Image 6: End view of the blower, showing the fan housing and motor connection.



Image 7: Close-up of the blower motor and the tangential fan blades, responsible for air movement.

WARRANTY AND SUPPORT

This Adviace product comes with a Limited Warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty information included with your original purchase or contact Adviace customer support. For technical assistance, troubleshooting, or warranty claims, please contact Adviace customer support through the retailer where the product was purchased or visit the official Adviace website.

Manufacturer: Bigbox

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question