

[Manuals.plus](#) /

› [Power Your Fun](#) /

› Power Your Fun Turbo Tops Mini Car Spinning Tops Instruction Manual

Power Your Fun Turbo Tops Mini Car Spinning Tops

Turbo Tops Mini Car Spinning Tops

INSTRUCTION MANUAL

Brand: Power Your Fun | Model: Turbo Tops Mini Car Spinning Tops

1. Introduction

The Power Your Fun Turbo Tops are innovative mini car spinning tops designed for engaging play. These gyro cars can be spun, raced, battled, stacked, and balanced, offering multiple ways to interact. This manual provides instructions for safe and optimal use of your Turbo Tops.

**Ages
3+**



BATTLE, RACE & SPIN!

Image 1.1: Turbo Tops in action, demonstrating spinning and stacking capabilities. Suitable for ages 3 and up.

2. Safety Information

- **Recommended Age:** Suitable for children aged 3 years and up.
- **Small Parts:** This product contains small parts which may pose a choking hazard for children under 3 years. Adult supervision is recommended.
- **Use on Flat Surfaces:** Always use the Turbo Tops on a flat, smooth surface to prevent damage and ensure stable spinning.
- **Avoid Hair and Clothing:** Keep long hair and loose clothing away from spinning tops to prevent entanglement.

3. Package Contents

Your Power Your Fun Turbo Tops package typically includes:

- 2 x Turbo Tops Mini Car Spinning Tops
- 2 x Spin Rings (for finger spinning/balancing)
- 2 x Cones (for balancing)

COLLECT 'EM ALL!



Image 3.1: Example of Turbo Tops designs and included cones.

4. Setup

No assembly is required for the Turbo Tops. They are ready for play directly out of the package. Ensure you have a clean, flat, and smooth surface for optimal performance.

5. Operating Instructions

The Turbo Tops offer various play modes. Experiment to find your favorite!

5.1 Basic Spinning

1. Hold the Turbo Top firmly between your thumb and forefinger.
2. Place the bottom of the top on a flat surface.
3. Twist your wrist quickly to generate a spin. Release the top as it begins to spin.

5.2 Battle Mode

Launch two or more Turbo Tops simultaneously into an arena or designated play area. The last top spinning wins the battle.

5.3 Race Mode

Place two or more Turbo Tops side-by-side and launch them forward. Observe which top travels the furthest or fastest.



Image 5.1: Visual representation of Battle and Race modes for Turbo Tops.

5.4 Stacking and Balancing

- **On Top Mode:** Spin one Turbo Top, then carefully place another spinning Turbo Top on top of it.
- **Cone Mode:** Spin a Turbo Top and attempt to balance it on one of the included cones.
- **Finger Ring Mode:** Attach a spin ring to your finger. Spin a Turbo Top and try to balance it on the ring. You can also stack multiple tops on a ring.



Image 5.2: Demonstrating the use of spin rings for balancing Turbo Tops.

5.5 Advanced Play Modes

Explore various orientations and techniques for spinning:

- **Forward Mode:** Spin the top to move it forward like a car.
- **Upright Mode:** Spin the top while it remains upright.
- **Head Spin Mode:** Spin the top upside down.
- **Inverted Mode:** Spin the top on its side.
- **Balance Mode:** Spin and balance the top on various objects or surfaces.

PLAY YOUR WAY

FORWARD MODE



UPRIGHT MODE



HEAD SPIN MODE



INVERTED MODE



BATTLE MODE



ON TOP MODE



CONE MODE



FINGER RING MODE



BALANCE MODE



TURBOTOPS
GYRO CARS

Image 5.3: Visual guide to various play modes for Turbo Tops.

5.6 Video Demonstration

Your browser does not support the video tag.

Video 5.4: Official demonstration of Power Your Fun Turbo Tops, showcasing various spinning, stacking, and balancing techniques.

6. Maintenance

- **Cleaning:** Wipe the Turbo Tops with a soft, dry cloth to remove dust and debris. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the tops in a cool, dry place away from direct sunlight when not in use.

7. Troubleshooting

- **Top does not spin well:** Ensure you are using a smooth, flat surface. Practice your spinning technique for a quick, firm twist.
- **Tops fall over quickly:** This can be due to an uneven surface or insufficient initial spin. Ensure the top is released vertically.

8. Specifications

Package Dimensions	6.57 x 6.26 x 1.97 inches
Item Weight	3.52 ounces
Recommended Age	3 years and up

9. Warranty and Support

For warranty information or product support, please refer to the packaging or contact the manufacturer directly. Keep your purchase receipt for any warranty claims.