

[Manuals.plus](#) /

› [Whirlpool](#) /

› Whirlpool 8.5 Kg 5 Star Semi-Automatic Top Loading Washing Machine ACE 8.5 TURBO DRY User Manual

Whirlpool ACE 8.5 TRB DRY

Whirlpool 8.5 Kg 5 Star Semi-Automatic Top Loading Washing Machine

MODEL: ACE 8.5 TURBO DRY

Introduction and Safety Information

Thank you for choosing the Whirlpool 8.5 Kg 5 Star Semi-Automatic Top Loading Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions:

- Always ensure the washing machine is connected to a properly grounded electrical outlet.
- Do not operate the machine if the power cord is damaged. Contact authorized service personnel.
- Keep children and pets away from the appliance during operation.
- Do not wash items that have been soiled with flammable substances.
- Always unplug the machine before cleaning or performing any maintenance.
- Ensure the water inlet and drain hoses are securely connected to prevent leaks.

Product Overview

The Whirlpool ACE 8.5 TURBO DRY is a semi-automatic top-loading washing machine designed for efficient and convenient laundry care. It features a robust design and multiple wash programs to suit various fabric types.



Figure 1: Front-side view of the Whirlpool 8.5 Kg Semi-Automatic Washing Machine.

Key Features:

- **TURBODRY Technology:** Provides enhanced drying performance.
- **1400 RPM Motor:** High rotational speed for faster drying.
- **Big Wheels and Smart Handle:** Facilitates easy movement of the machine.
- **3 Wash Programs:** Includes Delicate, Normal, and Heavy cycles.
- **25-minute Soak Time:** For effective removal of tough dirt.
- **Impeller:** Designed to provide optimal motion for effective dirt removal.
- **Autorestart:** Resumes operation automatically after a power interruption.
- **End of Cycle Buzzer:** Alerts you when a wash or spin cycle is complete.



Figure 2: Top view of the washing machine, showing the wash tub (left) and spin tub (right) with their lids open.



Figure 3: Close-up view of the control panel, detailing the various operational dials.



Figure 4: Rear view of the washing machine, illustrating the power cord and drain hose connections.

Setup and Installation

Unpacking:

Carefully remove the washing machine from its packaging. Ensure all packing materials are removed. Check for any damage during transit. The package includes: 1 Washing Machine, Inlet Pipe, User Manual, Spin Cap.

Placement:

- Place the machine on a firm, level surface to minimize vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and ease of use.
- Avoid placing the machine in direct sunlight or in areas with high humidity.




Figure 5: Washing machine dimensions for proper placement and installation.

Water Connection:

- Connect the inlet pipe to a water tap and to the water inlet on the washing machine. Ensure connections are tight to prevent leaks.
- Position the drain hose to allow for proper water drainage, either into a sink or a dedicated drain pipe.

Power Connection:

- Plug the power cord into a grounded electrical outlet.
- Verify that the voltage supply matches the machine's requirements (230 Volts).

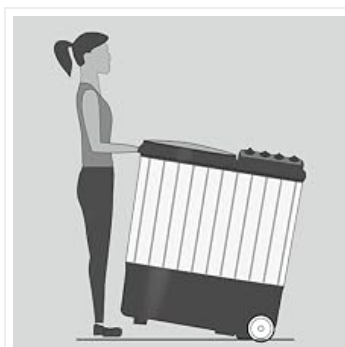

Operating Instructions

Loading Laundry:

- Open the wash tub lid and load clothes. Do not overload the machine; ensure clothes can move freely.
- Add appropriate detergent to the wash tub.



Figure 7: Water filling the wash tub with clothes inside.

Selecting a Wash Program:

Turn the **Fabric Type** dial to select one of the three available wash programs:

- **Delicate:** For fragile items requiring gentle washing.
- **Normal:** For everyday laundry with moderate soil.
- **Heavy:** For heavily soiled items or sturdy fabrics.



Figure 8: Fabric Type selector dial for choosing the appropriate wash program.

Setting the Wash Timer:

Turn the **Wash Timer** dial to set the desired wash duration. The machine also offers a 25-minute soak time for tough stains.



Figure 9: The 25-minute soak function helps in removing stubborn dirt and stains.

Drain Selector:

Use the **Drain Selector** dial to control water drainage from the wash tub.

Turbo Dry Function:

After washing, transfer clothes to the spin tub. Close the spin tub lid and turn the **Turbo Dry** dial to set the spin duration. The 1400 RPM motor ensures faster drying.

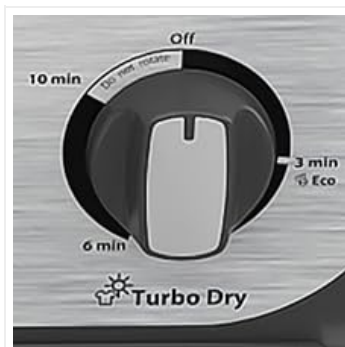


Figure 10: Turbo Dry dial for selecting spin duration, offering efficient drying.

End of Cycle and Autorestart:

- An audible buzzer will sound at the end of each cycle.
- In case of a power outage, the Autorestart feature will resume the cycle from where it left off once power is restored.



Figure 11: The End of Cycle Buzzer alerts you when laundry is done.



Figure 12: The Autorestart feature ensures convenience during power fluctuations.

Maintenance and Care

Cleaning the Exterior:

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish. The machine features a rust-proof plastic body.



Figure 13: The durable plastic body is designed to be rust-proof.

Cleaning the Wash Tub and Spin Tub:

Periodically clean the interior of both tubs to prevent detergent residue buildup and odors. Run a short cycle with hot water and a cup of white vinegar or a washing machine cleaner.

Lint Filter Cleaning:

Regularly clean the lint filter located inside the wash tub to ensure efficient operation and prevent lint transfer to clothes.



Figure 14: The lint filter collects fibers during washing and should be cleaned regularly.

Impeller Care:

Ensure the impeller is free from debris or tangled items to maintain optimal washing performance.



Figure 15: The impeller's design ensures effective movement of clothes for thorough cleaning.

Troubleshooting

If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start	No power supply; Lid not closed properly; Timer not set.	Check power connection; Ensure lids are fully closed; Set the wash/spin timer.
Water does not fill	Water tap off; Water inlet hose kinked or blocked.	Open water tap; Straighten hose or clear blockage.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to drain.	Straighten hose or clear blockage; Turn Drain Selector to 'Drain'.
Excessive vibration/noise	Machine not level; Uneven load; Transit bolts not removed.	Adjust machine to be level; Redistribute laundry evenly; Ensure all transit bolts are removed during installation.
Poor washing results	Overloading; Insufficient detergent; Incorrect wash program.	Reduce load size; Use correct amount of detergent; Select appropriate wash program.

Specifications

Feature	Detail
Model Number	ACE 8.5 TRB DRY WINE DAZZLE (5YR)
Capacity	8.5 kg
Type	Semi-Automatic Top Loading
Color	Wine Dazzle
Product Dimensions (D x W x H)	50.7D x 89W x 95.6H Centimeters
Item Weight	25000 Grams
Maximum Rotational Speed	1400 RPM
Voltage	230 Volts
Wash Programs	3 (Delicate, Normal, Heavy)
Special Features	Auto Restart, End Of Cycle Signal, High efficiency motor, Turbodry Technology
Laundry Appliance Drum Material	Plastic
Annual Energy Consumption	320 Kilowatt Hours Per Year
Energy Rating	5 Star



Figure 16: The 5-star energy rating indicates high energy efficiency.

Warranty and Support

Warranty Information:

This Whirlpool washing machine comes with a **2 Years Comprehensive Warranty** and an additional **5 Years Warranty on the Wash Motor, Spin Motor, and Prime Mover** from the date of purchase. Please retain your purchase receipt for warranty claims.

Customer Support:

For any service requests, technical assistance, or warranty claims, please contact Whirlpool customer service. Refer to the contact information provided in your warranty card or visit the official Whirlpool website for support details.