

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AUNA](#) /

› [Auna Portable CD DAB/DAB+/FM Radio with Bluetooth and Internet Streaming, Model 53034089 Instruction Manual](#)

## AUNA 53034089

# Auna Portable CD DAB/DAB+/FM Radio

Model: 53034089 - Instruction Manual

## 1. INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your Auna Portable CD DAB/DAB+/FM Radio, Model 53034089. Please read these instructions thoroughly before using the device and retain them for future reference. This device combines multiple audio sources including CD, DAB/DAB+/FM radio, Internet radio, Bluetooth streaming, AUX input, and USB playback, all controlled via a clear TFT display and remote control.



Image 1.1: The Auna Portable CD DAB/DAB+/FM Radio (Model 53034089) in a home environment.

## 2. SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure the power cord is not pinched or walked on.
- Do not block ventilation openings. Install in accordance with the manufacturer's instructions.
- Only use attachments/accessories specified by the manufacturer.
- Unplug the appliance during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.
- Do not open the casing; there are no user-serviceable parts inside.

## 3. PACKAGE CONTENTS

Verify that all items listed below are present and in good condition upon unpacking:

- 1 x Auna Compact System (Model 53034089)
- 1 x Remote Control
- 1 x Power Cable
- 1 x Multi-language Instruction Manual (this document)

## 4. PRODUCT OVERVIEW

### 4.1 Front Panel Controls



Image 4.1: Front panel of the Auna Portable CD DAB/DAB+/FM Radio, showing the display, control buttons, and CD tray.

The front panel features the main display, CD tray, and various control buttons:

1. **STANDBY Button:** Powers the unit on or off.
2. **FUNCTION Button:** Cycles through input modes (CD, DAB, FM, Internet Radio, Bluetooth, AUX, USB).
3. **SCAN Button:** Initiates a scan for radio stations.

4. **STOP Button:** Stops CD playback.
5. **INFO Button:** Displays additional information (e.g., program details, signal strength).
6. **MENU Button:** Accesses the system menu.
7. **VOLUME Knob:** Adjusts the audio volume. Press to SELECT menu options.
8. **TUNING/SKIP Buttons:** Navigates through radio frequencies or skips CD tracks.
9. **BACK Button:** Returns to the previous menu or screen.
10. **USB Port:** For connecting USB storage devices for MP3 playback.
11. **AUDIO IN (AUX) Port:** For connecting external audio devices.
12. **TFT Display:** Shows current mode, track information, station details, and menu options.

## 4.2 Remote Control



**DAB/DAB+**

**IL MEGLIO DELLA  
CONNESSIONE**

**Radio internet, DAB+ e UKW  
integrata e telecomando**

Image 4.2: The Auna Portable CD DAB/DAB+/FM Radio shown with its included remote control.

The remote control provides convenient access to all functions. Insert 2 x R6 AAA 1.5V batteries (not included) into the battery compartment before first use. Ensure correct polarity.

Key remote control functions include power, volume, mode selection, menu navigation, station presets, and playback

controls.

## 5. SETUP

---

### 5.1 Power Connection

Connect the supplied power cable to the AC IN socket on the rear of the unit and then to a standard wall outlet (100-240 V~ | 50/60 Hz).

### 5.2 Antenna Setup

Extend the telescopic antenna fully for optimal reception of DAB/DAB+ and FM radio signals. Adjust its position for the best signal quality.

### 5.3 Initial Power On & Language Selection

Press the **STANDBY** button to power on the unit. The display will light up. Follow the on-screen prompts to select your preferred language and set the time/date.

### 5.4 Network Connection (Wi-Fi/LAN)

For Internet Radio and Spotify Connect functionality, the device requires an internet connection. Navigate to the 'Network' settings in the main menu.

- **Wi-Fi:** Select 'Wireless Network' and choose your Wi-Fi network from the list. Enter the password using the on-screen keyboard. The device supports 802.11a/b/g and WEP/WPA/WPA2 encryption.
- **LAN:** Connect an Ethernet cable (not included) from your router to the LAN port on the rear of the unit. The device will automatically attempt to connect.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 General Operation

- **Power On/Off:** Press the **STANDBY** button.
- **Volume Adjustment:** Rotate the **VOLUME** knob or use the volume buttons on the remote.
- **Mode Selection:** Press the **FUNCTION** button repeatedly or use the 'Mode' button on the remote to cycle through available sources.
- **Menu Navigation:** Use the **MENU** button to enter menus, the **VOLUME** knob (or arrow buttons on remote) to navigate, and press the **VOLUME** knob (or 'Select' on remote) to confirm. Use **BACK** to exit.

### 6.2 CD Playback



## MEDIA EXPERT

### CD player with MP3 playback option

Image 6.1: Inserting a CD into the front-loading CD tray for playback.

1. Press the **FUNCTION** button to select 'CD' mode.
2. Gently insert a CD (audio CD or MP3 CD) into the CD slot. The unit will automatically load and begin playback.
3. Use the **TUNING/SKIP** buttons to skip tracks.
4. Press **STOP** to halt playback.

#### 6.3 DAB/DAB+ Radio

Enjoy crystal-clear digital radio broadcasts.

1. Select 'DAB Radio' mode using the **FUNCTION** button.
2. The unit will perform an automatic scan for available DAB/DAB+ stations upon first use.
3. Use the **TUNING/SKIP** buttons to browse through the list of available stations.
4. Press **INFO** to view additional station information (e.g., DLS text, program type).

#### 6.4 FM Radio

Tune into traditional FM radio stations.

1. Select 'FM Radio' mode using the **FUNCTION** button.
2. Press **SCAN** to automatically search for and store available FM stations.
3. Alternatively, use the **TUNING/SKIP** buttons for manual tuning.
4. The display will show RDS (Radio Data System) information if available.

## 6.5 Internet Radio



## TUTTO SOTT'OCCHIO

Grazie al *display HCC* da 2,4”  
con funzioni intuitive

Image 6.2: The radio's 2.4" HCC display showing the Internet Radio option.

Access thousands of radio stations from around the world via your internet connection.

1. Ensure the unit is connected to your network (see Section 5.4).
2. Select 'Internet Radio' mode.
3. Browse stations by location, genre, or search for specific stations.
4. You can also use the UNDOK app for easier control and station management.

## 6.6 Bluetooth Streaming



## PRATICITA E SENZA FILI

Funzione Bluetooth per lo streaming audio da smartphone o tablet

Image 6.3: A smartphone being used to stream audio via Bluetooth to the Auna radio.

Stream audio wirelessly from your smartphone, tablet, or other Bluetooth-enabled devices.

1. Select 'Bluetooth' mode using the **FUNCTION** button. The display will show 'Pairing'.
2. Enable Bluetooth on your external device and search for 'Auna 53034089' (or similar).
3. Select the unit to pair. Once connected, you can play music from your device through the radio.

### 6.7 AUX Input

Connect external audio sources via a 3.5mm audio cable (not included).

1. Connect one end of a 3.5mm audio cable to the **AUDIO IN** port on the front panel.
2. Connect the other end to the headphone jack or audio output of your external device (e.g., MP3 player).
3. Select 'AUX' mode using the **FUNCTION** button.
4. Control playback from your external device.

### 6.8 USB Playback

Play MP3 files from a USB flash drive.

1. Insert a USB flash drive containing MP3 files into the **USB** port on the front panel.
2. Select 'USB' mode using the **FUNCTION** button.
3. The unit will read the files and display a list. Use the **VOLUME** knob (or arrow buttons on remote) to navigate and select files/folders.
4. Use the playback controls (Play/Pause, Skip) for navigation.

## 6.9 Alarm and Sleep Timer

The unit includes alarm and sleep timer functions, configurable via the main menu. Set alarms to wake up to your favorite radio station or a buzzer. The sleep timer allows the unit to automatically turn off after a set period.

## 6.10 UNDOK App Control

For enhanced control, download the UNDOK app from the App Store or Google Play. This app allows you to control the radio from your smartphone or tablet, manage presets, and browse stations more easily.



Image 6.4: Controlling the Auna radio using the UNDOK app on a smartphone.

## 7. MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Clean with a soft, lint-free cloth, wiping from the center outwards.
- **Ventilation:** Ensure the ventilation openings are clear of dust and debris to prevent overheating.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty.	Check power cable connection; Try a different outlet.
No sound	Volume too low; Mute activated; Incorrect input mode.	Increase volume; Deactivate mute; Select correct input mode.
Poor radio reception	Antenna not extended/positioned correctly; Weak signal area.	Extend and adjust the telescopic antenna; Try repositioning the unit.
CD not playing	CD inserted incorrectly; CD is dirty or scratched; Unsupported disc format.	Re-insert CD correctly; Clean or replace CD; Ensure it's an audio CD or MP3 CD.
Bluetooth pairing failed	Bluetooth mode not selected; Device too far; Bluetooth not enabled on external device.	Select Bluetooth mode; Move devices closer; Enable Bluetooth on your device.
Internet Radio not connecting	No network connection; Incorrect Wi-Fi password; Router issue.	Check network settings; Re-enter Wi-Fi password; Restart router.

## 9. SPECIFICATIONS

- **Brand:** AUNA
- **Model Number:** 53034089
- **Color:** Hazelnut
- **Power Output:** 2 x 10W RMS (30 Watts total)
- **Speaker Type:** Stereo
- **Radio Tuner:** Internet Radio, DAB+, FM-RDS
- **CD Player:** Yes, supports Audio CD, MP3 CD
- **Connectivity:** Bluetooth, USB, LAN (Ethernet), AUX-In (3.5mm)
- **Wi-Fi:** 802.11a/b/g, WEP/WPA/WPA2 Support, 2.4 GHz / 5 GHz compatible
- **Display:** 2.4" HCC Display (High Contrast and Color)
- **Compatible Devices:** Smartphone, tablet, MP3 player
- **Special Features:** Easy to use, Spotify Connect, App Control (UNDOK app)
- **Power Source:** Electric cable
- **Power Supply:** 100-240 V~ | 50/60 Hz
- **Item Dimensions (W x H x D):** Approx. 38 x 14 x 22 cm

- **Item Weight:** Approx. 3.1 Kilograms
- **Remote Control Batteries:** 2 x R6 AAA 1.5V (not included)

## 10. WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the warranty card included with your product or contact your retailer. Keep your proof of purchase for any warranty claims.