

- Manuals.plus /
- > [ECONTROLLY](#) /
 - > Instruction Manual for ECONTROLLY EN3R39S / EN3R39H Remote Control

ECONTROLLY EN3R39S, EN3R39H, RCEC-EN3R39S

Instruction Manual

ECONTROLLY Replacement Remote Control for Sharp TV
Models: EN3R39S, EN3R39H, RCEC-EN3R39S

PRODUCT OVERVIEW

This manual provides instructions for the ECONTROLLY EN3R39S and EN3R39H replacement remote controls, designed for use with various Sharp TV models. This remote control is a direct replacement and typically requires no programming; simply insert batteries to begin operation.





Image: Front view of the ECONTROLLY EN3R39S / EN3R39H remote control.

Compatible Sharp TV models include, but are not limited to: LC65Q7050U, LC65Q7060U, LC65Q7070U, LC65Q7080U, LC50Q7000U, LC50Q7003CU, LC50Q7020U, LC50Q7030U, LC55Q7070U, LC55Q7080U, LC65Q7000U, LC65Q7003U, LC65Q7020U, LC50Q7050U, LC50Q7060U, LC50Q7070U, LC50Q7080U, LC55Q620U, LC55Q7000U, LC55Q7003U, LC55Q7020U, LC55Q7030U, LC55Q7050U, LC55Q7060U.

SETUP GUIDE

Installing Batteries

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Angled view of the remote control, illustrating its form factor and potential battery compartment location.

After installing the batteries, the remote control is ready for use with your compatible Sharp TV.

OPERATING INSTRUCTIONS

Basic Functions

This remote control is designed to function immediately with compatible Sharp TV models without the need for complex programming or code entry. Simply point the remote at your TV and press the desired button.

Button Layout and Functions

Familiarize yourself with the primary buttons and their functions:

Button Name	Function
-------------	----------

Button Name	Function
POWER	Turns the TV On or Off.
INPUT	Cycles through available input sources (HDMI, AV, etc.).
NUMBER BUTTONS (0-9)	Direct channel selection.
VOL +/-	Adjusts the volume level up or down.
CH +/-	Changes the channel up or down.
MUTE	Mutes or unmutes the TV audio.
NAVIGATION (Up/Down/Left/Right/OK)	Navigates menus and confirms selections.
BACK	Returns to the previous screen or menu.
APPS / HOME	Accesses the Smart TV home screen or app menu.
NETFLIX, YouTube, VUDU, etc.	Direct access buttons for popular streaming services.
MEDIA CONTROL (Play, Pause, Rewind, Fast Forward)	Controls media playback.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not working at all.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote works intermittently.	Low battery power or obstruction.	Replace batteries. Ensure no objects are blocking the line of sight between the remote and the TV's IR receiver.
Specific buttons are unresponsive.	Dirt or debris under the button, or internal damage.	Clean the remote's surface. If the issue persists, the remote may be damaged and require replacement.

Problem	Possible Cause	Solution
Remote does not control the TV.	Incompatibility or TV's IR receiver issue.	Verify your TV model is listed as compatible. Ensure the TV's IR receiver is not blocked or damaged. Try restarting the TV by unplugging it for a few minutes.

PRODUCT SPECIFICATIONS

Specification	Detail
Model Numbers	EN3R39S, EN3R39H, RCEC-EN3R39S
Brand	ECONTROLLY
Product Dimensions	7 x 2 x 0.65 inches (approximately)
Item Weight	1 ounce (approximately)
Batteries Required	2 x AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Sharp Televisions (specific models listed in Product Overview)

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your ECONTROLLY remote control, please refer to the documentation provided with your purchase or contact the seller directly. As this is a replacement part, warranty terms may vary.

For further assistance, you may also visit the ECONTROLLY brand page or contact their customer service channels if available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07WFJZX88>

More documents and user manuals: <https://manuals.plus/>