

ANGMLN DX123

ANGMLN 10 Pack Red Fairy Lights Instruction Manual

Model: DX123

1. INTRODUCTION

Thank you for choosing ANGMLN Red Fairy Lights. This instruction manual provides essential information for the safe and effective use of your new lights. Please read it thoroughly before installation and retain it for future reference.

2. PRODUCT OVERVIEW

2.1 Features

- **Shiny Red Color:** Each pack includes 10 red LED light strings, ideal for various decorative projects.
- **Portable Design:** Features a mini battery case (approximately 2x1x0.2 inches) and a 9.8 ft string with 30 micro LEDs, plus a 1.2 ft lead wire.
- **Battery Operated:** Powered by 2 CR2032 batteries (included). Offers approximately 48 hours of battery life. Includes an on/off switch.
- **Waterproof String:** The copper wire light string is waterproof and can be submerged in water. **Note: The battery case is not waterproof.**
- **Bendable Copper Wire:** The flexible copper wire allows for easy shaping and customization.

2.2 What's in the Box

- 10 x Battery Operated Red Fairy Lights
- 20 x CR2032 Batteries (2 per light string, plus spares)
- 1 x Small Screwdriver (for battery compartment)



Image: Package contents including 10 red fairy light strings, spare CR2032 batteries, and a screwdriver.

3. SAFETY INFORMATION

- Always keep batteries out of reach of children and pets.
- Do not mix old and new batteries, or different types of batteries.
- Ensure the battery compartment is securely closed after battery installation.
- The light string is waterproof, but the battery case is not. Avoid submerging the battery case in water.
- Do not attempt to modify or repair the lights. Contact customer support if issues arise.
- Dispose of used batteries according to local regulations.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the mini battery box.

2. Using the provided small screwdriver, gently open the battery compartment cover.
3. Insert two CR2032 batteries, ensuring the positive (+) side faces upwards as indicated inside the compartment.
4. Close the battery compartment cover securely with the screwdriver.
5. Remove the plastic pull tab if present, before first use.

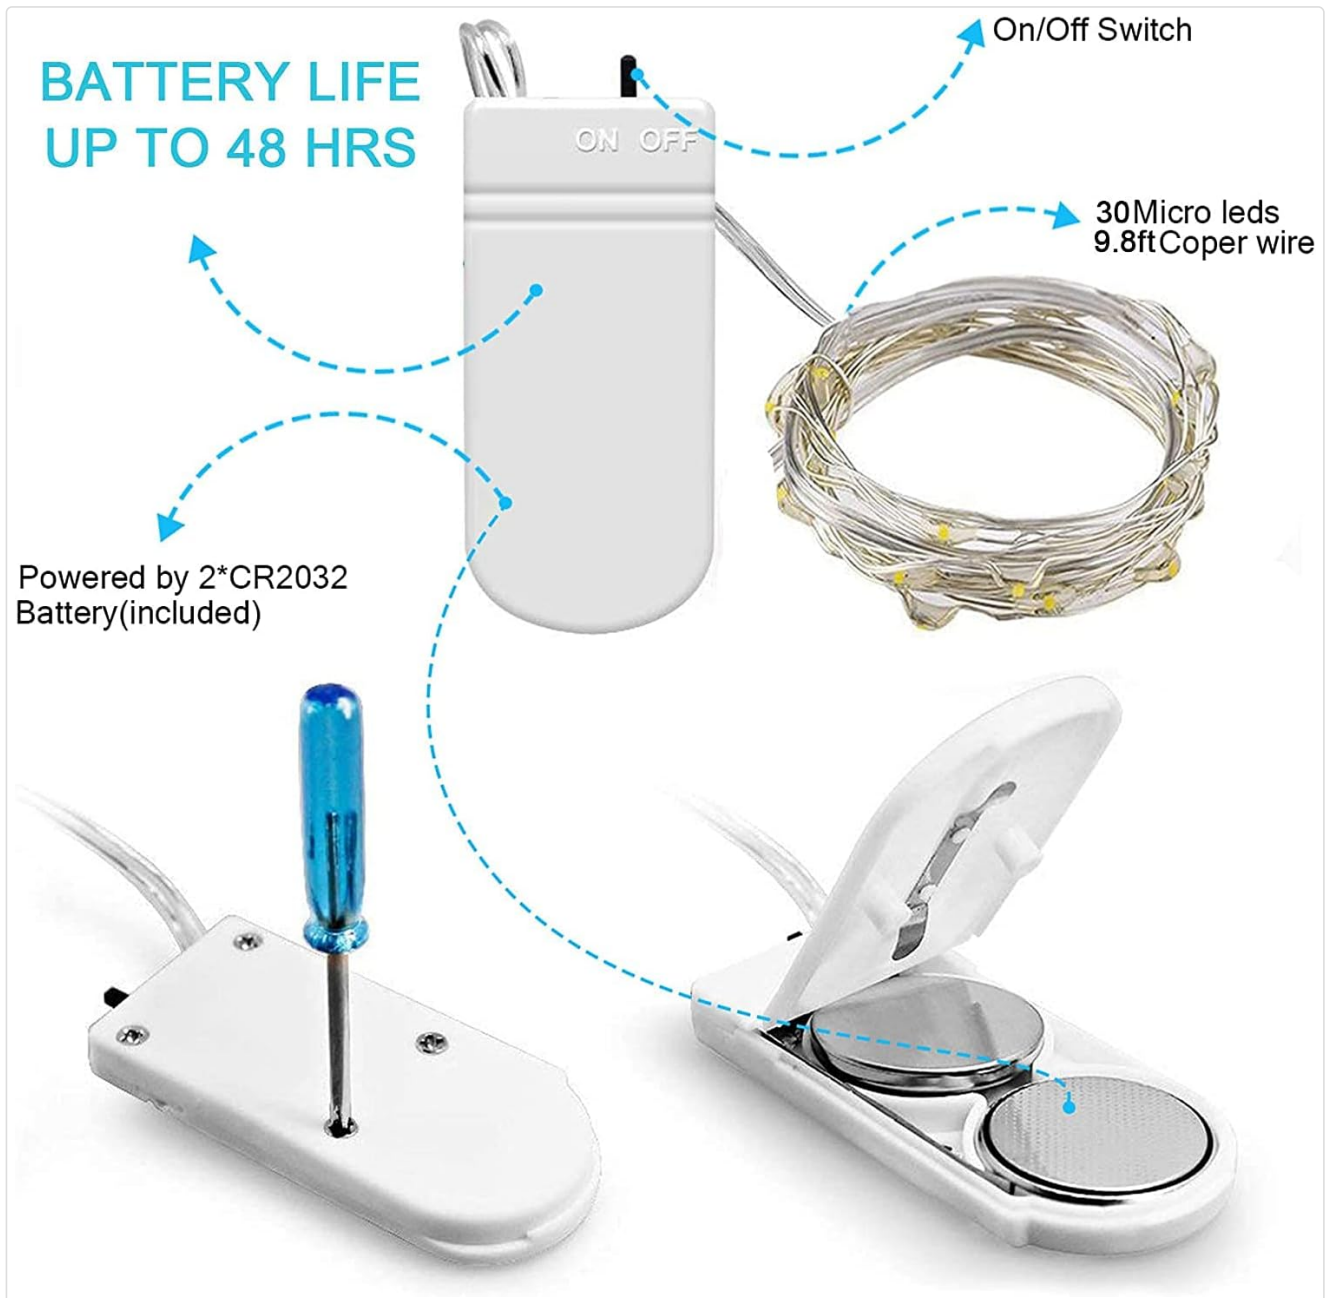


Image: Detailed diagram illustrating the battery box components, including the on/off switch, battery placement, and light string specifications.



Image: Illustration of battery installation and the light string's dimensions.

4.2 Video: Battery Installation Demonstration

Your browser does not support the video tag.

Video: This video demonstrates the general process of installing batteries into the fairy light battery box. While the lights shown in the video may be a different color, the battery installation steps are identical for the red fairy lights.

4.3 Placement and Arrangement

Carefully uncoil the light string. The flexible copper wire allows you to bend and shape the lights to fit your desired decoration. Avoid excessive force or sharp bends that could damage the wire.

5. OPERATION

Once batteries are installed, locate the small ON/OFF switch on the side of the battery box. Slide the switch to the 'ON' position to illuminate the lights. Slide it to 'OFF' to turn them off.

6. MAINTENANCE

6.1 Battery Replacement

When the lights begin to dim, it indicates that the batteries need to be replaced. Follow the battery installation steps in Section 4.1 to replace the two CR2032 batteries.

6.2 Cleaning and Storage

To clean the light strings, gently wipe them with a dry, soft cloth. Do not use abrasive cleaners or immerse the battery box in water. When not in use, carefully coil the lights and store them in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

- **Lights not turning on:**
 - Ensure the ON/OFF switch is in the 'ON' position.
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace the batteries with new CR2032 batteries.
- **Lights are dim:**
 - The batteries are likely low. Replace them with new CR2032 batteries.
- **Lights flicker:**
 - Check battery connections.
 - Replace batteries.
 - Ensure the battery compartment is securely closed.

8. SPECIFICATIONS

Specification	Detail
Brand	ANGMLN
Model Number	DX123
Light Color	Red
Number of Light Sources	30 LEDs per string
String Length	9.8 feet (3 meters)
Lead Wire Length	1.2 feet
Power Source	2 x CR2032 Batteries (per string)
Battery Life	Up to 48 hours (approximate)
Indoor/Outdoor Usage	Indoor (string is waterproof, battery box is not)
Material	Copper wire, Plastic battery box
Item Weight	5.9 ounces (total package)
Package Dimensions	3.27 x 2.91 x 2.4 inches

9. USAGE EXAMPLES

The ANGMLN Red Fairy Lights are versatile and can be used for various decorative purposes. Here are a few examples:



Image: Outdoor house decoration with fairy lights.



Image: Small Christmas tree decoration.



Image: Lights used inside a mason jar.



Image: Various decorative applications of the lights.



Image: Lights decorating a decorative bicycle.

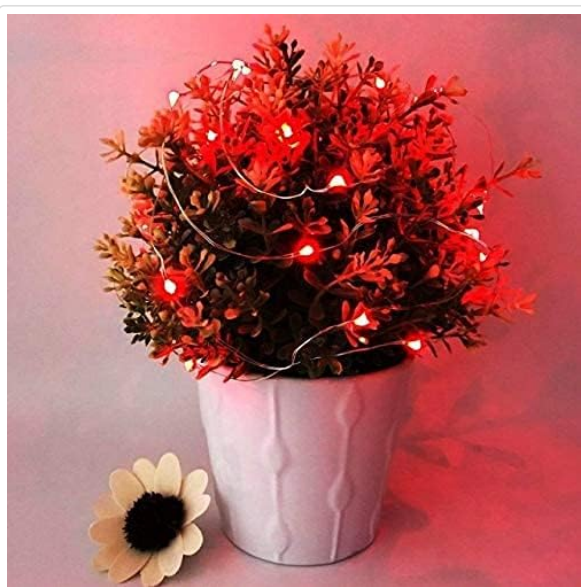


Image: Lights wrapped around a potted plant.

10. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ANGMLN Red Fairy Lights, please refer to your purchase platform or contact ANGMLN customer service directly. Please have your model number (DX123) and purchase details available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question