

Manuals.plus /

- › sinbo /
- › Sinbo SCM 2951 Greek Turkish Coffee Maker Machine User Manual

sinbo scm 2951

SCM 2951 Greek Turkish Coffee Maker Machine User Manual

Model: SCM 2951 | Brand: Sinbo

INTRODUCTION

Thank you for choosing the Sinbo SCM 2951 Electric Turkish Coffee Maker. This appliance is designed to prepare traditional Greek and Turkish coffee with ease and efficiency. Its compact design and simple operation make it a convenient addition to any kitchen. Please read this manual thoroughly before first use to ensure safe and optimal performance.



The Sinbo SCM 2951 Electric Turkish Coffee Maker, a compact and efficient appliance for traditional coffee preparation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance operates on 230 Volts. Ensure your power supply matches this requirement.

PACKAGE CONTENTS

Please check the box for the following items:

- Sinbo SCM 2951 Electric Turkish Coffee Maker Unit
- Reusable Filter (pre-installed or separate)
- Instruction Manual (this document)

SETUP

Before using your Sinbo SCM 2951 for the first time, please follow these steps:

1. **Unpack the Appliance:** Carefully remove all packaging materials from the coffee maker.
2. **Clean the Unit:** Wipe the exterior of the coffee maker with a damp cloth. Wash the interior of the pot with warm, soapy water, then rinse thoroughly. Ensure no water enters the electrical base.
3. **Attach Handle (if detachable):** If your model has a detachable handle, securely attach it to the main unit. Ensure it clicks into place firmly to prevent accidental detachment during use.



Illustration of securely attaching the handle to the coffee maker unit.



A close-up view showing the handle properly attached to the coffee maker.

- 4. First Boil (Cleaning Cycle):** Fill the pot with clean water up to the maximum fill line. Plug the appliance into a 230V power outlet. Turn on the coffee maker and allow the water to boil. Once boiled, discard the water. Repeat this process 1-2 times to remove any manufacturing residues.
- 5. Placement:** Place the coffee maker on a stable, flat, heat-resistant surface, away from the edge of the counter. Ensure the power cord is not dangling where it can be pulled or tripped over.



The coffee maker unit with its integrated power cord, ready for placement.

OPERATING INSTRUCTIONS

Follow these steps to prepare traditional Greek or Turkish coffee:

1. **Add Water:** Fill the coffee maker with cold water. The capacity is 0.4 liters. Do not exceed the maximum fill line to prevent overflow during boiling.
2. **Add Coffee and Sugar (Optional):** For each cup, add approximately one heaped teaspoon of very finely ground Turkish/Greek coffee. Add sugar to taste, if desired.
3. **Stir:** Stir the coffee and sugar mixture gently until well combined. Do not stir once heating begins.
4. **Place on Base and Power On:** Place the coffee maker securely on its power base. Plug the power cord into a 230V wall outlet. Press the power switch to the "ON" position. The indicator light (if present) will illuminate.



A detailed view of the power switch located at the base of the coffee maker.

5. **Brewing Process:** The coffee will begin to heat. As it heats, a rich foam will rise to the top. This process is manual, so monitor the coffee closely.
6. **Serve:** Just before the coffee boils over, remove the coffee maker from the heat source or switch it off. Pour the foamy coffee directly into small cups. Do not stir the coffee in the cup, as the grounds will settle at the bottom.
7. **Cool Down:** Allow the coffee maker to cool down completely before cleaning or storing.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your coffee maker.

- **Daily Cleaning:** After each use, unplug the appliance and allow it to cool completely. Wash the interior of the pot with warm, soapy water using a soft sponge. Rinse thoroughly.



The interior of the coffee maker pot, showing the heating element at the bottom.

- **Exterior Cleaning:** Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
- **Do Not Immerse:** Never immerse the main unit or its electrical base in water or any other liquid. This will damage the electrical components and void the warranty.
- **Descaling:** Over time, mineral deposits may build up inside the pot, especially in areas with hard water. To descale, fill the pot with a mixture of equal parts water and white vinegar. Heat the mixture (do not boil) and let it sit for 15-20 minutes. Discard the mixture and rinse the pot thoroughly several times with clean water.
- **Storage:** Ensure the coffee maker is clean and dry before storing. Store it in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Sinbo SCM 2951, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power switch is off; no power at outlet.	Ensure the appliance is securely plugged into a working 230V outlet. Check that the power switch is in the "ON" position. Test the outlet with another appliance.
Coffee takes too long to heat.	Mineral buildup (scale) inside the pot.	Descale the coffee maker as described in the "Maintenance and Cleaning" section.
Coffee overflows during brewing.	Overfilled with water; not monitored closely.	Do not fill water above the maximum fill line. Monitor the brewing process and remove from heat just before it boils over.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio.	Adjust the amount of ground coffee to your preference. Ensure coffee is finely ground for Turkish/Greek coffee.

SPECIFICATIONS

- **Model:** SCM 2951
- **Brand:** Sinbo
- **Coffee Maker Type:** Turkish Coffee Machine
- **Capacity:** 0.4 Liters
- **Voltage:** 230 Volts
- **Operation Mode:** Manual
- **Filter Type:** Reusable
- **Coffee Input Type:** Ground Coffee
- **Product Dimensions:** 9.06 x 9.45 x 7.87 inches (approximate)
- **Item Weight:** 1.06 pounds (approximate)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or contact Sinbo customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Contact Information:

Website: www.sinbo.com.tr (Please note: This is a general placeholder. Refer to your product packaging for specific regional contact details.)

Email: Refer to product packaging

Phone: Refer to product packaging