

NETVIP zq-531eu-bk

NETVIP 300Mbps WiFi Repeater User Manual

Model: zq-531eu-bk

	Overview	Features	Package Contents	Setup	Operating
Modes	Maintenance	Troubleshooting	Specifications	Warranty & Support	

1. PRODUCT OVERVIEW

The NETVIP 300Mbps WiFi Repeater is designed to extend the coverage of your existing wireless network. It eliminates Wi-Fi dead zones, providing a stronger and more reliable internet connection throughout your home or office. This device supports both Repeater Mode and Access Point (AP) Mode, offering flexible solutions for network expansion.

2. KEY FEATURES

- **High-Speed Performance:** Delivers wireless speeds up to 300Mbps, ideal for streaming, gaming, and web browsing.
- **Dual Operating Modes:** Functions as a WiFi Repeater to extend existing networks or as an Access Point to create a new wireless network from a wired connection.
- **Enhanced Coverage:** Equipped with integrated 3dBi antennas to improve signal strength and coverage, reducing dead zones.
- **Wired Connectivity:** Includes one Ethernet port for connecting wired devices such as desktop computers, gaming consoles, or smart TVs.
- **Easy Installation:** Simple setup process via web browser or WPS button.

300Mbps Wifi Range Extender


Expand Your Wifi Coverage



The NETVIP WiFi Repeater is designed to expand your existing Wi-Fi coverage, eliminating dead zones and providing a stronger signal throughout your home or office.




Support 2.4G wireless signal, wall penetration enhance 40% wider coverage.

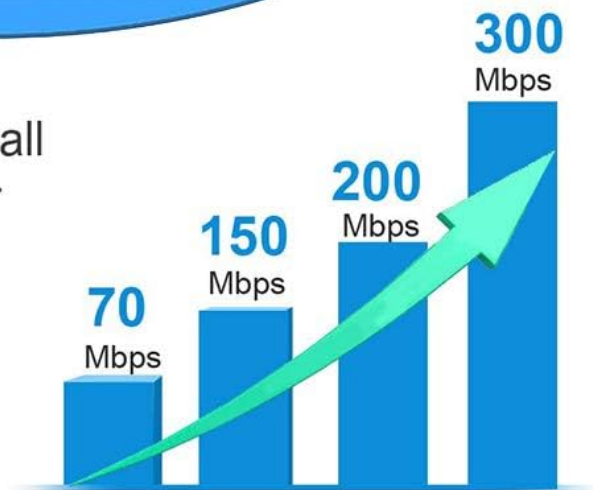

The device supports 2.4G wireless signals and enhances wall penetration by up to 40%, improving coverage and data transfer rates up to 300 Mbps.

ELIMINATE DEAD ZONES

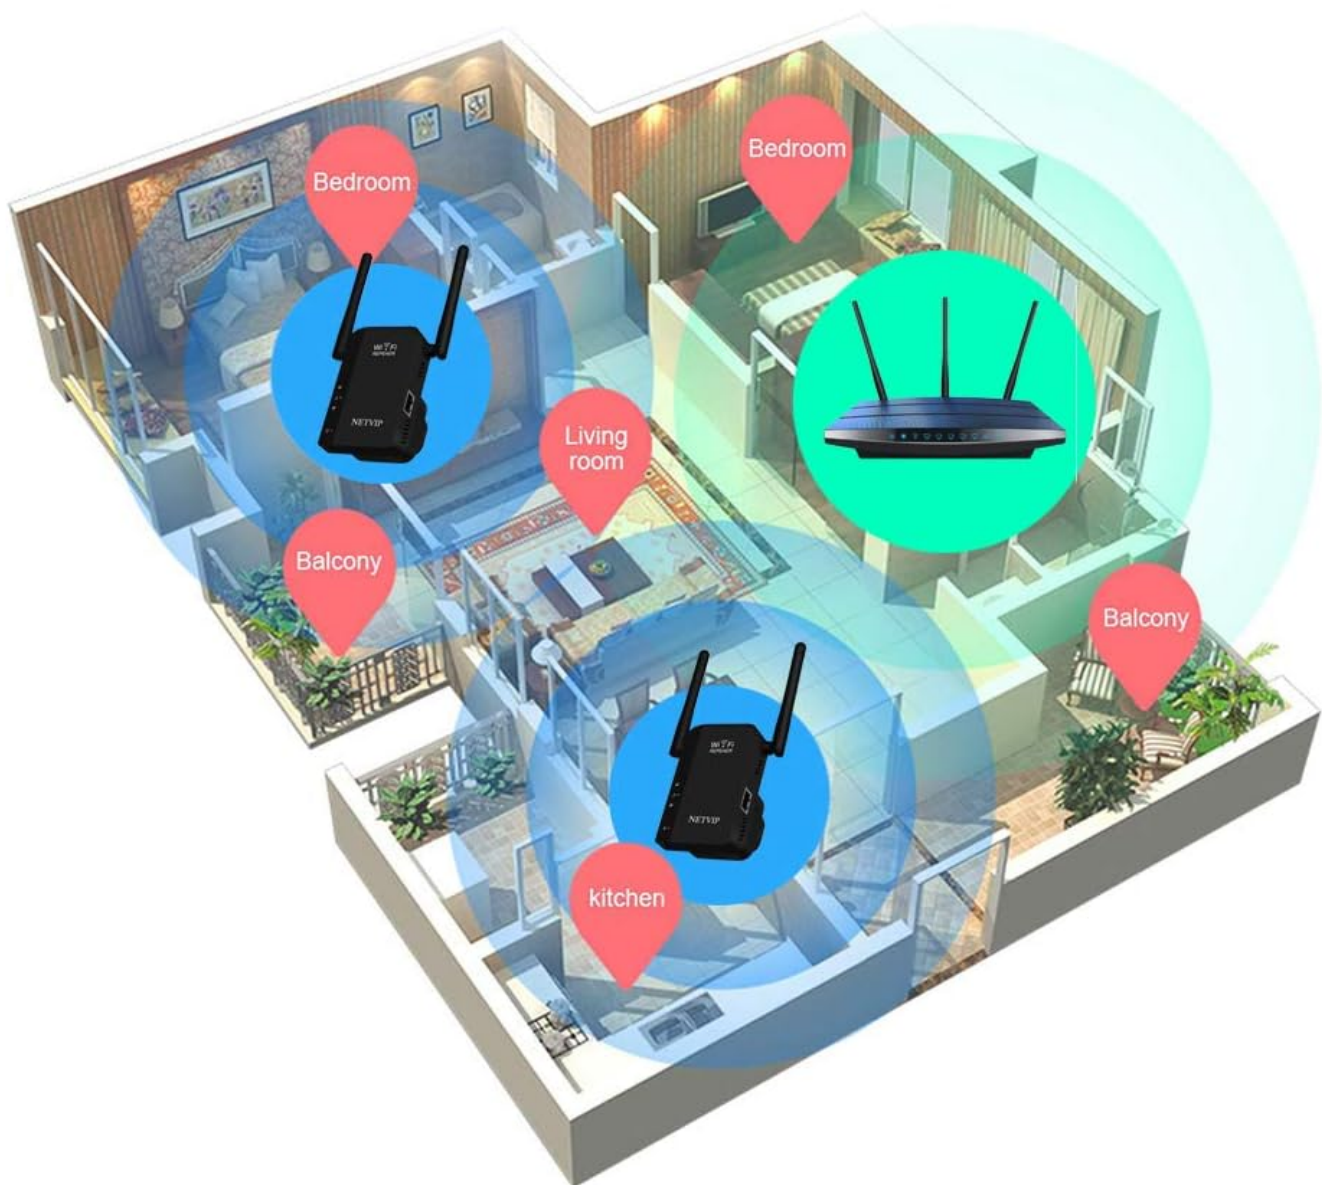

Strategically placing the NETVIP WiFi Repeater can effectively eliminate Wi-Fi dead zones, ensuring consistent internet access in areas like bedrooms, living rooms, and kitchens.



Key components of the repeater include LED indicators for status, a reset button for factory defaults, and a LAN port for wired connections.

3. PACKAGE CONTENTS

Please check the package contents carefully. If any item is missing or damaged, contact your retailer.

- NETVIP 300Mbps WiFi Repeater
- User Manual
- RJ45 Ethernet Cable

4. INITIAL SETUP

Follow these steps for the initial setup of your NETVIP WiFi Repeater.

4.1 Powering On

1. Plug the repeater into a power outlet near your main router.
2. Wait for the power LED indicator to light up, indicating the device is powered on.

4.2 Connecting to the Repeater

You can connect to the repeater wirelessly or via an Ethernet cable.

- **Wireless Connection:** On your computer or mobile device, search for available Wi-Fi networks. Connect to the network named 'NETVIP_XXXX' (XXXX will be the last four digits of the repeater's MAC address). No password is required for the initial connection.
- **Wired Connection:** Connect one end of the provided Ethernet cable to the LAN port of the repeater and the other end to your computer's Ethernet port.

4.3 Web-Based Configuration

1. Open a web browser (e.g., Chrome, Firefox, Edge) on your connected device.
2. Enter the default IP address **192.168.10.1** or the web address **wifi.repeater** into the address bar and press Enter.
3. A login page will appear. The default username and password are **admin** (all lowercase).
4. Once logged in, you will be guided through the setup wizard to select your desired operating mode (Repeater or AP) and configure network settings.

4.4 WPS Setup (If Supported by your Router)

If your main router has a WPS button, you can use it for a quick setup in Repeater Mode.

1. Plug the repeater into a power outlet near your main router.
2. Press the WPS button on your main router.
3. Within two minutes, press the WPS button on the NETVIP WiFi Repeater.
4. The repeater's signal LED should change to a solid color, indicating a successful connection. You can then unplug the repeater and move it to a desired location within your router's Wi-Fi range.

5. OPERATING MODES

The NETVIP WiFi Repeater supports two main operating modes:



This diagram shows the two primary operating modes: Access Point (AP) Mode, where the repeater connects to a wired router to create a wireless network, and Repeater Mode, where it extends an existing wireless network from a wireless router.

5.1 Repeater Mode

In Repeater Mode, the device extends the coverage of an existing wireless network. It receives the Wi-Fi signal from your main router and re-broadcasts it, effectively expanding the range.

1. During web-based configuration, select 'Repeater Mode'.
2. The repeater will scan for available Wi-Fi networks. Select your main router's Wi-Fi network from the list.
3. Enter the password for your main router's Wi-Fi network.
4. You can choose to keep the same SSID (network name) as your main router or create a new one for the extended network.
5. Confirm settings and wait for the repeater to restart.
6. Once restarted, the repeater will broadcast the extended Wi-Fi signal.

5.2 Access Point (AP) Mode

In AP Mode, the device transforms a wired internet connection into a wireless network. This is useful if you have a wired-only router or want to create a new Wi-Fi hotspot.

1. Connect an Ethernet cable from your wired router or modem to the LAN port of the NETVIP Repeater.
2. During web-based configuration, select 'AP Mode'.
3. Configure a new SSID (network name) and password for the new wireless network.
4. Confirm settings and wait for the repeater to restart.
5. Once restarted, the repeater will broadcast the new Wi-Fi network.

6. MAINTENANCE

To ensure optimal performance and longevity of your NETVIP WiFi Repeater, consider the following maintenance tips:

- **Placement:** Place the repeater in an open area, away from obstructions like large metal objects, concrete walls, and other electronic devices that may cause interference.
- **Cleaning:** Gently wipe the device with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Firmware Updates:** Periodically check the NETVIP official website for any available firmware updates. Updating firmware can improve performance, add new features, and fix bugs.
- **Reset:** If the device is not functioning correctly, you can perform a factory reset by pressing and holding the reset button for 5-10 seconds until the LEDs flash. This will revert all settings to their factory defaults.

7. TROUBLESHOOTING

If you encounter issues with your NETVIP WiFi Repeater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cannot access the web management page (192.168.10.1)	Incorrect IP address, device not connected, IP conflict.	Ensure your device is connected to the repeater's Wi-Fi or via Ethernet. Verify the IP address is typed correctly. Try resetting the repeater to factory defaults.
No internet access after setup	Incorrect Wi-Fi password for the main router, repeater out of range, main router issue.	Re-enter the main router's Wi-Fi password during setup. Move the repeater closer to the main router. Check if your main router has internet access.
Slow internet speed or unstable connection	Interference, poor placement, too many connected devices.	Relocate the repeater to a position with a strong signal from the main router (typically halfway between the router and the dead zone). Avoid placing near microwaves, cordless phones, or large metal objects. Reduce the number of active devices.

Problem	Possible Cause	Solution
Repeater LEDs are off or blinking abnormally	No power, device malfunction.	Ensure the repeater is securely plugged into a working power outlet. Try a different outlet. If the issue persists, perform a factory reset.

8. SPECIFICATIONS

- **Brand:** NETVIP
- **Model Number:** zq-531eu-bk
- **Data Transfer Rate:** Up to 300 Mbps
- **Wireless Standard:** IEEE 802.11b/g/n
- **Frequency Band:** 2.4 GHz
- **Antennas:** Integrated 3dBi Antennas
- **Ports:** 1 x 10/100Mbps Ethernet Port
- **Operating Modes:** Repeater, AP (Access Point)
- **Security:** WPA-PSK/WPA2-PSK, WPA/WPA2
- **Compatible Devices:** Tablets, Smartphones, Laptops, PCs, Smart TVs, Gaming Consoles, etc.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support, please visit the official NETVIP website or contact their customer service department.