



[Manuals.plus](#) /

> [GE](#) /

> GE GDT665SSNSS 24" Stainless Steel Built-In Dishwasher User Manual

GE GDT665SSNSS

GE GDT665SSNSS 24" Stainless Steel Built-In Dishwasher User Manual

Model: GDT665SSNSS

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your GE GDT665SSNSS 24" Stainless Steel Built-In Dishwasher. Please read this manual thoroughly before using your appliance to ensure safe and efficient operation. Keep this manual for future reference.

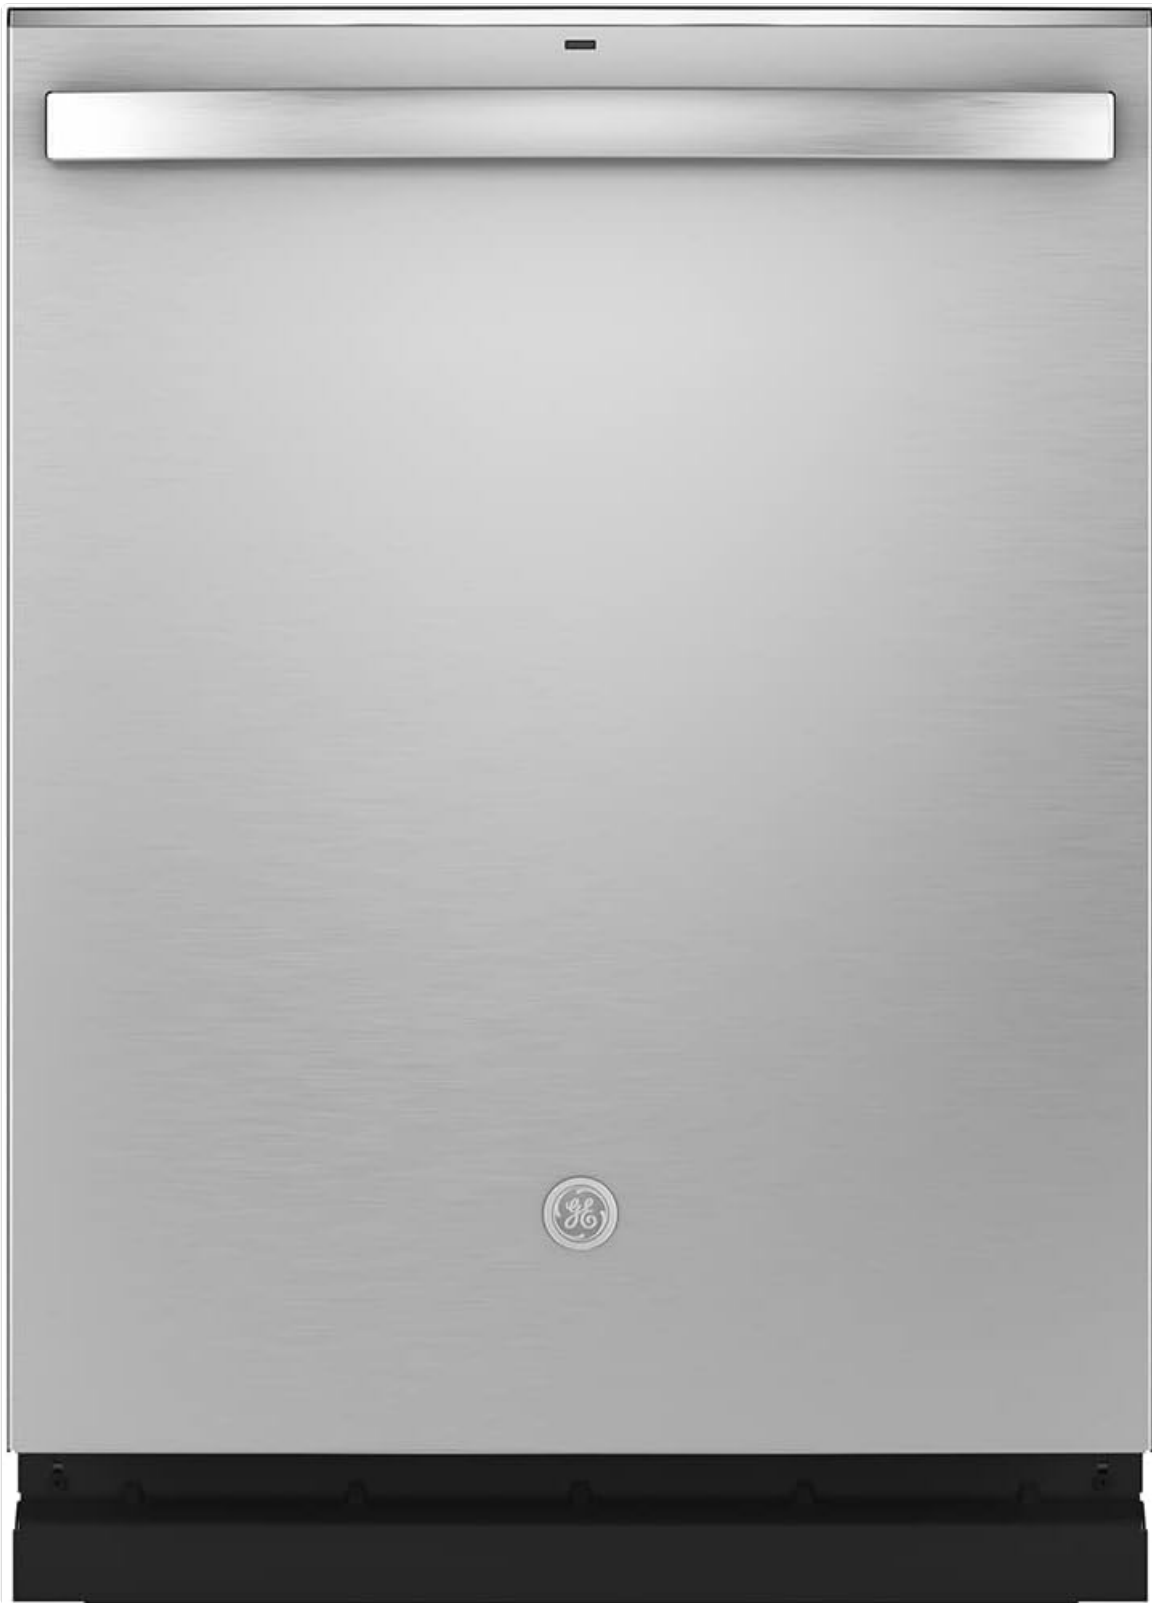


Figure 1: Front view of the GE GDT665SSNSS 24" Stainless Steel Built-In Dishwasher, showcasing its sleek, modern design and stainless steel finish.

SETUP AND INSTALLATION

Your GE GDT665SSNSS dishwasher is designed for built-in installation. Proper setup is crucial for optimal performance and safety.

What's in the Box

- GE GDT665SSNSS Dishwasher Unit
- Installation Hardware (check packaging for complete list)

- User Manual (this document)

Electrical Requirements

The dishwasher operates on a standard 120 Volts electrical supply. Ensure your electrical outlet meets local codes and appliance requirements.

Placement Considerations

Install the dishwasher in a location that allows for proper water supply, drainage, and electrical connections. Ensure adequate clearance for opening the door and loading dishes.

OPERATING INSTRUCTIONS

This section details how to effectively use your dishwasher's various cycles and features.

Control Panel Overview



Figure 2: The fully integrated control panel with LED display, showing various cycle and option buttons.

The control panel is located on the top edge of the dishwasher door, providing a sleek, hidden appearance when the door is closed. It features an LED display and touch-sensitive buttons for cycle selection and options.



Figure 3: Interacting with the control panel, demonstrating the ease of selecting wash options.

Loading the Dishwasher

The GE GDT665SSNSS offers a spacious interior with 16 place settings capacity, including a 3rd rack for additional loading flexibility. Proper loading ensures optimal cleaning performance.



Figure 4: A full view of the dishwasher's interior, showing the lower rack with plates and pots, and the upper rack with glasses and cutlery.

- **Lower Rack:** Ideal for plates, larger bowls, pots, and pans. Ensure items do not block the spray arms.
- **Upper Rack:** Suitable for glasses, cups, smaller bowls, and plastic items.
- **3rd Rack:** Use for flatware, small utensils, or other small items.



Figure 5: Loading the upper rack, demonstrating the flexible space for various dish sizes.



Figure 6: Utilizing the dedicated Bottle Jets feature for thorough cleaning of tall items like bottles and vases.



Figure 7: The lower rack loaded with heavily soiled dishes, illustrating the dishwasher's capacity for tough cleaning tasks.

Wash Cycles and Options

Select the appropriate cycle and options based on the soil level and type of dishes.

- **Wash Cycles (5):** AutoSense, Heavy, Normal, Light, 1 Hour Wash.
- **Wash Options (11):** Dry Boost with Fan Assist, Bottle Jets, Steam + Sani, Wash Temp (Normal/High), Wash Zones (Upper/Lower), Delay Hours, and more.
- **Piranha Hard Food Disposer:** Automatically grinds food particles to prevent clogs.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning the Exterior

The stainless steel exterior is fingerprint resistant. Wipe surfaces with a soft, damp cloth and mild detergent. Avoid abrasive

cleaners.



Figure 8: Cleaning the exterior of the dishwasher, highlighting its fingerprint-resistant stainless steel finish.

Cleaning the Interior

Periodically clean the interior, including the filter and spray arms, to remove any food residue or mineral buildup. Refer to the detailed cleaning instructions in the full product manual for specific steps.

TROUBLESHOOTING

Before contacting service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher not starting	Door not fully closed; Power supply issue; Cycle not selected	Ensure door latches securely; Check power connection/breaker; Select a wash cycle and press Start.

Problem	Possible Cause	Solution
Dishes not clean	Improper loading; Clogged spray arms/filter; Insufficient detergent	Reload dishes to allow water circulation; Clean spray arms and filter; Use recommended amount of detergent.
Water not draining	Clogged drain hose/air gap; Piranha Hard Food Disposer issue	Check and clear drain hose/air gap; Inspect disposer for obstructions.

SPECIFICATIONS

Feature	Detail
Brand	GE
Model Number	GDT665SSNSS
Form Factor	Built-In
Item Weight	115 Pounds
Voltage	120 Volts
Capacity	16 Place Settings
Wash Cycles	5
Wash Options	11
Display Type	LED
Controls Type	Fully Integrated
Noise Level	46 dB
Material	Nylon, Stainless Steel
Special Features	Fingerprint Resistant, Sound Reduction System
Certification	Energy Star
UPC	084691843757

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your appliance or visit the official GE Appliances website. For customer support, technical assistance, or to schedule service, please contact GE Appliances directly.

You can find contact information on the GE Appliances website or through the customer support details provided at the time of purchase.

© 2024 GE Appliances. All rights reserved.

For the most up-to-date information, please visit [GEAppliances.com](https://www.geappliances.com)

