

Ampcaddy V3 Pro

Ampcaddy V3 Pro Golf Bluetooth Speaker with Mount

INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the Ampcaddy V3 Pro Golf Bluetooth Speaker. This portable, durable, and high-quality speaker is designed to enhance your outdoor activities, particularly golf. With its secure mounting system, robust sound, and extended battery life, it provides a reliable audio experience. This manual will guide you through the setup, operation, and maintenance of your new speaker.

2. Package Contents

Please ensure all items are present in your package:

- Ampcaddy V3 Pro Golf Bluetooth Speaker
- Adjustable Mount/Clamp
- Velvet Pouch for storage and transport
- USB Type-C Charging Cable

3. Product Features

- **Audio Output:** 15 Watts with Bass Boost (2-inch resonator)
- **Battery Life:** Up to 20 hours of playtime
- **Connectivity:** Bluetooth 4.2 for wireless pairing
- **Durability:** Shockproof and IPX7 Waterproof rating
- **Mounting:** Secure clamp for golf carts and push carts
- **Adjustability:** 180-degree multi-directional audio swivel
- **Wireless Range:** Up to 100 feet (approximately 30 meters)
- **Stereo Pairing:** Ability to pair two or more speakers for stereo sound
- **Controls:** Integrated multi-function buttons for power, volume, and track control

4. Setup

4.1 Mounting the Speaker

The Ampcaddy V3 Pro features a versatile clamp designed for secure attachment to various surfaces, including golf cart frames, push cart handles, or other suitable bars. To attach:

1. Loosen the knob on the mount to open the clamp jaws.
2. Position the clamp around the desired bar or frame.
3. Tighten the knob until the speaker is firmly secured and does not move.
4. Adjust the speaker's angle using the swivel mechanism to direct sound as desired.



Image: Ampcaddy V3 Pro Golf Bluetooth Speaker securely mounted on a golf cart, with a golfer in the background, demonstrating its use on the course.

4.2 Powering On and Bluetooth Pairing

To power on your speaker and connect via Bluetooth:

1. Press and hold the power button (usually marked with a power symbol) located on the side of the speaker until you hear an audible cue or see a blue LED light blinking.
2. On your mobile device (smartphone, tablet, etc.), navigate to the Bluetooth settings.

3. Search for available devices and select "Ampcaddy" from the list.
4. Once connected, the blue LED light on the speaker will become solid, indicating a successful pairing.

GOLF BLUETOOTH SPEAKER AND MOUNT



15 WATTS
OF POWER



BASS BOOST
2" RESONATOR



BATTERY PLAYTIME:
20 HOURS - RECHARGEABLE



MULTI-FUNCTION
BUTTON CONTROLS



DROP PROOF
UP TO 5FT



WATERPROOF
IPX7 RATING

Bluetooth 4.2

Image: Side view of the Ampcaddy V3 Pro Golf Bluetooth Speaker, detailing its controls and features.

5. Operating Instructions

5.1 Controls

The Ampcaddy V3 Pro features intuitive controls for easy operation:

- **Power Button:** Press and hold to turn on/off. Short press to play/pause music.
- **Volume Up (+):** Short press to increase volume.
- **Volume Down (-):** Short press to decrease volume.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.
- **Bluetooth Pairing Button:** (If separate) Press to initiate pairing mode.

6. Charging

To charge your Ampcaddy V3 Pro speaker:

1. Locate the charging port, typically covered by a rubber flap to maintain its waterproof rating.
2. Gently open the rubber flap.
3. Connect the provided USB Type-C charging cable to the speaker's port.
4. Connect the other end of the cable to a USB power source (e.g., computer, wall adapter).
5. The LED indicator will typically show red while charging and turn off or change color when fully charged.
6. Ensure the rubber flap is securely closed after charging to maintain water resistance.

A full charge provides up to 20 hours of playtime. Charging time is approximately 2-3 hours.

7. Maintenance

To ensure the longevity and optimal performance of your Ampcaddy V3 Pro speaker:

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place when not in use. Use the provided velvet pouch for protection.
- **Water Resistance:** Always ensure the charging port cover is securely closed to maintain its IPX7 waterproof rating. While waterproof, avoid prolonged submersion.
- **Battery Care:** For best battery life, avoid fully discharging the speaker frequently. Charge it regularly.

8. Troubleshooting

If you encounter issues with your Ampcaddy V3 Pro, refer to the table below:

Problem	Possible Cause	Solution
Speaker does not turn on	Low battery	Charge the speaker using the provided USB Type-C cable.
Cannot pair via Bluetooth	Speaker not in pairing mode / Device Bluetooth off	Ensure the speaker's blue LED is blinking. Turn off and on your device's Bluetooth. Move closer to the speaker.
No sound or low volume	Volume too low / Paused / Disconnected	Increase volume on both speaker and device. Check if music is playing. Reconnect Bluetooth.
Sound distortion	Volume too high / Weak signal	Lower volume. Move device closer to the speaker.

9. Specifications

Feature	Detail
Model Name	Version 3 Pro
Speaker Maximum Output Power	15 Watts
Battery Capacity	20 Hours (Playtime)

Feature	Detail
Wireless Communication Technology	Bluetooth 4.2
Bluetooth Range	10 Meters (approximately 33 feet)
Maximum Range (Wireless)	100 Feet
Water Resistance Level	Waterproof (IPX7)
Item Weight	1.4 pounds
Material	Rubber or synthetic equivalent
Control Method	Touch
Power Source	Battery (1 Lithium Ion battery included)
Specific Uses For Product	Golf, Outdoor

10. Warranty and Support

The Ampcaddy V3 Pro Golf Bluetooth Speaker comes with an 18-month warranty covering manufacturing defects. For warranty claims or technical support, please contact Ampcaddy customer service through their official website or the retailer where the product was purchased. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

