



Manuals.plus /

› YISSVIC /

› YISSVIC Digital Alarm Clock (Model B07WHP96G2) User Manual

## YISSVIC B07WHP96G2

# YISSVIC Digital Alarm Clock User Manual

Model: B07WHP96G2

## INTRODUCTION


---

Thank you for purchasing the YISSVIC Digital Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your new alarm clock. Please read it carefully to ensure optimal performance and longevity of the product.

## PRODUCT FEATURES

---

- Large 6.3-inch LED display for clear visibility.
- Dual alarm settings for different wake-up times.
- Six adjustable brightness levels to suit various environments.
- Two distinct alarm sounds.
- 9-minute snooze function.
- 12/24 hour time format options.
- Sleek and modern design.

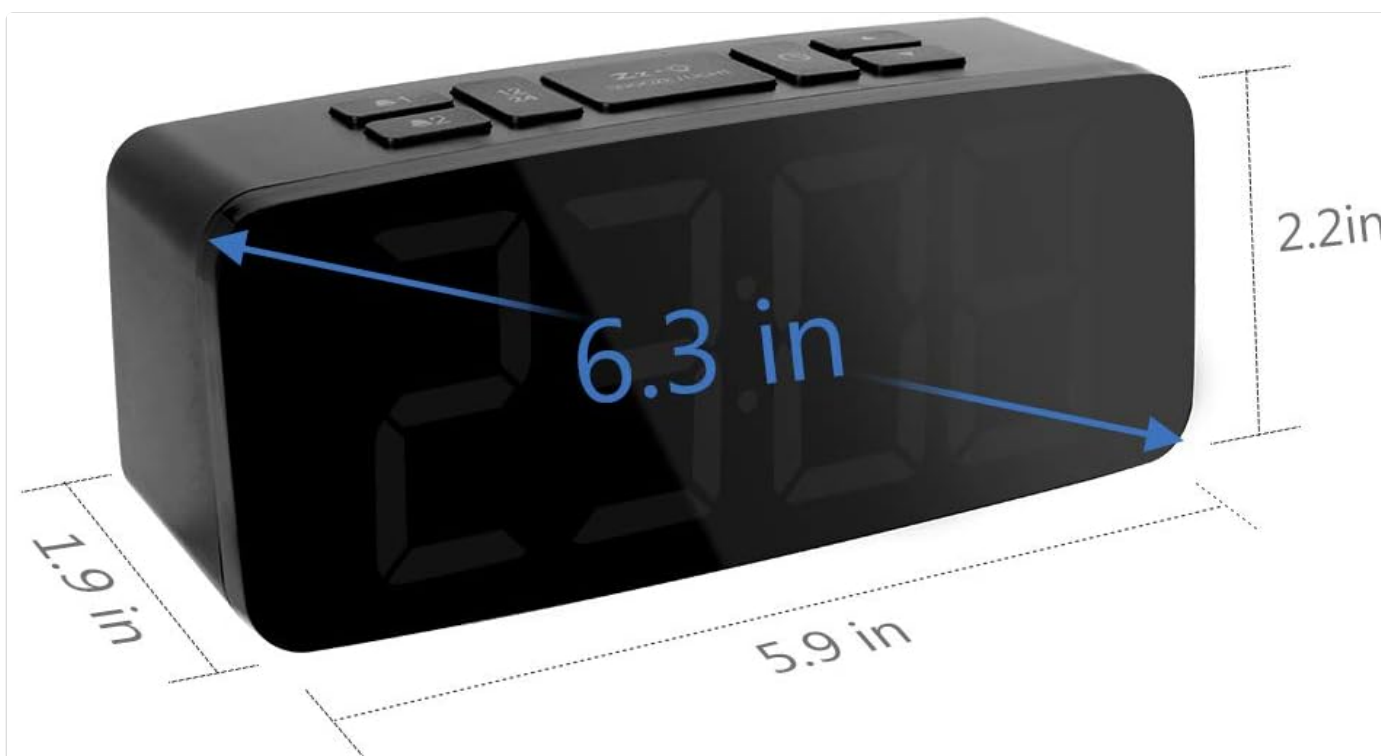

2 Alarms



9 Minutes Snooze



Digital full screen



2 Alarm Sounds



Adjustable Brightness



12/24 Time format

Image: YISSVIC Digital Alarm Clock showing its dimensions (6.3 inches wide, 1.9 inches deep, 2.2 inches high) and key features including 2 alarms, 9-minute snooze, digital full screen, 2 alarm sounds, adjustable brightness, and 12/24 time format.

## SETUP

- Unpacking:** Carefully remove the alarm clock from its packaging. Ensure all components are present: the alarm clock unit and the power adapter.
- Power Connection:** Connect the power adapter to the DC input port on the back of the alarm clock. Plug the adapter into a standard electrical outlet. The display will light up.
- Initial Time Setting:** Upon first power-up, the clock display may show a default time or flash. Refer to the "Setting Time" section under "Operating Instructions" to set the correct time.

## OPERATING INSTRUCTIONS

### Setting Time

- Press and hold the **TIME SET** button (usually located on the top or back) until the hour digits begin to flash.
- Use the **HOURL** and **MINUTE** buttons to adjust the time. Pressing and holding these buttons will allow for faster adjustment.

3. Press **TIME SET** again to confirm the time and move to the 12/24 hour format setting.
4. Use the **12/24H** button to select your preferred time format.
5. Press **TIME SET** one last time to exit time setting mode.

### Setting Alarms (Alarm 1 and Alarm 2)

1. Press and hold the **ALARM 1 SET** button until the alarm hour digits flash.
2. Use the **HOUR** and **MINUTE** buttons to set the desired alarm time for Alarm 1.
3. Press **ALARM 1 SET** again to confirm the time and move to alarm sound selection.
4. Use the **ALARM SOUND** button to cycle through the available alarm sounds.
5. Press **ALARM 1 SET** to exit Alarm 1 setting mode.
6. Repeat the process for **ALARM 2 SET** if a second alarm is desired.

2 level sound volume  
Adjustable volume

65db 75db

2 alarm sounds

① Original alarm ② Chords sound - beep

Start your day with  
a gradient alarm sound

Image: YISSVIC Digital Alarm Clock illustrating the two alarm sounds (original beep and chords) and two adjustable volume levels (65db and 75db).

### Activating/Deactivating Alarms

- Press the **ALARM 1 ON/OFF** button to toggle Alarm 1 on or off. An alarm icon will appear/disappear on the display.

- Press the **ALARM 2 ON/OFF** button to toggle Alarm 2 on or off.

## Snooze Function

- When an alarm sounds, press the large **SNOOZE** button (usually on top) to temporarily silence the alarm for 9 minutes. The alarm will sound again after 9 minutes.
- To cancel the snooze and turn off the alarm completely until the next set time, press any other button on the clock.



# Big SNOOZE Button

Snooze function: Press Snooze button, catch 9min extra nap

Image: YISSVIC Digital Alarm Clock with a hand pressing the large snooze button, indicating a 9-minute snooze function.

## Adjusting Display Brightness

- Press the **DIMMER** or **BRIGHTNESS** button (refer to button labels on your device) to cycle through the 6 available brightness levels.
- Select the brightness level that is most comfortable for your environment.

# 6 level brightness

Ensure visual comfort,  
enjoy your sleep

20:08



Level 4

20:08



Level 3

20:08



Level 2

20:08



Level 1  
the darkest



Level 5  
the brightest



off



Image: YISSVIC Digital Alarm Clock demonstrating 6 levels of brightness, from Level 1 (darkest) to Level 5 (brightest), and an off state, ensuring visual comfort.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the alarm clock. Avoid using abrasive cleaners or solvents, as they may damage the finish.
- **Power:** Ensure the clock is always connected to a stable power source. In case of power outage, the clock may lose time settings if not equipped with a backup battery (check specifications).
- **Placement:** Place the alarm clock on a stable, flat surface away from direct sunlight, excessive heat, or moisture.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank.	No power or power adapter is loose.	Check power connection. Ensure the adapter is securely plugged into the clock and the wall outlet.
Alarm does not sound.	Alarm is not activated or volume is too low.	Ensure the alarm icon is displayed. Adjust alarm volume if applicable.
Time is incorrect.	Time was not set correctly or power interruption occurred.	Re-set the time following the "Setting Time" instructions.
Display is too bright/dim.	Brightness level needs adjustment.	Press the DIMMER/BRIGHTNESS button to cycle through levels.

## SPECIFICATIONS

- **Brand:** YISSVIC
- **Model:** B07WHP96G2
- **Display Type:** Digital LED
- **Display Size:** Approximately 6.3 inches
- **Power Source:** Corded Electric
- **Frame Material:** Acrylonitrile Butadiene Styrene
- **Alarm Function:** Dual alarms, 2 sounds, 9-minute snooze
- **Brightness:** 6 adjustable levels
- **Time Format:** 12/24 Hour selectable

## WARRANTY AND SUPPORT

YISSVIC products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official YISSVIC website. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, please contact YISSVIC customer service via their official website: [www.yissvic.com](http://www.yissvic.com)

