

amaze BT-1301

Amaze Bluetooth Portable Speaker BT-1301 User Manual

Model: BT-1301

1. INTRODUCTION

Thank you for purchasing the Amaze Bluetooth Portable Speaker BT-1301. This speaker is designed to provide high-quality audio with versatile connectivity options, including Bluetooth, USB, FM radio, and SD card support. Its portable design allows you to enjoy your music anywhere. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Amaze Bluetooth Portable Speaker BT-1301
- USB Charging Cable
- Auxiliary Audio Cable
- User Manual (this document)

3. PRODUCT FEATURES

The Amaze BT-1301 speaker offers a range of features for an enhanced audio experience:

- **Wireless Bluetooth Connectivity:** Easily connect to your smartphone, tablet, or other Bluetooth-enabled devices.
- **Multiple Playback Modes:** Supports USB drive, SD card, FM radio, and AUX input.
- **Portable Design:** Compact and lightweight with a convenient handle for easy transport.
- **Integrated Controls:** Intuitive buttons for mode selection, volume, track control, and FM scanning.
- **Built-in Rechargeable Battery:** Enjoy music on the go without constant power connection.



Figure 3.1: Front view of the Amaze BT-1301 Portable Speaker, showing the speaker grille, control panel, and handle.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the speaker's DC 5V charging port and the other end to a USB power adapter (not included) or a computer USB port. The charging indicator light will illuminate during charging and turn off when fully charged.

4.2 Powering On/Off

To power on the speaker, locate the power switch (usually a toggle switch or a long press on the Mode button) and switch it to the 'ON' position or press and hold the power button. You will hear an audible prompt indicating the speaker is on. To power off, repeat the process.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light and an audible prompt.
2. On your device (smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "BT-1301" from the list of devices.
4. Once paired, the LED indicator will stop flashing, and you will hear a confirmation sound. You can now play music from your device through the speaker.

5.2 FM Radio Mode

1. Press the "MODE" button to switch to FM radio mode.
2. To auto-scan and save available stations, press and hold the "Play/Pause" button. The speaker will scan and store stations automatically.
3. Use the "Previous/Next Track" buttons to navigate between saved FM stations.

5.3 USB/SD Card Mode

1. Insert a USB flash drive or an SD card (with MP3 audio files) into the respective port.
2. The speaker will automatically switch to USB or SD card mode and begin playing music. If not, press the "MODE" button to select the correct mode.
3. Use the "Play/Pause" button to pause or resume playback.
4. Use the "Previous/Next Track" buttons to skip tracks.

5.4 AUX Input Mode

1. Connect one end of a 3.5mm audio cable (AUX cable) to the speaker's AUX input port and the other end to the audio output jack of your external device (e.g., MP3 player, computer).
2. Press the "MODE" button to switch to AUX mode.
3. Control playback and volume from your connected external device.

5.5 Volume Control

Adjust the volume using the dedicated volume knob or the volume buttons on the speaker. Some models may use long presses of the "Previous/Next Track" buttons for volume control.



Figure 5.1: The Amaze BT-1301 speaker shown alongside its retail packaging, highlighting its compact size.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.
- **Water Resistance:** The product specifications indicate it is waterproof. However, avoid submerging the speaker in water or exposing it to heavy rain for prolonged periods to prevent damage.



Figure 6.1: The Amaze BT-1301 speaker displaying its integrated LED lighting feature, often found around the speaker cone.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power switch is off.	Charge the speaker; Ensure power switch is in 'ON' position.
No sound from speaker.	Volume too low; Incorrect mode selected; Device not paired (Bluetooth).	Increase volume; Press MODE button to select correct input; Re-pair Bluetooth device.
Bluetooth pairing fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in pairing mode; Move device closer; Turn off other Bluetooth devices.
FM radio reception is poor.	Weak signal; No external antenna (if applicable).	Relocate speaker for better signal; Extend any built-in antenna or connect an external one if supported.

8. SPECIFICATIONS

- **Model Name:** BT-1301
- **Brand:** Amaze
- **Connectivity Technology:** Bluetooth, Auxiliary, USB
- **Audio Output Mode:** Stereo
- **Special Feature:** Portable, Bluetooth
- **Recommended Uses:** Music
- **Compatible Devices:** Tablet, Smartphone
- **Subwoofer Diameter:** 4 Inches

- **Surround Sound Channel Configuration:** 2.1
- **Color:** Black
- **Waterproof:** Yes
- **Power Input:** DC 5V (via USB)
- **Battery:** 1200 mAh

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your package or contact the retailer where you purchased the product. For technical support or service inquiries, please contact Amaze customer service through their official website or the contact information provided with your purchase.

Please retain your proof of purchase for warranty claims.

© 2024 Amaze. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question