

[Manuals.plus](#) /

› [SupplySource](#) /

› User Manual: AC/DC Adapter for Craig CHT955 Bluetooth CD Jukebox Speaker System

SupplySource CHT955

User Manual: AC/DC Adapter

Model: CHT955 Compatible Power Supply

Brand: SupplySource

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your SupplySource AC/DC Adapter. This power supply is specifically designed to provide reliable power to the Craig CHT955 Bluetooth CD Jukebox Speaker System.

Please read this manual thoroughly before using the adapter to ensure proper operation and to prevent damage to the adapter or your device.

2. PRODUCT OVERVIEW



Figure 2.1: SupplySource AC/DC Adapter. This image shows the compact black power adapter with its integrated power cord, neatly coiled and secured with a hook-and-loop strap.

The SupplySource AC/DC Adapter converts standard AC wall power into the DC power required by your compatible electronic devices. It features a durable design and incorporates multiple safety mechanisms to protect both the adapter and the connected device.

3. SETUP AND CONNECTION

1. **Verify Compatibility:** Before connecting, ensure that the DC output voltage and tip size of this adapter match the requirements of your Craig CHT955 Bluetooth CD Jukebox Speaker System. This information is typically found in your device's original manual or on the device itself.

2. **Connect to Device:** Insert the DC output plug of the adapter firmly into the power input port of your Craig CHT955 Jukebox Speaker System.
3. **Connect to Power Outlet:** Plug the AC input prongs of the adapter into a standard 100-240V AC wall outlet. Ensure the outlet is easily accessible.
4. **Power On:** Once connected, your device should receive power. Refer to your device's manual for specific power-on procedures.

4. OPERATING INSTRUCTIONS

The SupplySource AC/DC Adapter operates automatically once connected to a power source and a compatible device. No user intervention is required for its basic function.

- **Ventilation:** When the adapter is in use for extended periods, ensure it is placed in a well-ventilated area. Avoid covering the adapter or placing it in enclosed spaces to prevent overheating.
- **Placement:** Do not place the adapter on soft surfaces like beds, carpets, or clothing, as this can obstruct ventilation. Avoid placing it directly on skin products or other materials that may retain heat.
- **Disconnection:** To disconnect power, first unplug the adapter from the wall outlet, then disconnect it from your device.

5. SAFETY INFORMATION

Your SupplySource AC/DC Adapter is designed with multiple safety features to ensure reliable and secure operation. Adhering to these guidelines will help prevent damage and ensure user safety.

BUILT IN WITH SAFETY ELECTRONICS



Over Charge
Protection



Over Voltage
Protection



Short-circuit
Protection



Over Current
Protection



Over Temp
Protection



24 Months
Warranty



Figure 5.1: Built-in Safety Electronics. This diagram illustrates the various protection mechanisms integrated into the adapter, including safeguards against overcharge, overvoltage, short-circuit, overcurrent, and over-temperature.

- **Overcharge Protection:** Prevents damage to the connected device's battery by stopping charging once full.
- **Over Voltage Protection (OVP):** Safeguards against incorrect voltage output, protecting your device from electrical damage.
- **Short-circuit Protection (SCP):** Automatically shuts down power in case of a short circuit, preventing damage to the adapter and connected device.
- **Over Current Protection (OCP):** Protects against excessive current flow, which can damage components.
- **Over Temperature Protection (OTP):** Monitors the adapter's internal temperature and shuts down if it exceeds safe limits.
- **Certifications:** The adapter is certified with CE, FCC, and other relevant safety standards.
- **General Precautions:**
 - Do not expose the adapter to water, rain, or excessive moisture.
 - Do not disassemble or modify the adapter.
 - Avoid dropping or subjecting the adapter to strong impacts.

- Keep out of reach of children.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your AC/DC adapter.

- **Cleaning:** Disconnect the adapter from both the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or crimping the power cord excessively. Do not place heavy objects on the cord.

7. TROUBLESHOOTING

If you encounter issues with your adapter, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Device not powering on.	Adapter not properly connected.	Ensure the adapter is fully plugged into both the wall outlet and the device.
	Wall outlet is not active.	Test the wall outlet with another known working device.
	Incorrect adapter for the device.	Verify that the adapter's DC output and tip size match your device's requirements.
Adapter feels hot.	Poor ventilation or heavy load.	Ensure the adapter is in a well-ventilated area. Disconnect if excessively hot and allow to cool. If overheating persists, discontinue use.

If the problem persists after trying these steps, please contact customer support.

8. SPECIFICATIONS



Figure 8.1: Adapter Cable Length. This image provides a visual reference for the length of the adapter's power cable, indicated as 4 feet.

Feature	Detail
Input Voltage Range	100-240V AC
Input Frequency	50-60Hz
Cable Length	4 Feet (approx. 1.2 meters)
Material	Plastic, Metal
Special Features	Overcharge Protection, Over Voltage Protection, Short-circuit Protection, Over Current Protection, Over Temperature Protection
Certifications	CE, FCC, etc.

Feature	Detail
Manufacturer	SupplySource
Model Compatibility	Craig CHT955 Bluetooth CD Jukebox Speaker System

9. WARRANTY AND SUPPORT

SupplySource stands behind the quality of its products. Your AC/DC Adapter comes with the following warranty and support:

- **Money Back Guarantee:** 30 Days
- **Free Exchange:** 60 Days (with paid return label)
- **Worry-Free Warranty:** 720 Days (Anytime)

For any questions, concerns, or warranty claims, please feel free to contact SupplySource customer support. We are committed to assisting you.

Note: Please retain your proof of purchase for warranty purposes.

© 2024 SupplySource. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07WK4DYB2>

More documents and user manuals: <https://manuals.plus/>