

[Manuals.plus](#) /

› [MANGROOMER](#) /

› MANGROOMER Lithium Max Plus Body Groomer User Manual

MANGROOMER 611-6

MANGROOMER Lithium Max Plus Body Groomer User Manual

Model: 611-6

Brand: MANGROOMER

INTRODUCTION

The MANGROOMER Lithium Max Plus Body Groomer is a versatile grooming tool designed for comprehensive body hair management. This innovative device combines a body groomer/ball groomer and a body trimmer into a single unit, offering both close shaving and precise trimming capabilities. It is engineered for comfort, convenience, and effective hair removal across various body areas, including underarms, shoulders, chest, legs, arms, stomach, and groin.

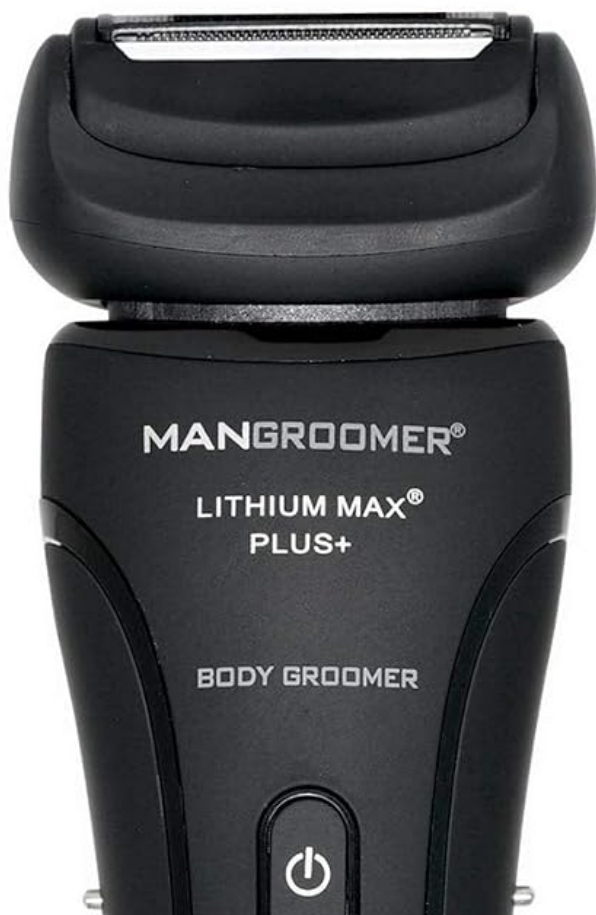




Image: Front and back view of the MANGROOMER Lithium Max Plus Body Groomer, showcasing its dual-ended design with a body groomer on one end and a body trimmer on the other.

SAFETY INFORMATION

For safe operation and to ensure the longevity of your MANGROOMER device, please adhere to the following safety guidelines:

- Keep the trimmer side dry during use. Avoid contact with wet hair when using the trimmer blades to prevent matting and ensure even trimming.
- Exercise caution when switching between shaving and trimming modes to prevent accidental activation or injury.
- Store the device properly while charging, ensuring it is placed on the charging cradle in a stable location away from water sources.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel for any repairs.
- Keep out of reach of children.

SETUP AND CHARGING

Before first use, it is essential to fully charge your MANGROOMER Lithium Max Plus Body Groomer. The device features

a Lithium MAX PLUS+ battery designed for fast and easy recharges.

1. Unpack the electric shaver and all its components from the packaging.
2. Place the device onto the provided charging cradle. Ensure the charging pins align correctly.
3. Connect the charging adapter to the charging cradle and then plug it into a standard electrical outlet.
4. Observe the charging indicator light. It will typically display red while charging and turn green when fully charged. Allow sufficient time for the initial full charge, as indicated in the quick start guide.
5. Once fully charged, the device is ready for use. For optimal battery life, it is recommended to fully discharge and recharge the battery periodically.



Image: The MANGROOMER Lithium Max Plus Body Groomer resting on its charging cradle, with the power adapter connected, illustrating the charging setup.

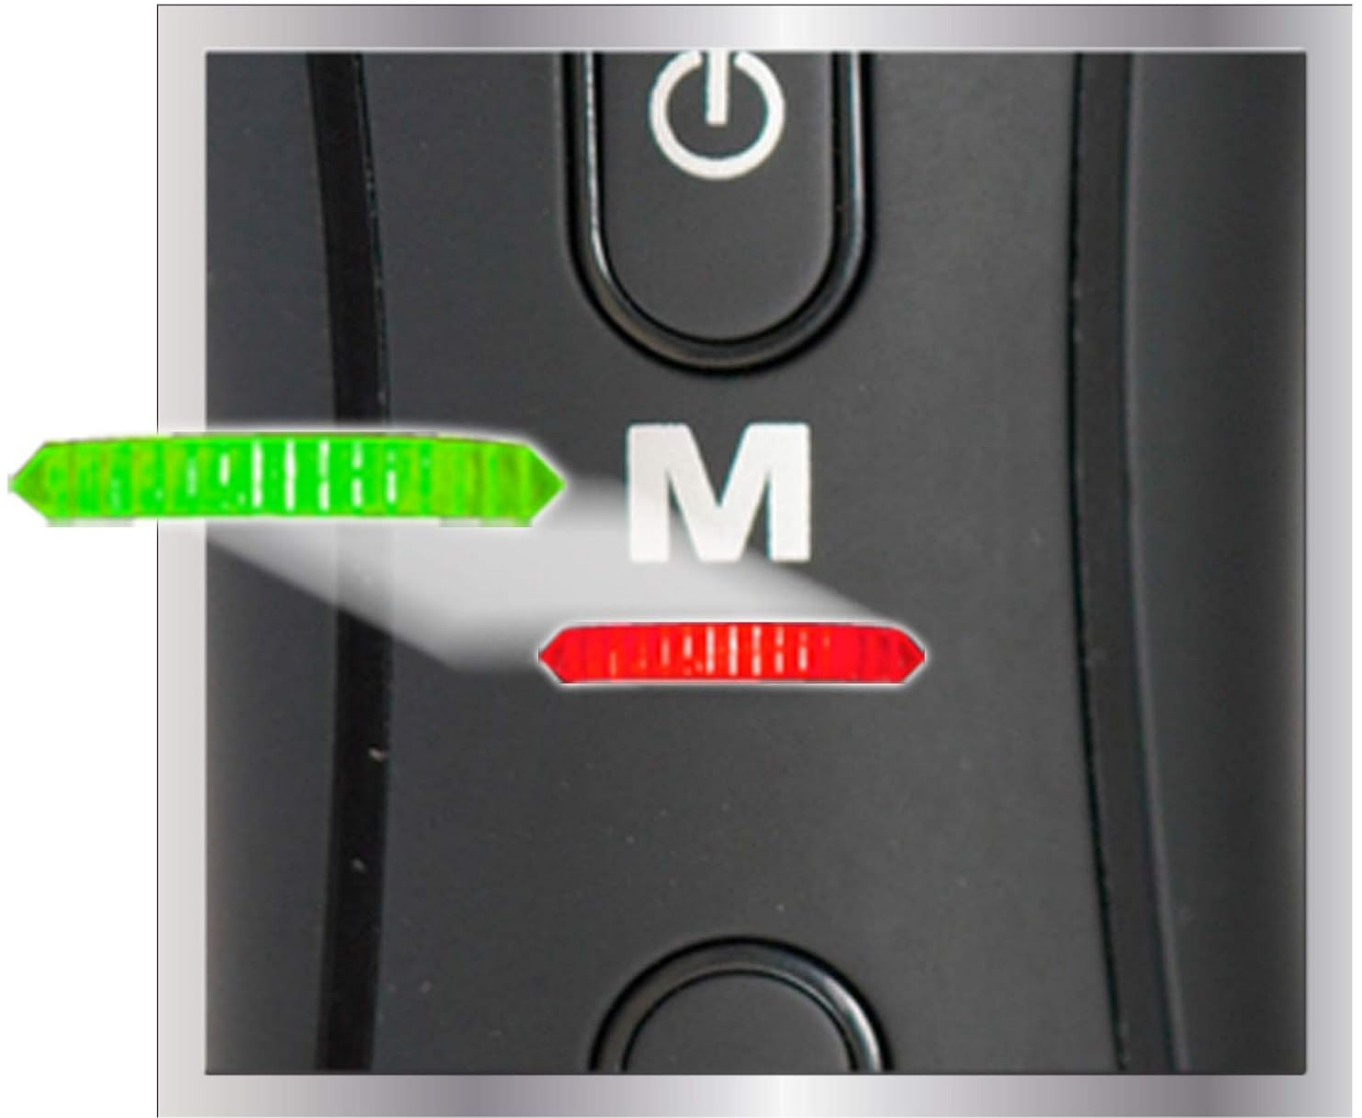


Image: Close-up of the MANGROOMER's charging indicator light, showing the red and green light signals for charging status.

OPERATING INSTRUCTIONS

The MANGROOMER Lithium Max Plus Body Groomer offers two distinct functions: body grooming/shaving and body trimming. Choose the appropriate side based on your desired grooming outcome.

Using the Body Groomer / Ball Groomer Head (Shaving)

This side is designed for a close, smooth shave, ideal for larger body areas and sensitive regions. It features a double-sided trimmer/foil blade design and a shock absorber multi-functional flex neck.

1. Ensure the device is charged.
2. Activate the body groomer side by pressing the corresponding power button.
3. Gently press the groomer head against your skin and move it in a fluid motion. The flexible neck will adapt to the contours of your body, ensuring consistent contact and a smooth finish.
4. This side can be used wet or dry, including in the shower, for added convenience.



Image: Close-up of the MANGROOMER's body groomer head, highlighting its flexible neck design with arrows indicating multi-directional movement for contour following.

Using the Body Trimmer (Trimming)

The body trimmer side allows for detailed trimming of longer body hair to your desired length, with 8 adjustable settings.

1. Ensure the device is charged.
2. Activate the body trimmer side by pressing its power button.
3. Adjust the trimming length by sliding the selector on the trimmer head. There are 8 settings available, allowing for lengths as close as 1/16th of an inch.
4. For best performance and even trimming, use the trimmer side only on dry hair. Wet hair can mat down and prevent uniform cutting.
5. Move the trimmer against the direction of hair growth for optimal results.



Image: Close-up of the MANGROOMER's body trimmer head, showing the adjustable length settings and the mechanism for changing them.



SIZE DOES MATTER™

2 SHAVERS IN 1!
BODY GROOMER
& BODY TRIMMER

RECHARGEABLE

WET/DRY

**SHOWER
SAFE**

Image: An illustrative image highlighting key features of the MANGROOMER Lithium Max Plus, including its "2 Shavers in 1" design (Body Groomer & Body Trimmer), rechargeable battery, and wet/dry/shower safe capabilities.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your MANGROOMER device.

- **Cleaning:** After each use, especially when using the trimmer, remove any accumulated hair from the blades and guards using the provided cleaning brush. The device is wet/dry, allowing for rinsing under running water for thorough cleaning. Ensure the device is completely dry before storing or charging.
- **Lubrication:** Periodically apply a small drop of clipper oil (if provided or recommended by the manufacturer) to the blades to maintain smooth operation and prevent wear.
- **Storage:** When not in use, store the device on its charging cradle in a clean, dry place. This keeps it neatly displayed and ensures it's charged and ready for your next grooming session.
- **Blade Replacement:** Over time, blades may become dull. Replace the foil and trimmer blades as needed to maintain optimal cutting performance. Replacement parts can be purchased from authorized MANGROOMER

retailers or their official website.

TROUBLESHOOTING

If you encounter issues with your MANGROOMER Lithium Max Plus Body Groomer, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Place the device on the charging cradle and ensure it is fully charged (indicator light turns green).
Device turns on but does not turn off.	Possible internal switch malfunction or temporary electronic glitch.	Try pressing and holding the power button for several seconds. If the issue persists, allow the battery to fully discharge, then recharge and try again. If the problem continues, contact MANGROOMER customer support.
Poor trimming/shaving performance.	Blades are dull or clogged with hair; insufficient charge.	Clean the blades thoroughly. Apply clipper oil. Ensure the device is fully charged. If performance does not improve, consider replacing the blade head.
Device pulls hair.	Blades are dull or dirty; using trimmer on wet hair.	Clean and lubricate blades. Ensure hair is dry when using the trimmer. Replace blades if necessary.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 3.8 x 10.5 inches; 1.2 Pounds
Item Model Number	611-6
Batteries	1 AA batteries required (included)
UPC	853496003617
Manufacturer	AmazonUs/MBPD9
Brand	MANGROOMER
Recommended Uses	BODY GROOMER, BALL TRIMMER AND BODY TRIMMER
Special Feature	Hypoallergenic
Power Source	Battery Powered
Model Name	LITHIUM MAX PLUS+

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact MANGROOMER customer service directly. You can typically find contact details on the product packaging, the official MANGROOMER website, or through your point of purchase.

For additional resources, you may visit the official MANGROOMER store:[MANGROOMER Store](#)

© 2024 MANGROOMER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question