

[Manuals.plus](#) /

› [Fame](#) /

› Fame CAT-04C Clip-On Tuner User Manual

Fame CAT-04C

Fame CAT-04C Clip-On Tuner User Manual

1. INTRODUCTION

The Fame CAT-04C is a compact and versatile clip-on tuner designed for a wide range of musical instruments. It utilizes vibration sensing to provide accurate tuning, making it suitable for noisy environments. This manual provides essential information for the proper setup, operation, and maintenance of your CAT-04C tuner.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Fame CAT-04C Clip-On Tuner.



Figure 1: Front view of the Fame CAT-04C Clip-On Tuner, showing the display screen and the power button.



Figure 2: Side view of the Fame CAT-04C Clip-On Tuner, illustrating the adjustable clip mechanism for attaching to an instrument.



Figure 3: Close-up of the Fame CAT-04C Clip-On Tuner's illuminated display, showing the tuning needle and note indicator.

Key Components:

- **Display Screen:** Shows the detected note, pitch deviation, and tuning status.
- **Power/Mode Button:** Used to turn the tuner on/off and cycle through tuning modes.
- **Clip:** Securely attaches the tuner to the headstock or soundboard of your instrument.
- **Swivel Joint:** Allows for 360-degree rotation and tilt of the display for optimal viewing angle.
- **Battery Compartment:** Located on the back, holds the CR2032 coin cell battery.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the tuner.
2. Open the cover by sliding or gently prying it open (refer to markings on the device if present).
3. Insert one CR2032 coin cell battery with the positive (+) side facing upwards.
4. Close the battery compartment cover securely.

3.2 Attaching the Tuner

The CAT-04C tuner uses a vibration sensor to detect pitch. For best results, attach it directly to your instrument.

1. Open the clip by pressing the lever.

2. Attach the tuner securely to the headstock of your guitar, bass, ukulele, or other stringed instrument. For wind instruments, attach it to a part that vibrates clearly.
3. Adjust the display angle using the swivel joint for comfortable viewing.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Power On:** Press and hold the Power/Mode button for approximately 2 seconds. The display will illuminate.
- **To Power Off:** Press and hold the Power/Mode button for approximately 2 seconds. The display will turn off. The tuner also features an automatic power-off function after a few minutes of inactivity to conserve battery life.

4.2 Mode Selection

The CAT-04C offers multiple tuning modes. Short press the Power/Mode button to cycle through the available modes:

- **Chromatic (C):** Tunes all notes (C, C#, D, D#, E, F, F#, G, G#, A, A#, B). Suitable for all instruments.
- **Guitar (G):** Optimized for guitar tuning.
- **Bass (B):** Optimized for bass guitar tuning.
- **Ukulele (U):** Optimized for ukulele tuning.

4.3 Tuning Your Instrument

1. Ensure the tuner is powered on and the correct tuning mode is selected for your instrument.
2. Pluck a single string on your instrument. The tuner's display will show the detected note and a needle or indicator.
3. If the note displayed is incorrect, adjust the string until the correct note appears.
4. Observe the pitch indicator:
 - If the needle points to the left (or indicator is red/flat), the pitch is too low. Tighten the string.
 - If the needle points to the right (or indicator is red/sharp), the pitch is too high. Loosen the string.
 - When the needle is in the center and the display turns green, the string is in tune.
5. Repeat this process for all strings until your instrument is fully tuned.

5. MAINTENANCE

- **Cleaning:** Wipe the tuner with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Storage:** Store the tuner in a dry place away from extreme temperatures and direct sunlight. If storing for an extended period, remove the battery to prevent leakage.
- **Battery Replacement:** Replace the battery when the display becomes dim or the tuner functions erratically.

6. TROUBLESHOOTING

- **Tuner does not power on:** Check if the battery is correctly installed with the positive (+) side up. Replace the CR2032 battery if it is depleted.
- **Inaccurate tuning or no note detection:** Ensure the tuner is securely clipped to the instrument, making good contact for vibration sensing. Verify that the correct tuning mode is selected. Pluck the string firmly and clearly.
- **Display is dim or flickering:** This usually indicates a low battery. Replace the CR2032 battery.

7. SPECIFICATIONS

Model Number	CAT-04C
Tuning Modes	Chromatic, Guitar, Bass, Ukulele
Detection Method	Vibration (Clip)
Power Supply	1 x CR2032 Coin Cell Battery
Product Dimensions (L x W x H)	8 x 4.5 x 3.5 cm
Item Weight	30 g
Color	Black

8. WARRANTY AND SUPPORT

Warranty information for the Fame CAT-04C Clip-On Tuner is typically provided with the product packaging or available from the retailer at the time of purchase. For specific warranty terms and conditions, please refer to the documentation included with your product or contact your point of purchase.

For technical support or further assistance, please contact the retailer where you purchased the product or visit the official Fame brand website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07WLSSXS8>

More documents and user manuals: <https://manuals.plus/>