

[Manuals.plus](#) /

› [LEGO](#) /

› [LEGO Creator Expert Gingerbread House 10267 Building Kit Instruction Manual](#)

LEGO 10267

LEGO Creator Expert Gingerbread House 10267 Instruction Manual

Brand: LEGO | Model: 10267

PRODUCT OVERVIEW

The LEGO Creator Expert 10267 Gingerbread House offers a detailed and engaging building experience. This model features frosted roofs adorned with colorful candy buttons, candy-cane columns, glittery windows, and a tall chimney stack with a glowing fireplace. The interior includes various candy-themed furnishings, such as a bedroom with a chocolate bed and cotton candy lamp, and a bathroom complete with a toilet and bathtub. Interactive elements include a light-up fireplace activated by pressing the chimney smoke, a snow blower, and a baby carriage for the gingerbread baby figure. The set also comes with a decorated holiday tree, wrapped gifts, a rocking horse, and a toy train. This advanced LEGO set provides a challenging and rewarding build, serving as an excellent seasonal display piece.



Image: The complete LEGO Creator Expert Gingerbread House 10267 set, including the house, gingerbread figures, and various festive accessories, as depicted on the product packaging.

SETUP AND ASSEMBLY

The LEGO Creator Expert Gingerbread House 10267 building kit contains 1,477 pieces. It is recommended for ages 12 and up, offering a challenging yet rewarding building experience. The set includes detailed instruction books to guide you through each step of the assembly process. All bags are numbered to facilitate organized construction. The building process involves constructing the main gingerbread house structure, adding intricate details like frosted roofs and candy decorations, and assembling the various accessory builds such as the holiday tree, snow blower, baby carriage, rocking horse, and toy train.



Image: The LEGO Gingerbread House 10267 displayed with all its individual components and figures, ready for assembly or play.

OPERATING FEATURES

The Gingerbread House features several interactive elements:

- **Light-Up Fireplace:** Press down on the chimney smoke element to activate the light brick inside the fireplace, creating a warm, glowing effect.
- **Movable Accessories:** The included snow blower has functional wheels, allowing the gingerbread man figure to 'clear' the snow. The baby carriage can hold the gingerbread baby figure and rolls smoothly.
- **Opening Doors:** The main entrance door and a side door on the house can be opened and closed, providing access to the detailed interior.
- **Detailed Interior:** Explore the two-story interior, which includes a kitchen, living room with a chair and fireplace, a bathroom with a toilet and bathtub, and a bedroom with a bed and a crib.



Image: A detailed front view of the assembled Gingerbread House, highlighting the festive exterior and the illuminated fireplace.



Image: The interior of the Gingerbread House, revealing the detailed rooms on both levels, including the kitchen, living area, bathroom, and bedroom.

Video: An official LEGO video showcasing the features and playability of the Creator Expert Gingerbread House 10267, including the light-up fireplace and various accessories.

MAINTENANCE

To maintain the quality and longevity of your LEGO Creator Expert Gingerbread House, follow these guidelines:

- **Cleaning:** Dust the model regularly with a soft brush or compressed air. For deeper cleaning, gently wash individual bricks with mild soap and lukewarm water, then rinse thoroughly and air dry. Avoid harsh chemicals or abrasive materials.
- **Storage:** When not on display, the set can be disassembled and stored in its original packaging or in a secure container to prevent loss of pieces. Keep LEGO bricks away from direct sunlight and extreme temperatures to prevent discoloration or warping.
- **Disassembly:** Use a brick separator tool (often included with LEGO sets) to safely separate stubborn bricks without damaging them.

TROUBLESHOOTING

If you encounter any issues during assembly or with the set components:

- **Missing Pieces:** In the rare event of missing pieces, please contact LEGO Customer Service directly. They

are typically able to provide replacement parts.

- **Light Brick Malfunction:** Ensure the batteries (2 LR44, included) are correctly installed and not depleted. If the issue persists, contact LEGO Customer Service.
- **Assembly Difficulties:** Double-check the instruction manual for the specific step. LEGO instructions are highly detailed; a small oversight can often be the cause of difficulty.

SPECIFICATIONS

- **Product Dimensions:** 0.04 x 0.04 x 0.04 inches
- **Item Weight:** 2.2 pounds
- **Item Model Number:** 10267
- **Manufacturer Recommended Age:** 12 years and up
- **Batteries:** 2 LR44 batteries required (included)
- **Release Date:** January 1, 2020
- **Language:** English
- **Manufacturer:** LEGO

WHAT'S IN THE BOX

- LEGO Building Elements (1,477 pieces)
- Instruction Manuals
- 2 LR44 Batteries (pre-installed in light brick)

WARRANTY AND SUPPORT

LEGO stands by the quality of its products. If you experience any issues with missing parts, defective elements, or require assistance with your building set, please contact LEGO Customer Service. They are committed to ensuring customer satisfaction and will assist with replacements or troubleshooting as needed. Refer to the official LEGO website for the most up-to-date contact information and support resources.