

HP 14-cb159nr

HP Stream 14-inch Laptop User Manual

MODEL: 14-CB159NR

- [Introduction](#)
- [What's in the Box](#)
- [Product Overview](#)
- [Setup](#)
- [Operating](#)
- [Instructions](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Warranty & Support](#)

1. Introduction

This manual provides comprehensive instructions for the HP Stream 14-inch Laptop, Model 14-cb159nr. It covers initial setup, operation, maintenance, and troubleshooting to ensure you get the most out of your device. This laptop is designed for everyday productivity and entertainment, featuring a portable design, long battery life, and essential connectivity.

2. What's in the Box

Upon unboxing your HP Stream 14-inch Laptop, please verify that all the following items are included:

- HP Stream 14-inch Laptop (Model 14-cb159nr)
- Battery (pre-installed or separate)
- Power Adapter and Cord
- Quick Start Guide (if applicable)

Make Everyday Productive

Powerful enough for your busiest days, this PC features an Intel processor and reliable flash-based storage at a great value.



**Intel Celeron
N4120**



**Intel UHD
Graphics 600**



**RAM
4GB**



**eMMC
64GB**

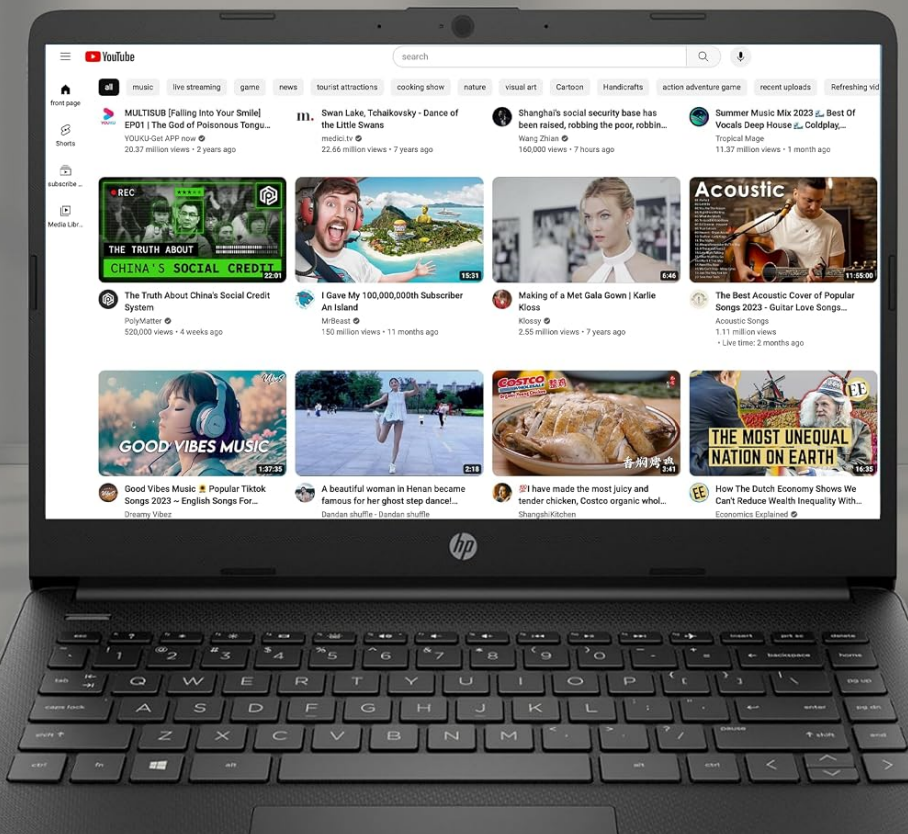


Image: The HP Stream 14-inch Laptop with its power adapter and cord, as typically found in the box.

3. Product Overview

Familiarize yourself with the physical components and key features of your HP Stream 14-inch Laptop.

3.1. External Features and Ports



Image: A diagram illustrating the various ports on the HP Stream 14-inch Laptop, including USB Type-A, USB Type-C, HDMI, Headphone Jack, AC Smart Pin, and SD Card Reader.

- **USB Type-C Port:** For data transfer and connecting compatible devices.
- **USB Type-A Ports (x2):** For connecting standard USB devices like mice, keyboards, or external drives.
- **HDMI 1.4b Port:** For connecting to external displays or projectors.
- **RJ-45 Ethernet Port:** For wired network connections (10/100/1000 GbE LAN).
- **AC Smart Pin:** For connecting the power adapter to charge the laptop.
- **Headphone/Microphone Combo Jack:** For connecting headphones or an external microphone.
- **Multi-format SD Media Card Reader:** For reading and writing data to SD cards.
- **HP True Vision 720p HD Webcam:** Integrated webcam for video calls and conferencing.

3.2. Display and Keyboard

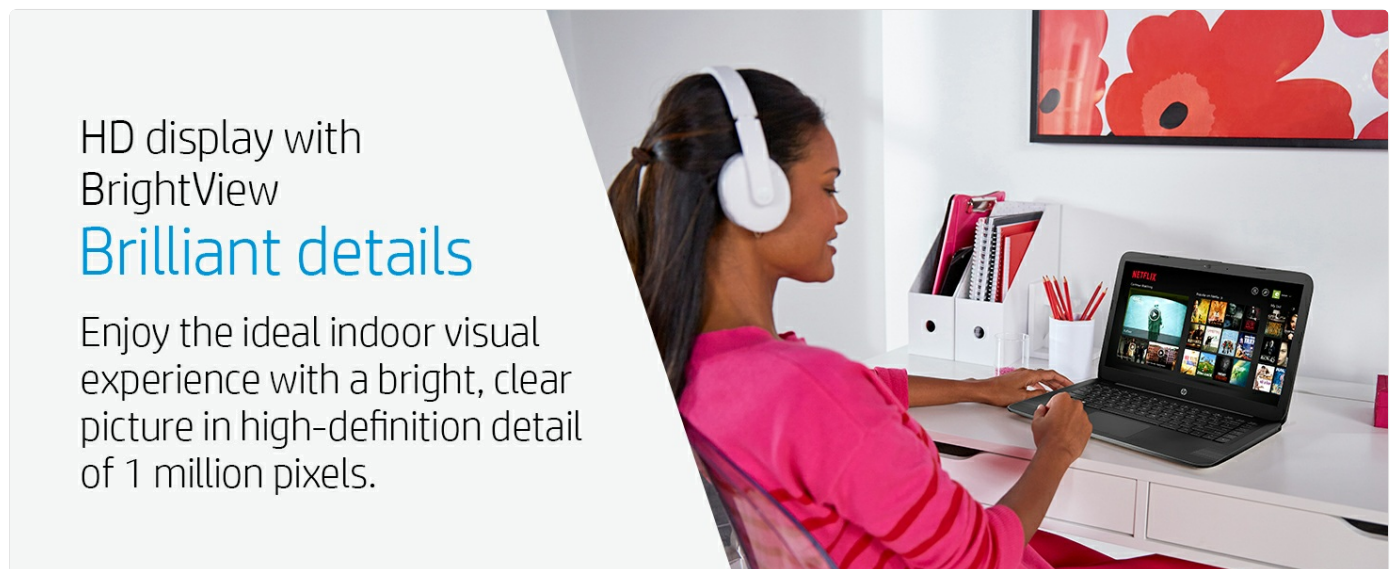


Image: The HP Stream 14-inch Laptop showcasing its 14-inch HD (1366 x 768) micro-edge BrightView display.

- **14-inch HD (1366 x 768) Display:** Features a micro-edge, BrightView, anti-glare coating for comfortable viewing.
- **Full-size Keyboard:** QWERTY layout for comfortable typing.
- **Touchpad:** Precision touchpad with multi-touch gesture support.

4. Setup

Follow these steps for the initial setup of your HP Stream 14-inch Laptop:

1. **Connect Power:** Plug the power adapter into the laptop's AC Smart Pin port and then into a wall outlet. Allow the battery to charge for a few minutes before proceeding.
2. **Power On:** Open the laptop lid and press the power button, usually located on the top right of the keyboard deck.
3. **Initial Windows Setup:** Follow the on-screen prompts to complete the Windows 10 Home in S Mode setup. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.
4. **Activate Microsoft Office 365:** If your laptop includes a 1-year subscription to Microsoft Office 365, open any Office application (Word, Excel) and follow the on-screen instructions to activate it.

Improve your productivity Office 365 Personal

Connect and work anywhere with full access to Office 365 apps and 1 TB of OneDrive cloud storage.



Image: The HP Stream 14-inch Laptop displaying Microsoft Office 365 applications, highlighting the included subscription.

5. Operating Instructions

This section covers basic operation and usage tips for your laptop.

5.1. Windows 10 Home in S Mode

Your laptop operates on Windows 10 Home in S Mode, which is designed for security and performance. In S Mode, you can only install apps from the Microsoft Store and must use Microsoft Edge for safe browsing. If you need to install apps from outside the Microsoft Store, you can switch out of S Mode. This is a one-way switch and cannot be undone.

Improve your productivity Windows 10 Home in S Mode

The most secure Windows ever built, with fast boot times and added protection against phishing and malware.



Image: Visual representation of Windows 10 Home in S Mode, emphasizing its security and performance benefits.

5.2. Connecting to Wi-Fi and Bluetooth

- **Wi-Fi:** Click the Wi-Fi icon in the taskbar, select your network, enter the password, and click Connect. The laptop supports 802.11ac for strong, reliable connections.
- **Bluetooth:** To pair Bluetooth devices, go to *Settings > Devices > Bluetooth & other devices*, turn Bluetooth on, and select "Add Bluetooth or other device."

5.3. Using External Displays

Connect an external monitor or TV using the HDMI port. Press the **Windows key + P** to open the Project menu and

choose your display option (Duplicate, Extend, Second screen only).

6. Maintenance

Proper maintenance ensures the longevity and optimal performance of your laptop.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and exterior. For stubborn smudges, dampen the cloth slightly with water or a screen cleaner. Avoid harsh chemicals.
- **Battery Care:** To maximize battery life, avoid extreme temperatures. It is recommended to let the battery discharge partially before recharging, rather than keeping it constantly at 100%.
- **Software Updates:** Regularly check for and install Windows updates to ensure your system has the latest security patches and performance improvements. Go to *Settings > Update & Security > Windows Update*.
- **Storage Management:** Periodically clear unnecessary files and applications to free up storage space on the 64 GB eMMC drive.

7. Troubleshooting

Here are solutions to common issues you might encounter:

Problem	Solution
Laptop does not power on.	Ensure the power adapter is securely connected and the outlet is working. Try holding the power button for 15 seconds to perform a hard reset.
Wi-Fi connection issues.	Restart your router and modem. Check if Wi-Fi is enabled in Windows settings. Run the Windows Network Troubleshooter.
Slow performance.	Close unnecessary applications. Check for Windows updates. Consider running a disk cleanup to free up space. If in S Mode, ensure all apps are from the Microsoft Store.
Screen is blank or flickering.	Connect an external monitor to check if the issue is with the laptop screen. Update graphics drivers. Restart the laptop.

8. Specifications

Detailed technical specifications for the HP Stream 14-inch Laptop (Model 14-cb159nr):

Feature	Detail
Brand	HP
Model Name	14-cb159nr
Screen Size	14 Inches
Color	Jet Black
CPU Model	Intel Celeron N4000 (up to 2.6 GHz)
RAM Memory Installed Size	4 GB DDR4 SDRAM (2400 MHz)
Hard Disk Size	64 GB Embedded MultiMediaCard (eMMC)

Feature	Detail
Operating System	Windows 10 Home in S Mode
Graphics Coprocessor	Integrated Intel Iris Xe Graphics
Special Feature	Anti Glare Coating
Item Weight	1.5 Kilograms
Item Dimensions (L x W x Thickness)	13"L x 11"W x 0.7"Th
Battery Life	Up to 14 Hours (3-cell Lithium Ion, 41 Watt Hours)
Connectivity Technology	USB, Wi-Fi (802.11ac), Bluetooth 5, Ethernet (1 Gbps)
Total USB Ports	3 (including 1 USB Type-C)
HDMI Ports	1
Webcam Capability	HP True Vision 720p HD Webcam

9. Warranty and Support

Your HP Stream 14-inch Laptop comes with a standard warranty and access to support resources.

- **Warranty:** This product includes a 1-year limited hardware warranty. For detailed terms and conditions, please refer to the warranty documentation included with your product or visit the official HP support website.
- **Technical Support:** For technical assistance, driver downloads, or further troubleshooting, please visit the official HP Support website or contact HP customer service. You can find contact information and support resources by searching for "HP Support" online.
- **Online Resources:** Explore HP's online knowledge base for FAQs, user forums, and additional guides related to your laptop model.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07WMDV7CW>

More documents and user manuals: <https://manuals.plus/>