

## Clatronic MS 3089

# Clatronic MS 3089 Milk Frother Instruction Manual

Model: MS 3089

## 1. INTRODUCTION

---

Thank you for choosing the Clatronic MS 3089 Milk Frother. This battery-operated device is designed for quickly creating milk foam and mixing various ingredients. Its compact design and stainless steel whisk ensure ease of use and cleaning. Please read this manual carefully before first use to ensure safe and optimal operation.



Image 1: Clatronic MS 3089 Milk Frother. This image shows the main unit of the frother, highlighting its blue plastic body and stainless steel whisk.



Image 2: Product Packaging. This image displays the retail packaging of the Clatronic MS 3089 Milk Frother, showing the product and key features.

## 2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep the appliance out of reach of children.
- Do not immerse the main body of the frother in water or other liquids. Only the whisk should come into contact with liquids.
- Ensure batteries are inserted correctly according to polarity markings.
- Remove batteries if the appliance will not be used for an extended period.
- Do not mix old and new batteries, or different types of batteries.
- Do not use the appliance for purposes other than those described in this manual.
- Avoid contact with moving parts.
- This appliance is for household use only.

### 3. PRODUCT OVERVIEW

---

The Clatronic MS 3089 Milk Frother consists of a main body with a soft-touch finish and a durable stainless steel whisk. It is designed for comfortable handling and efficient performance.

- **Main Body:** Houses the motor and battery compartment, featuring a soft-touch surface for a secure grip.
- **Operating Button:** Located on the top of the main body for easy activation.
- **Stainless Steel Whisk:** Detachable for easy cleaning and effective frothing/mixing.



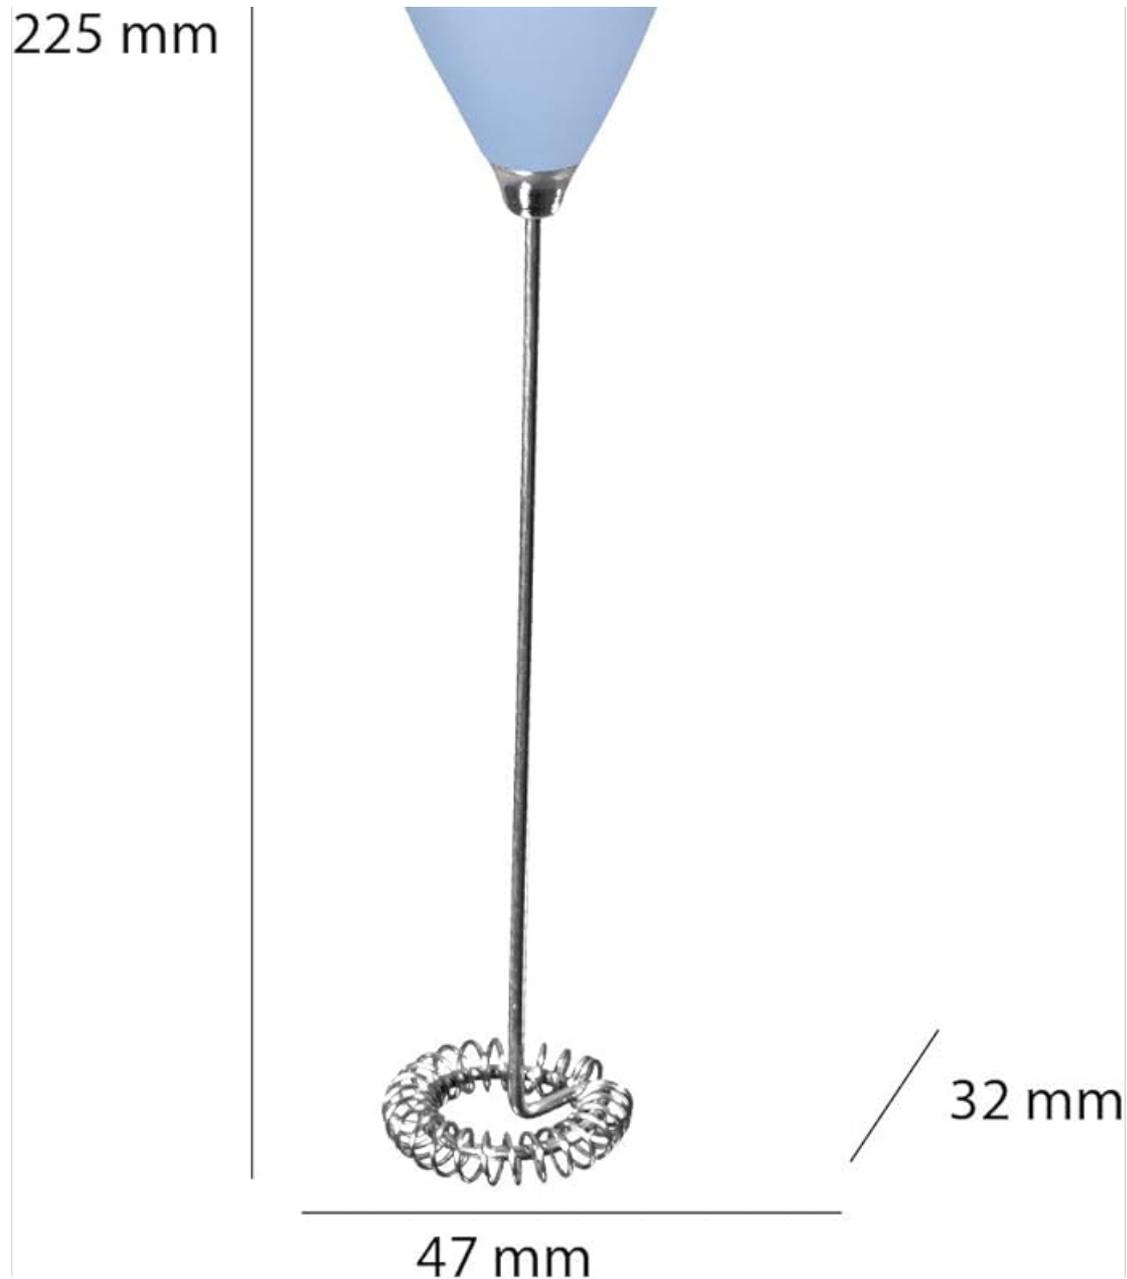


Image 3: Product Dimensions. This image illustrates the dimensions of the frother, showing a length of 225 mm, whisk diameter of 47 mm, and body width of 32 mm.

## 4. SETUP

### 4.1 Battery Installation

1. Twist and pull off the bottom part of the frother's main body to access the battery compartment.
2. Insert two (2) 1.5V AA/UM3 batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Replace the bottom part of the frother, twisting it securely until it clicks into place.

*Note: Batteries are not included with the product and must be purchased separately.*

## 5. OPERATING INSTRUCTIONS

### 5.1 Frothing Milk

1. Pour cold or warm milk into a suitable container. For best results, use milk that is at least half-full in

the container to allow for foam expansion.

2. Immerse the stainless steel whisk into the milk, ensuring the whisk head is fully submerged but not touching the bottom of the container.
3. Press and hold the operating button on top of the frother to start the whisk.
4. Move the frother up and down gently in the milk for approximately 15-30 seconds, or until desired foam consistency is achieved.
5. Release the operating button to stop the whisk.
6. Carefully remove the frother from the milk.



Image 4: Frother in Use with Coffee. This image shows the Clatronic MS 3089 Milk Frother positioned next to a glass of frothed coffee, illustrating its primary function.



Image 5: Serving Frothed Milk. This image shows frothed milk being poured from a pitcher into a mug, demonstrating a typical use case after frothing.

## 5.2 Mixing Other Ingredients

The Clatronic MS 3089 can also be used to mix various other ingredients, such as:

- Cappuccinos and lattes (beyond just frothing milk)
- Cocktails and long drinks
- Sauces and dips
- Omelette mixtures
- Milkshakes and smoothies

To mix, simply immerse the whisk into the ingredients and press the operating button until thoroughly combined.



Image 6: Versatile Applications. This image displays the frother in the center, surrounded by examples of its use for cappuccino, cocktails, long drinks, milkshakes, smoothies, omelettes, sauces, and dips.

## 6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your frother.

1. After each use, immediately rinse the stainless steel whisk under running water.
2. For thorough cleaning, the whisk can be gently wiped with a damp cloth and mild detergent.
3. **Important:** The main body of the frother is **not** waterproof. Do not immerse it in water or place it in a dishwasher. Clean the main body with a slightly damp cloth only, then wipe dry.
4. Ensure all parts are completely dry before storing.

*Product Care Instructions: Hand Wash Only.*

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Frother does not turn on.	Batteries are dead or incorrectly inserted.	Check battery polarity. Replace with fresh 1.5V AA/UM3 batteries.
Poor frothing results.	Milk type or temperature not ideal; whisk not fully submerged.	Use fresh, cold milk for best foam. Ensure whisk is fully submerged and moved gently.
Whisk rotates slowly.	Low battery power.	Replace batteries.

## 8. SPECIFICATIONS

---

- **Model:** MS 3089 (263917)
- **Brand:** Clatronic
- **Power Source:** Battery Powered
- **Batteries Required:** 2 x 1.5V AA/UM3 (not included)
- **Material:** Plastic (body), Stainless Steel (whisk)
- **Color:** Blue (for this variant)
- **Product Dimensions (W x H):** Approximately 1.85" x 8.86" (47mm x 225mm)
- **Item Weight:** Approximately 100 Grams
- **Special Feature:** Soft touch housing, easy to clean
- **Recommended Uses:** Foam, mixing

## 9. WARRANTY AND SUPPORT

---

Clatronic products are manufactured with quality and care. For information regarding warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Clatronic website.

For technical support or inquiries, please contact Clatronic customer service. You may also find additional information and support resources on the manufacturer's website.

**Online Resources:** [Clatronic QR Code Link](#)