

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Casio](#) /

> [Casio Casiotone CT-S300 – Portable Keyboard | Touch-Sensitive | 400 Tones, 77 Rhythms & Pitch Bend | Ideal for Music Creation Anytime, Anywhere Keyboard Only](#)

Casio CT-S300

Casio Casiotone CT-S300 User Manual

Portable Keyboard | Model: CT-S300

INTRODUCTION

The Casio Casiotone CT-S300 is a portable electronic keyboard designed for musicians of all levels. It features 61 touch-sensitive keys, a wide array of tones and rhythms, and versatile connectivity options, making it suitable for practice, performance, and music creation anywhere.



Figure 1: Top-down view of the Casio Casiotone CT-S300 Portable Keyboard.

SETUP

Power Supply

The CT-S300 can be powered by either the included AC adapter or six AA batteries. For extended use, the AC adapter is recommended. For portability, insert six AA batteries into the compartment located on the underside of the keyboard.

Attaching the Music Rest

The included music rest can be easily inserted into the designated slots above the control panel. This provides a stable surface for holding sheet music or a tablet.

Connecting External Devices

- **Headphones:** Connect headphones to the 3.5mm jack for private practice.
- **Audio Input:** Use the 1/8" audio input to connect an external audio device (e.g., smartphone, MP3 player) and

play along with your favorite music.

- **USB-MIDI:** The class-compliant USB port allows connection to a computer (Mac/PC) or mobile device (iOS/Android) for MIDI functionality, enabling use with music software and apps like Casio Music Space.



Figure 2: Detail of the control panel and connectivity options on the Casio Casiotone CT-S300.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the **POWER** button located on the left side of the control panel to turn the keyboard on or off.

Volume Control

Adjust the master volume using the **VOLUME +** and **-** buttons next to the power button.

Tone Selection

The CT-S300 features 400 high-quality tones. Use the large rotary dial in the center of the control panel to browse and select different instrument sounds. The LCD display will show the selected tone name and number.

Rhythm Selection

Choose from 77 built-in rhythms to accompany your playing. Use the dedicated rhythm selection buttons or the rotary dial to navigate through the rhythm options.

Dance Music Mode

Engage Dance Music Mode to easily create and remix EDM tracks. This mode allows you to trigger drum loops, basslines, synth parts, effects, and transitions directly from the keyboard keys.

Pitch Bend Wheel

Utilize the pitch bend wheel to add expressive nuances to your playing, such as guitar bends or horn gestures. This wheel allows for real-time pitch modulation of the selected tone.

Sustain Function

Press the **SUSTAIN** button to enable or disable the sustain effect, allowing notes to ring out longer after the keys are released.

"My Setup" Button

The "My Setup" button allows you to quickly recall your favorite sounds and settings. Configure your preferred tone, rhythm, and other parameters, then save them to this button for instant access.

Casio Music Space App Integration

Connect your CT-S300 to the free Casio Music Space app (available for iOS/Android) via USB-MIDI. The app offers interactive lessons, allows you to view MIDI files, and track your progress, enhancing your learning experience.



Figure 3: User interacting with the Casio Casiotone CT-S300, showcasing its interactive features.

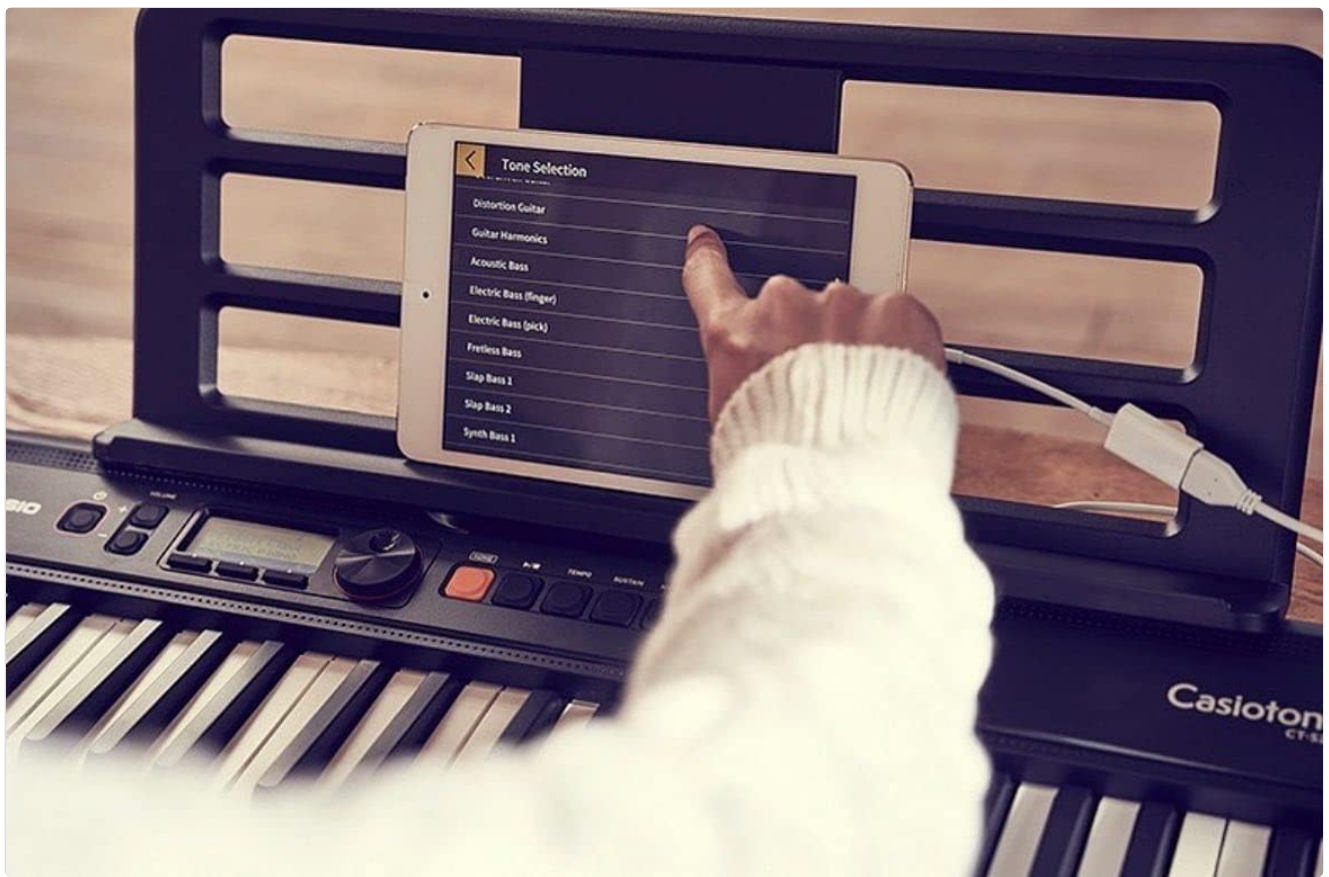


Figure 4: Casio Casiotone CT-S300 connected to a tablet, demonstrating app integration for learning and music creation.

MAINTENANCE

Cleaning

Wipe the keyboard's surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or polishes, as these can damage the finish. For keys, a slightly damp cloth can be used, followed by a dry cloth.

Storage

Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

No Sound

- Ensure the power is on and the AC adapter is securely connected or batteries are correctly inserted.
- Check the master volume level and increase it if necessary.
- If headphones are connected, ensure they are fully plugged in and functioning correctly. Disconnect them to check if sound comes from the built-in speakers.

Keys Not Responding

- Verify the keyboard is powered on.
- If only certain keys are affected, ensure no debris is lodged beneath them.
- Try resetting the keyboard by turning it off and then on again.

SPECIFICATIONS

Feature	Detail
Model Name	CT-S300
Number of Keys	61
Key Type	Touch-Sensitive
Tones	400
Rhythms	77
Built-in Songs	60
Connectivity	USB (Type B), 3.5mm Audio In, 3.5mm Headphone Out
Power Source	AC Adapter (included) or 6 AA Batteries
Dimensions (W x D x H)	36.61" x 10.08" x 2.83"
Weight	10.93 lbs

WARRANTY AND SUPPORT

For detailed warranty information, product registration, and technical support, please refer to the official Casio website or contact Casio customer service. Keep your proof of purchase for warranty claims.

Online resources, including FAQs and additional manuals, may also be available on the manufacturer's support pages.