

[Manuals.plus](#) /

› [AGARO](#) /

› AGARO Esteem Electric Multipurpose Kettle 1.2L Instruction Manual

AGARO Esteem 33874

AGARO Esteem Electric Multipurpose Kettle 1.2L Instruction Manual

Model: Esteem 33874

INTRODUCTION

Thank you for purchasing the AGARO Esteem Electric Multipurpose Kettle. This appliance is designed for various cooking tasks such as boiling water, preparing tea, coffee, oats, noodles, and soup. Please read this manual carefully before use to ensure safe and efficient operation. Keep this manual for future reference.



Image: The AGARO Esteem Electric Multipurpose Kettle, showcasing its versatility with different prepared dishes.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the kettle base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.

- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Exercise extreme caution when moving an appliance containing hot liquid.
- This kettle is designed for boiling, steaming, and light cooking only. **Do not use for oil-based cooking like sautéing or deep frying.**
- **Avoid boiling milk directly in the kettle** as it may burn easily and cause difficult-to-remove stains due to the thin stainless steel construction.

Not for Oil-Based Cooking

This kettle is designed for boiling, steaming and light cooking only

No
Sautéing



No
Deep Frying



Image: Visual warning indicating the kettle is not suitable for sautéing or deep frying.

Components

- Kettle Body (Stainless Steel)
- Glass Lid
- Detachable Power Base (360-degree swivel)
- Adjustable Heat-setting Knob
- Food Grade Egg Boiling Rack
- Stainless Steel Rack
- Plastic Bowl

Key Features

- **Capacity:** 1.2 Liters
- **Power:** 600 Watts
- **Material:** Food Safe Stainless Steel
- **Heating Modes:** 3 (Boiling, Heating, Keep Warm)
- **Lid:** Transparent glass lid for monitoring cooking.
- **Handle:** Cool-touch handle for safe handling.
- **Mouth:** Wide mouth for easy cleaning and pouring.

Make Every Meal Effortless


Glass Lid to
Check the Cooking
Progress


Food Safe
Stainless Steel


Wider Mouth for
Easy Pouring &
Cleaning


Cool Touch
Handle


3 Adjustable
Heat-setting Knob

Image: An exploded view of the kettle highlighting its components like the glass lid, stainless steel interior, cool-touch handle, wide mouth, and adjustable heat-setting knob.

Know Your Multi-Tasking Kettle



**Food Grade
Plastic Bowl**



**Egg Boiling
Rack**



**Stainless Steel
Rack**



Image: The included accessories: a food-grade plastic bowl, an egg boiling rack, and a stainless steel rack.

SETUP

1. **Unpack:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wipe the exterior of the kettle with a damp cloth. Wash the interior of the kettle, glass lid, and all accessories (egg rack, grill rack, plastic bowl) with warm soapy water, then rinse thoroughly. Ensure the electrical parts of the kettle and the power base do not get wet.
3. **Placement:** Place the power base on a stable, flat, heat-resistant surface, away from water sources.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet (230 Volts).

OPERATING INSTRUCTIONS

Filling the Kettle

- Open the lid and fill the kettle with the desired amount of water or food.
- Do not fill below the minimum mark or above the maximum mark (1.2 Liters). Overfilling may cause boiling water to spill out.
- Ensure the lid is securely closed before operating.

Using the Heating Modes

The kettle features three distinct heating modes controlled by the adjustable heat-setting knob. The knob is small and tight; ensure the indicator bobble is precisely aligned with your desired setting.



Image: Illustration of the three heating modes: Keep Warm, Heating, and Boiling, with their respective functions.

1. Keep Warm (50-60°C):

- Turn the knob to the "KEEP WARM" setting.
- The kettle will maintain a temperature between 50-60°C with an auto cut-off cycle.
- Ideal for keeping beverages or food warm without continuous boiling.

2. Heating (Up to 100°C):

- Turn the knob to the "HEATING" setting.
- The kettle will heat water up to 100°C.
- It will then auto cut off for 1-2 minutes and restart when the temperature drops.
- Suitable for heating water for tea, coffee, or preparing instant foods.

3. Boiling (Continuous):

- Turn the knob to the "BOILING" setting.
- The kettle will boil water continuously.
- It will not auto cut-off until the water dries up. Use this mode with caution and never leave unattended.
- This mode is suitable for boiling eggs, noodles, or other foods that require sustained boiling.

After selecting the desired mode, the indicator light will illuminate, signifying that the kettle is operating. Once cooking is complete, turn the knob to "OFF" and unplug the kettle from the power outlet.

Cooking Examples

- **Boiled Eggs:** Place eggs in the egg boiling rack, add water to cover, and select the "BOILING" mode.
- **Noodles/Pasta:** Add water and noodles, select "BOILING" mode. Stir occasionally to prevent sticking.
- **Soups:** Add ingredients and water, select "BOILING" or "HEATING" mode as required.
- **Steaming:** Use the stainless steel rack for steaming vegetables or other items above the water level.

Various Cooking



Boiled Veg or
Non-Veg



Tea or
Coffee



Boiled Egg



Soups



Noodles



Image: Visual examples of various dishes that can be prepared using the multipurpose kettle, including boiled vegetables, tea, coffee, boiled eggs, soups, and noodles.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your kettle. Always unplug the kettle and allow it to cool completely before cleaning.

1. **Cool Down:** Ensure the kettle has cooled down completely after use.
2. **Interior Cleaning:** For general cleaning, add water and a small amount of dish soap to the kettle. Clean gently with a soft sponge.
3. **Rinse:** Discard the soapy water and rinse the interior thoroughly with clean water.
4. **Exterior Cleaning:** Wipe the exterior of the kettle with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. **Avoid Water Contact with Base:** Never immerse the kettle base or power base in water or any other liquid. Avoid direct water contact with the electrical components.

6. **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
- Fill the kettle with a mixture of equal parts water and white vinegar (or a commercial descaling solution).
 - Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy deposits.
 - Empty the kettle and rinse thoroughly several times with fresh water.
 - If necessary, repeat the process.
7. **Stain Removal:** For stubborn food stains, particularly if milk or other foods have burned, a paste of baking soda and water can be applied and left for a short period before gently scrubbing with a soft sponge. Rinse thoroughly.

Clean it Right. Use it Longer.



1
Let the kettle
cool down



2
Add water
using a jug



3
Add dish soap



4
Clean gently with
a soft sponge



5
Discard
the soapy water



6
Avoid water contact
with kettle base

Image: A step-by-step visual guide demonstrating how to clean the kettle, including cooling, adding water and soap, gentle scrubbing, discarding water, and avoiding water on the base.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; power outlet not working; kettle not properly seated on base.	Check power cord connection. Test outlet with another appliance. Ensure kettle is correctly placed on the power base.
Water not heating or boiling.	Incorrect heating mode selected; insufficient water; kettle needs descaling.	Verify the heat-setting knob is on "HEATING" or "BOILING". Ensure water level is above minimum. Descale the kettle if limescale buildup is present.
Kettle switches off too quickly in "Heating" mode.	This is normal operation for the "Heating" mode (auto cut-off at 100°C, restarts when temperature drops).	If continuous boiling is required, use the "BOILING" mode.
Food burns easily on the bottom.	Thin stainless steel construction; not stirring; unsuitable food type (e.g., milk).	Stir food frequently during cooking. Avoid boiling milk or other foods prone to burning. Use for boiling water, steaming, or light cooking.
Stains or discoloration inside the kettle.	Mineral deposits (limescale); food residue.	Perform descaling as per cleaning instructions. For food stains, use baking soda paste and gentle scrubbing.

SPECIFICATIONS

Brand	AGARO
Model Name	Esteem
Model Number	33874
Capacity	1.2 Liters
Wattage	600 Watts
Voltage	230 Volts
Material	Stainless Steel
Color	Black
Product Dimensions (L x W x H)	6.5L x 6.5W x 9.6H Centimeters
Item Weight	1100 Grams
Special Feature	Multi cooking, 3 Heating Modes, Rapid Boil Technology

WARRANTY AND SUPPORT

This AGARO Esteem Electric Multipurpose Kettle comes with a **1 Year Manufacturer's Warranty** from the date of purchase.

The warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

For warranty claims, technical support, or service inquiries, please contact AGARO customer service. Please retain your purchase receipt as proof of purchase.

Manufacturer: PurpleStar Mfg. Pvt. Ltd., Chinthamani – Taluk, Karnataka-563 128.

Importer: Universal Corporation Ltd, 4/1, Middleton St, Kankaria Estates, Park Street area, Kolkata, West Bengal 700071
Phone: 033 6136 4500

© 2026 AGARO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07WNK1FFN>

More documents and user manuals: <https://manuals.plus/>