

## XTREME DIGITAL LIFESTYLE ACCESSORIES PCA2-1008-AST

# Xtreme Wireless Keyboard and Mouse Set User Manual

Model: PCA2-1008-AST

## INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Xtreme Wireless Keyboard and Mouse Set. This set is designed to offer a flexible and efficient solution for your computing needs, compatible with both PC and Mac systems.

Key features include:

- Wireless connectivity for a clutter-free workspace.
- Universal compatibility with Mac and PC desktop computers.
- Operating range of up to 30 feet from your computer.
- Easy plug-and-play setup with a Nano USB Receiver.
- Battery-powered for portability (1 AAA for keyboard, 1 AA for mouse).

## PACKAGE CONTENTS

Please ensure all items are present in your package:

- 1 x Xtreme Wireless Keyboard
- 1 x Xtreme Wireless Mouse
- 1 x Nano USB Receiver
- User Manual (this document)

Image: Front view of the Xtreme Wireless Keyboard and Mouse Set packaging, clearly displaying the keyboard, mouse, and the mention of a USB receiver. The box highlights "Wireless Range 30 Feet" and "USB Connectivity".

## SETUP GUIDE

### 1. Install Batteries

**For the Mouse:** Locate the battery compartment on the underside of the mouse. Insert one (1) AA battery, ensuring correct polarity (+/-). Close the battery compartment cover.

**For the Keyboard:** Locate the battery compartment on the underside of the keyboard. Insert one (1) AAA battery, ensuring correct polarity (+/-). Close the battery compartment cover.

*Note: Batteries are not included and must be purchased separately.*

## 2. Connect the USB Receiver

Plug the Nano USB Receiver into an available USB port on your computer (PC or Mac). The system will automatically detect and install the necessary drivers. No additional software installation is required.

Image: Back view of the Xtreme Wireless Keyboard and Mouse Set packaging, illustrating the wireless connectivity and the Nano USB receiver. It also shows a person using the keyboard, emphasizing its portability and ease of use.

## 3. Power On and Test

Once the batteries are installed and the USB receiver is connected, the keyboard and mouse should be ready for use. Test both devices to ensure they are functioning correctly. The wireless connection has a range of up to 30 feet.

# OPERATING INSTRUCTIONS

---

## General Use

The Xtreme Wireless Keyboard and Mouse Set operates like standard wired peripherals but offers the freedom of wireless connectivity. Ensure the devices are within the 30-foot operating range of the USB receiver for optimal performance.

- **Keyboard:** Type as you would with any standard keyboard. All standard keys and functions are available.
- **Mouse:** Use for navigation, clicking, and scrolling. The optical sensor provides precise tracking.

## Power Saving

To conserve battery life, the keyboard and mouse may enter a low-power sleep mode after a period of inactivity. Simply press any key on the keyboard or move the mouse to wake them up.

# MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when performance degrades or devices stop responding. Always use fresh, high-quality AA (for mouse) and AAA (for keyboard) batteries. Dispose of old batteries responsibly according to local regulations.
- **Storage:** When not in use for extended periods, remove batteries to prevent leakage and store the devices in a cool, dry place.

# TROUBLESHOOTING

---

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Keyboard or mouse not responding.	<ul style="list-style-type: none"> <li>Check if batteries are installed correctly and have sufficient charge. Replace if necessary.</li> <li>Ensure the Nano USB Receiver is securely plugged into a working USB port on your computer. Try a different USB port.</li> <li>Move the keyboard/mouse closer to the USB receiver to ensure it's within the 30-foot operating range.</li> <li>Restart your computer.</li> </ul>
Lag or intermittent connection.	<ul style="list-style-type: none"> <li>Reduce the distance between the devices and the USB receiver.</li> <li>Ensure there are no large metal objects or other electronic devices (like Wi-Fi routers, cordless phones) that might cause interference between the devices and the receiver.</li> <li>Replace batteries.</li> </ul>
Mouse cursor erratic or not moving smoothly.	<ul style="list-style-type: none"> <li>Clean the optical sensor on the underside of the mouse.</li> <li>Ensure you are using the mouse on a suitable surface (not highly reflective or transparent).</li> <li>Replace mouse battery.</li> </ul>

## SPECIFICATIONS

Feature	Detail
Model Number	PCA2-1008-AST
Brand	XTREME DIGITAL LIFESTYLE ACCESSORIES
Connectivity Technology	Radio Frequency (Wireless)
Wireless Range	Up to 30 feet (approx. 9 meters)
Compatible Devices	Personal Computer (PC), Mac
Keyboard Battery	1 x AAA (not included)
Mouse Battery	1 x AA (not included)
Movement Detection Technology (Mouse)	Optical
Product Dimensions	20 x 1.5 x 6 inches (approx. 50.8 x 3.8 x 15.2 cm)
Item Weight	1.5 pounds (approx. 0.68 kg)
Manufacturer	Jem Accessories

## WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the contact information provided on the product packaging or visit the official XTREME DIGITAL LIFESTYLE ACCESSORIES website. As this product is from a

small business brand, your support is greatly appreciated.

For further assistance, you may contact the manufacturer, Jem Accessories.

© 2024 XTREME DIGITAL LIFESTYLE ACCESSORIES. All rights reserved.