

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Veho](#) /
- > [Veho M-Series MD-1 Wireless Speaker with DAB Radio User Manual](#)

Veho VSS-230-MD1-C

Veho M-Series MD-1 Wireless Speaker with DAB Radio

Model: VSS-230-MD1-C | Brand: Veho

INTRODUCTION

The Veho M-Series MD-1 is a portable wireless speaker designed for versatile audio playback. It features Bluetooth connectivity for streaming from smart devices, a built-in DAB/FM radio for digital and analog broadcasts, and an auxiliary input for wired connections. Its retro design includes a leather-effect carry strap, enhancing portability. The integrated rechargeable battery supports extended use, making it suitable for various indoor and outdoor environments.



Front view of the Veho M-Series MD-1 Wireless Speaker, showcasing its retro design, central display, and speaker grille.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water or other liquids.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only the specified charging cable and power adapter.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners.

PACKAGE CONTENTS

Please check that all items are present:

- Veho M-Series MD-1 Wireless Speaker
- USB Charging Cable
- 3.5mm AUX Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Angled view of the Veho M-Series MD-1 Wireless Speaker, illustrating its dimensions (40cm length, 30cm height, 30cm depth) and the top-mounted controls.

Controls and Ports:

- **Power/Mode Button:** Press and hold to power on/off. Short press to switch between Bluetooth, DAB, FM, and AUX modes.
- **Volume Knob:** Rotate to adjust volume.
- **Play/Pause Button:** Play or pause audio in Bluetooth mode.
- **Track Skip Buttons (Previous/Next):** Skip tracks in Bluetooth mode. Navigate presets in radio mode.
- **Scan/Preset Button:** Initiate station scan in radio mode. Save/recall presets.
- **Display Screen:** Shows time, mode, station information, and battery status.
- **USB Charging Port:** For charging the internal battery.
- **3.5mm AUX Input:** For connecting external audio devices via cable.
- **Microphone:** For hands-free calling.

SETUP

1. Charging the Speaker

1. Connect the supplied USB charging cable to the speaker's USB charging port.
2. Connect the other end of the USB cable to a suitable USB power adapter (not supplied) or a computer's USB port.
3. The display will indicate charging status. Allow approximately 3-4 hours for a full charge.
4. Disconnect the cable once fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the Power/Mode button for a few seconds until the display illuminates.
- **To Power Off:** Press and hold the Power/Mode button again until the display turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

1. Power on the speaker. It will typically enter Bluetooth pairing mode automatically, indicated by a flashing Bluetooth icon on the display. If not, short press the Power/Mode button until "Bluetooth" is displayed.
2. On your smartphone or other Bluetooth device, enable Bluetooth and search for available devices.
3. Select "Veho MD-1" from the list.
4. Once paired, the Bluetooth icon will become solid, and you can begin streaming audio.
5. Use the Play/Pause and Track Skip buttons on the speaker or your connected device to control playback.
6. Adjust volume using the volume knob.

2. DAB/FM Radio Mode

1. Short press the Power/Mode button until "DAB" or "FM" is displayed.
2. **Automatic Scan:** In DAB or FM mode, press and hold the Scan/Preset button to initiate an automatic scan for available stations. The speaker will store found stations.
3. **Manual Tuning/Station Selection:** Use the Track Skip buttons to cycle through available stations or presets.
4. **Saving Presets (DAB/FM):**

- Tune to the desired station.
- Press and hold the Scan/Preset button until "Preset Store" appears.
- Use the Track Skip buttons to select a preset number (e.g., P01, P02).
- Press the Scan/Preset button again to confirm and save.

5. **Recalling Presets:** Short press the Scan/Preset button, then use the Track Skip buttons to select and play a saved preset.

3. AUX Mode

1. Connect one end of the 3.5mm AUX cable to the speaker's AUX input port.
2. Connect the other end to the headphone jack or audio output of your external device (e.g., MP3 player, laptop).
3. Short press the Power/Mode button until "AUX" is displayed.
4. Control playback directly from your connected external device. Adjust volume using the speaker's volume knob.

4. Hands-Free Calling

- When connected via Bluetooth to a smartphone, incoming calls will automatically interrupt audio playback.
- Press the Play/Pause button to answer an incoming call.
- Press the Play/Pause button again to end the call.
- The built-in microphone allows for clear communication.

MAINTENANCE

- **Cleaning:** Wipe the speaker's surface with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods. Store in a cool, dry place.
- **Storage:** When storing the speaker for a long time, ensure it is fully charged and power it off.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the speaker fully using the supplied USB cable.
No sound	Volume is too low; incorrect mode selected; device not paired (Bluetooth); AUX cable not fully inserted.	Increase volume. Ensure correct mode (Bluetooth, DAB, FM, AUX) is selected. Re-pair Bluetooth device. Check AUX cable connection.
Bluetooth pairing fails	Speaker is not in pairing mode; device is too far; interference; previously paired device connected.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker. Turn off other Bluetooth devices. Disconnect from previously paired devices.
Poor radio reception	Weak signal; environmental interference.	Relocate the speaker to an area with better reception. Try rescanning for stations.

SPECIFICATIONS

Model Name	MD 1
Model Number	VSS-230-MD1-C
Brand	Veho
Speaker Type	Outdoor
Connectivity Technology	Bluetooth, Auxiliary
Wireless Communication	Bluetooth
Hardware Interface	3.5mm Audio
Power Source	Battery Powered
Speaker Max Output Power	5 Watts
Item Weight	842 Grams
Product Dimensions	40 x 30 x 30 cm
Special Features	Bluetooth, Portable, Wireless, DAB Radio, Built-in Microphone

WARRANTY AND SUPPORT



Veho products are manufactured to the highest standards. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Veho website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Veho customer service through their official website or the contact information provided in your product packaging.



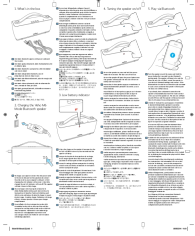

Website: www.veho-world.com



© 2024 Veho. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - VSS-230-MD1-C

	<p>Veho Mode MD-1 Wireless DAB+ Speaker - Portable Retro Bluetooth Speaker</p> <p>Discover the Veho Mode MD-1, a stylish retro Bluetooth wireless speaker with DAB/DAB+/FM radio. Enjoy up to 18 hours of playback, a built-in alarm clock, and a portable design with a leather effect carry strap.</p>
	<p>Veho MZ-S Bluetooth Wireless Speaker User Manual</p> <p>User manual for the Veho MZ-S Bluetooth wireless speaker. Learn about charging, controls, pairing, functions, specifications, and battery care. Includes multiple language support.</p>

	<p>Veho M3 Portable Wireless Speaker User Manual and Specifications</p> <p>Comprehensive guide to the Veho M3 portable wireless speaker, covering charging, Bluetooth pairing, TWS functionality, AUX connection, specifications, and compliance information.</p>
	<p>Veho MZ7 Bluetooth Wireless Speaker User Manual</p> <p>A comprehensive guide to the Veho MZ7 Bluetooth wireless speaker, covering charging, controls, pairing, functions, and specifications. Learn how to get the most out of your Veho MZ7 for an optimal audio experience. Visit veho-world.com for support.</p>
	<p>Veho M6 Mode Bluetooth Speaker Quick Start Guide</p> <p>A concise guide to setting up, charging, and operating the Veho M6 Mode Bluetooth speaker, covering pairing, controls, and basic functions.</p>
	<p>Veho TA-9 Universele Smartphonehouder voor in de Auto - Installatie en Gebruik</p> <p>Handleiding voor de Veho TA-9 universele smartphonehouder voor in de auto. Bevat installatie-instructies voor dashboard en ventilatieopening, smartphone plaatsing, onderhoud en conformiteitsinformatie.</p>