

[Manuals.plus](#) /

> [FLYLINKTECH](#) /

> FLYLINKTECH V6 3500 mAh Replacement Battery Instruction Manual for Dyson V6 Series Vacuum Cleaners

## FLYLINKTECH CET224

# FLYLINKTECH V6 3500 mAh Replacement Battery Instruction Manual

Model: CET224

## INTRODUCTION

Thank you for choosing the FLYLINKTECH V6 3500 mAh Replacement Battery. This battery is designed to provide extended power for your Dyson V6 series handheld vacuum cleaner. It features premium Samsung cells and a smart battery protection board for reliable performance. This manual provides essential information for the safe and effective use of your new battery.

### Package Contents:

- 1 x FLYLINKTECH V6 Replacement Battery (3500 mAh)
- 2 x V6 Replacement Pre-filters

# KOMPATIBEL MIT DER V8 - UND SV10 -SERIE



Dyson  
V8 Animal



Dyson  
V8 Absolute




Dyson  
V8 Fully



Dyson  
SV10-Serie



Dyson  
V8 Absolute Pro

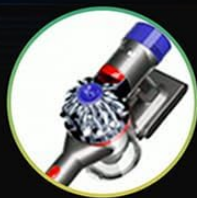

Dyson  
V8 Carbon Fiber



Dyson V8  
Animal Exclusive



Image: The FLYLINKTECH V6 replacement battery shown alongside the two included pre-filters.

## SETUP AND INSTALLATION

Before first use, please ensure the battery is fully charged. Follow these steps to install the replacement battery:

1. **Safety First:** Ensure your Dyson vacuum cleaner is turned off and unplugged from any charging source.
2. **Locate Battery:** The battery pack is typically located at the bottom of the vacuum's handle.
3. **Remove Old Battery:** Unscrew the retaining screws that secure the old battery in place. Carefully slide out the

old battery.

4. **Install New Battery:** Align the FLYLINKTECH replacement battery with the vacuum's battery slot. Slide it into place until it clicks securely.
5. **Secure Battery:** Reinsert and tighten the retaining screws to hold the new battery firmly.
6. **Initial Charge:** Connect your vacuum cleaner to its charger. Allow the battery to fully charge before its first use.



Image: A visual representation of the FLYLINKTECH V6 battery being inserted into a compatible Dyson V6 vacuum cleaner.



Image: A Dyson V6 vacuum cleaner connected to its charging dock, illustrating the charging process for the replacement battery.

## OPERATING INSTRUCTIONS

---

The FLYLINKTECH V6 replacement battery operates identically to the original Dyson battery. Simply press the power trigger to start and release to stop. For optimal battery life and performance, consider the following:

- **Standard Mode:** For everyday cleaning tasks, using the standard power mode is recommended to maximize operating time.
- **MAX Mode:** The MAX power mode provides increased suction for tougher cleaning but will significantly shorten the battery's run time. Use this mode only when necessary.
- **Charging:** Always ensure the battery is fully charged before extensive use.



Image: A Dyson V6 vacuum cleaner in active use, demonstrating the battery's integration and function during operation.

## MAINTENANCE

Proper maintenance will extend the life of your battery and vacuum cleaner.

- **Battery Cooling:** Do not charge the battery immediately after it has been depleted, especially after using MAX mode. Allow the battery to cool down for 10 to 20 minutes before charging. This is crucial for battery longevity.
- **Filter Cleaning:** The included V6 replacement pre-filters are washable and reusable. Regularly clean the filters according to your vacuum cleaner's instructions to maintain optimal suction and prevent strain on the

battery.

- **Storage:** If storing the vacuum for an extended period, ensure the battery is partially charged (around 50%) and store it in a cool, dry place.

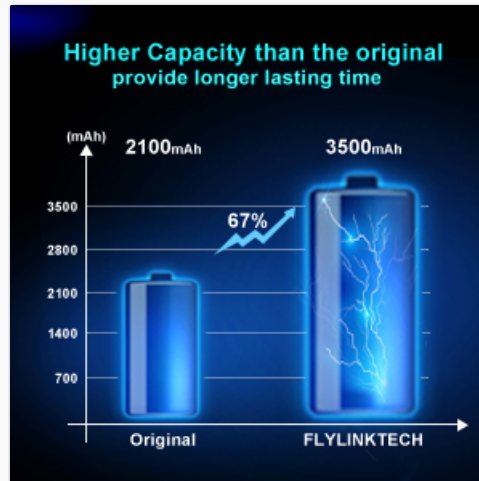


Image: A Dyson V6 pre-filter being rinsed under running water, illustrating the recommended cleaning process.

## TROUBLESHOOTING

If you encounter issues with your FLYLINKTECH V6 replacement battery, refer to the following common solutions:

Problem	Possible Cause	Solution
Battery not charging or vacuum not powering on.	Battery not properly installed; charger not connected; battery too hot/cold.	Ensure battery is securely installed. Check charger connection. Allow battery to cool down (10-20 minutes) if recently used, or warm up if in a cold environment.
Flashing yellow light on battery/vacuum.	Battery is too hot or too cold.	Do not attempt to charge or use the battery immediately. Allow it to reach room temperature (10-20 minutes) before proceeding.
Reduced run time.	MAX mode used excessively; dirty filter; battery not fully charged.	Use standard mode for daily cleaning. Clean or replace filters regularly. Ensure battery is fully charged before use.

## PRODUCT SPECIFICATIONS

- **Brand:** FLYLINKTECH
- **Model Number:** CET224
- **Battery Type:** Lithium-ion
- **Battery Capacity:** 3500 mAh
- **Voltage:** 21.6 Volts
- **Reusability:** Rechargeable
- **Recommended Use:** Vacuum Cleaner
- **Item Weight:** 460 Grams
- **Item Dimensions:** 13 x 8.8 x 1 cm
- **Compatible Models:** Dyson V6 SV03, SV04, SV05, SV06, SV07, SV09, DC58, DC59, DC61, DC62, DC72,

DC74 series handheld vacuum cleaners.



Image: An internal diagram illustrating the lithium-ion battery cells and the integrated smart protection board within the battery pack.

## WARRANTY AND SUPPORT

FLYLINKTECH provides a 1-year warranty and a 30-day refund policy for this product. We are committed to friendly customer service.

For any questions, concerns, or support needs, please contact us through:

- Amazon message system
- Email: [support@flylinktech.hk](mailto:support@flylinktech.hk)

We will endeavor to resolve any issues promptly.